



 
SM-EZ series

Install Instructions For:
SM82-EZ

1.435.647.9555 | 800.647.TUBE | www.soundtube.com

Box contents


- 1 Speaker
- 1 Terminal weather boot
- 1 Mounting bracket
- 1 Safety cable
- 1 Euroblock connector
- 1 5 mm Allen hex key
- 1 Paint mask

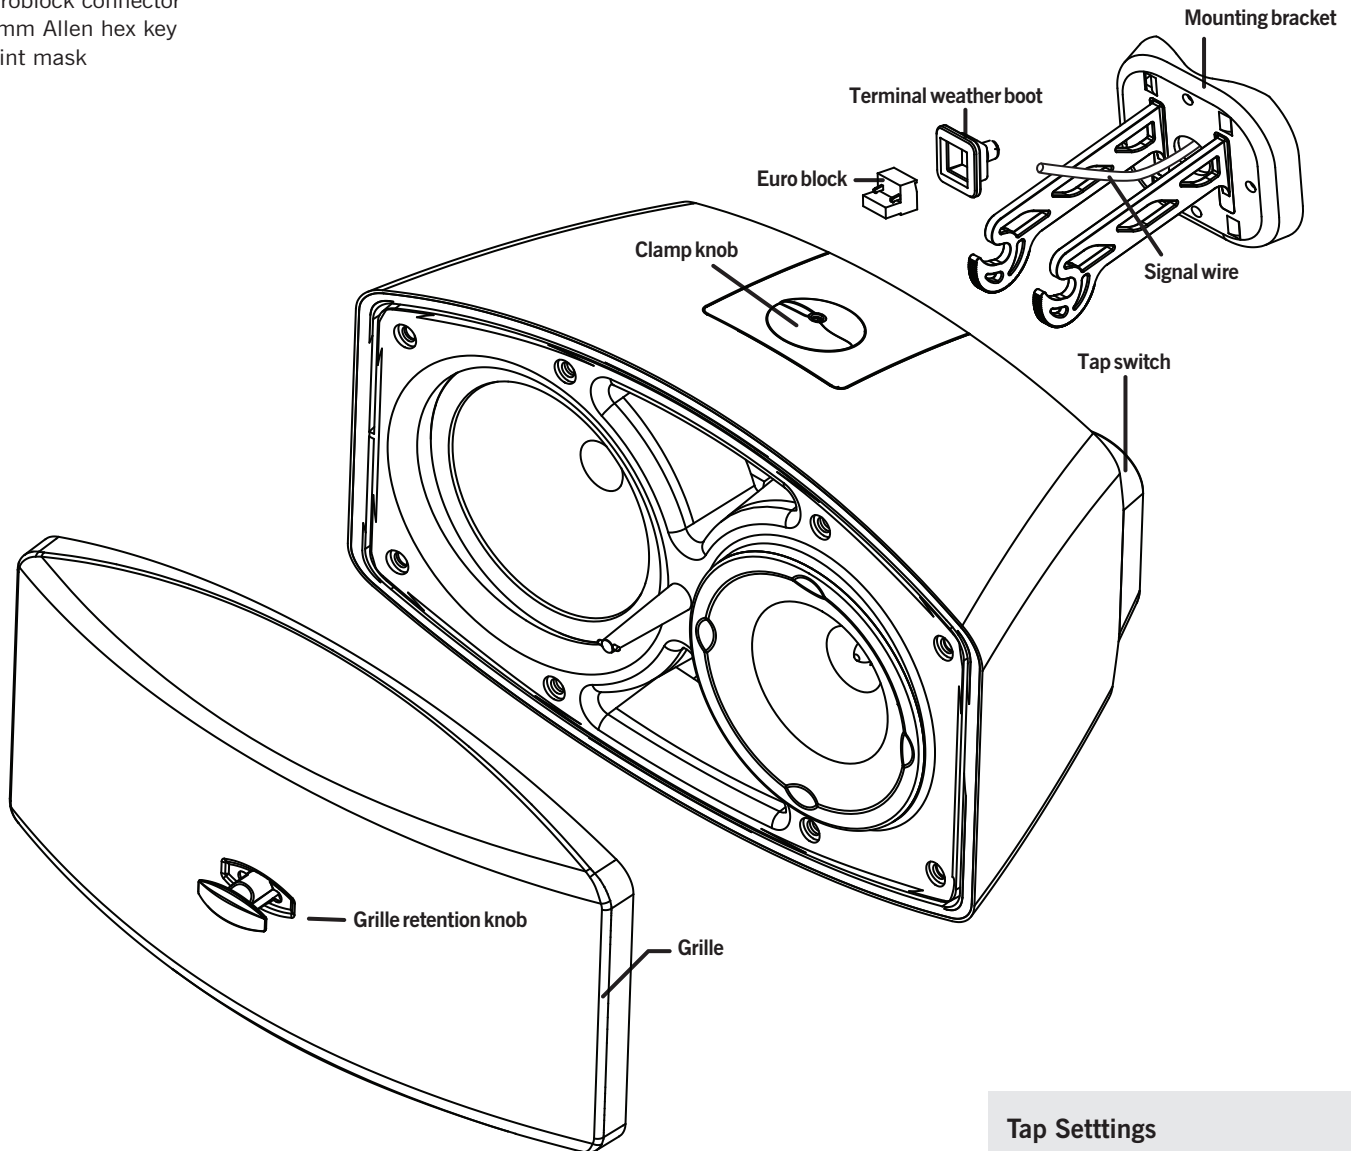


Tap Settings			
	25v	70v	100v
6	direct	direct	direct
5	8w	64w	X
4	4w	32w	64w
3	2w	16w	32w
2	1w	8w	16w
1	0.5w	4w	8w

© 2009 SoundTube Entertainment, Inc. All rights reserved. PN INS-SM82 Rev 09.21.09


<p>Warning</p> <p>SoundTube speakers must be installed by a professional audio installer/contractor. For safety and for optimum audio performance, installer must follow all directions issued by SoundTube Entertainment.</p>	<p>Warning</p> <p>Do not spec or install speaker near support beam, ventilation duct or other structure that may interfere with speaker function or dispersion.</p>
---	--

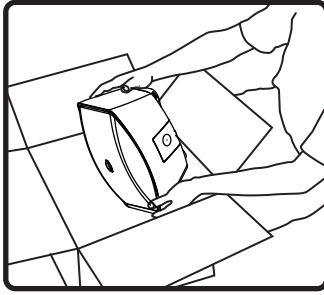 

 
1. Unpack speaker and mounting hardware.

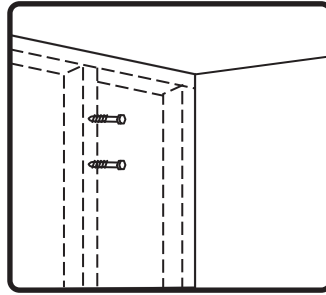

 
2. Choose a secure mounting surface with sufficient strength to reliably hold the speaker. Mounting bracket accommodates screwing, through-bolting and strapping installation options.

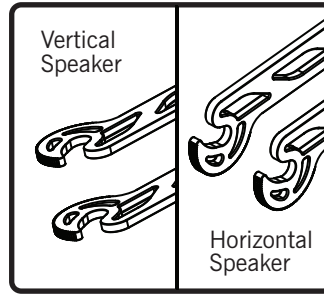

 
3. For proper bracket and plate orientation, pay special attention to the prongs on the bracket arm and ensure that they point toward the direction of the desired speaker position.

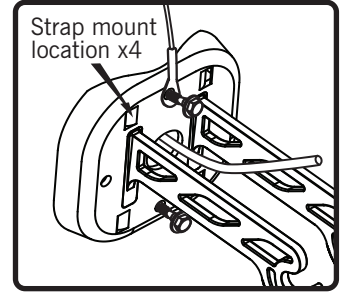

 
4. Thread safety cable (included) through mounting screw and securely fasten mounting plate to surface (user must supply fasteners). Mounting bracket may also be strap-mounted to pole or appropriate anchor point. **The max. strap width is 0.5 in / 12.7 mm.**

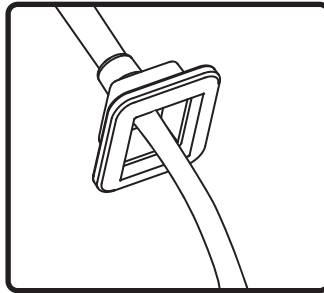

 
5. Slip terminal weather boot over signal wire. For environmental applications, put sealant around nipple and base when installation is complete.

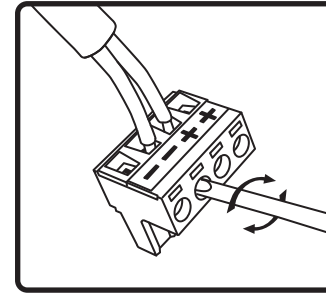

 
6. Connect signal wire to four-pin Euroblock plug. Use inside positive and negative inputs for either voice coil or distributed systems. For daisy chaining, use outside positive and negative terminals. Tighten unused terminal screws.

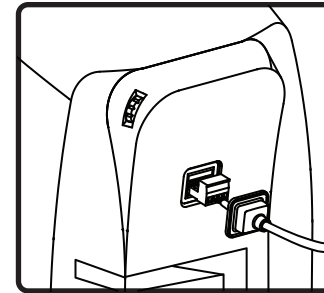

 
7. Insert four-pin Euroblock jack on rear of speaker. Connectors are keyed for polarity.

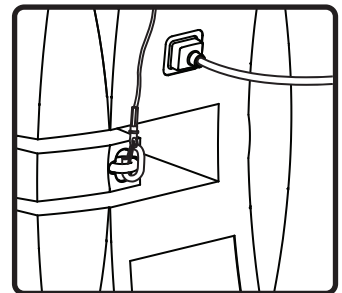

 
8. Clip snap link safety cable to eyebolt on back of cabinet.

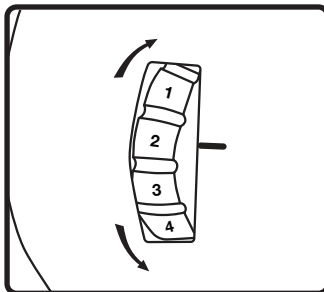

 
9. Select the desired setting on the rear-mounted tap switch. Use table on page 1 to choose appropriate tap number based on system voltage, and desired power draw.

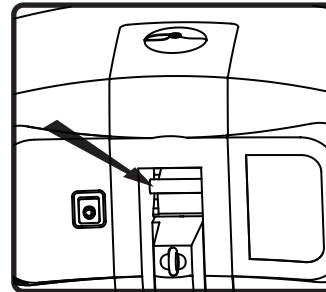

 10a. When mounting the speaker, ensure that the mounting rod in the speaker securely engages with the mounting prongs on the bracket arm.

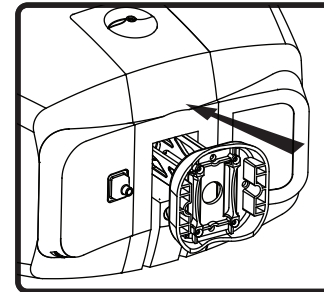

 10b. When properly inserted, bracket arm prongs will be fully engaged with the mounting rod in the speaker cabinet.

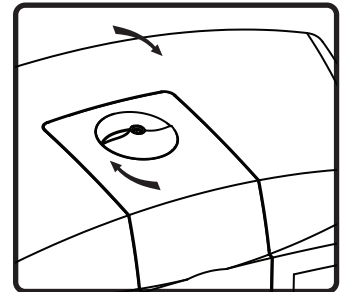

11. Position speaker at the desired angle and secure with the clamp knob. As a security feature, an included 5 mm Allen hex key is required for loosening the clamp knob and readjusting the speaker position angle.

12. Done!