

**Kramer Electronics, Ltd.**



# **USER MANUAL**

**Model:**

**104B**

*1:4 Microphone DA*

## Contents

<b>1</b>	<b>Introduction</b>	<b>1</b>
<b>2</b>	<b>Getting Started</b>	<b>1</b>
2.1	Quick Start	1
<b>3</b>	<b>Overview</b>	<b>3</b>
<b>4</b>	<b>Your 104B 1:4 Microphone DA</b>	<b>4</b>
<b>5</b>	<b>Using the 104B 1:4 Microphone DA</b>	<b>5</b>
<b>6</b>	<b>Technical Specifications</b>	<b>6</b>

## Figures

Figure 1:	104B 1:4 Microphone DA	4
Figure 2:	Connecting the 104B 1:4 Microphone DA	5

## Tables

Table 1:	Features and Functions of the 104B 1:4 Microphone DA	4
Table 2:	Technical Specifications of the 104B 1:4 Microphone DA	6

## 1 Introduction

Welcome to Kramer Electronics (since 1981): a world of unique, creative and affordable solutions to the infinite range of problems that confront the video, audio and presentation professional on a daily basis. In recent years, we have redesigned and upgraded most of our line, making the best even better! Our 500-plus different models now appear in 8 Groups<sup>1</sup>, which are clearly defined by function.

Congratulations on purchasing your Kramer MultiTOOLS® **104B 1:4 Microphone DA**. This product is ideal for:

- Rental and staging applications
- Audio mixing

The package includes the following items:

- **104B 1:4 Microphone DA**
- Power adapter (12V DC Input)
- This user manual<sup>2</sup>

## 2 Getting Started

We recommend that you:

- Unpack the equipment carefully and save the original box and packaging materials for possible future shipment
- Review the contents of this user manual
- Use Kramer high performance high resolution cables<sup>3</sup>

### 2.1 Quick Start

This Quick start chart summarizes the basic steps when connecting a **104B**:

---


1 GROUP 1: Distribution Amplifiers; GROUP 2: Video and Audio Switchers, Matrix Switchers and Controllers; GROUP 3: Video, Audio, VGA/XGA Processors; GROUP 4: Interfaces and Sync Processors; GROUP 5: Twisted Pair Interfaces; GROUP 6: Accessories and Rack Adapters; GROUP 7: Scan Converters and Scalers; and GROUP 8: Cables and Connectors

2 Download up-to-date Kramer user manuals from the Internet at this URL: <http://www.kramerelectronics.com>

3 The complete list of Kramer cables is on our Web site at <http://www.kramerelectronics.com>


**Step 1: Connect the input - see section 5**

**Connect the microphone Input**

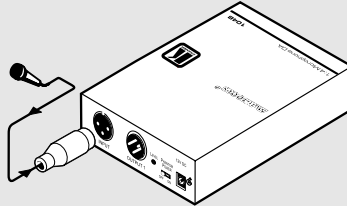

**Step 2: Connect the outputs - see section 5**


**Connect the Outputs**

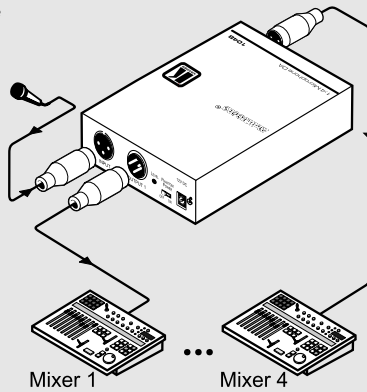

**Step 3: Connect the power**

**If required:**

 - Adjust the audio signal level
- Apply phantom power



### 3 Overview

The high performance **104B 1:4 Microphone DA** accepts an input from a microphone and distributes that signal simultaneously to four outputs. In particular, the **104B** features:

- Audio level control
- A switch for applying phantom power<sup>1</sup>

To achieve the best performance:

- Connect only good quality connection cables, thus avoiding interference, deterioration in signal quality due to poor matching, and elevated noise-levels (often associated with low quality cables)
- Avoid interference from neighboring electrical appliances and position your Kramer **104B** away from moisture, excessive sunlight and dust



**Caution** – No operator-serviceable parts inside unit.

**Warning** – Use only the Kramer Electronics input power wall adapter that is provided with this unit<sup>2</sup>.

**Warning** – Disconnect power and unplug unit from wall before installing or removing device or servicing unit.

<sup>1</sup> This is for applications that require typical condenser microphones to be connected directly to the 104B. To prevent unnecessary damage, apply phantom power to the Mic only when required.

<sup>2</sup> For example: model number AD2512C, part number 2535-000251

## 4 Your 104B 1:4 Microphone DA

Figure 1 and Table 1 define the **104B 1:4 Microphone DA**:

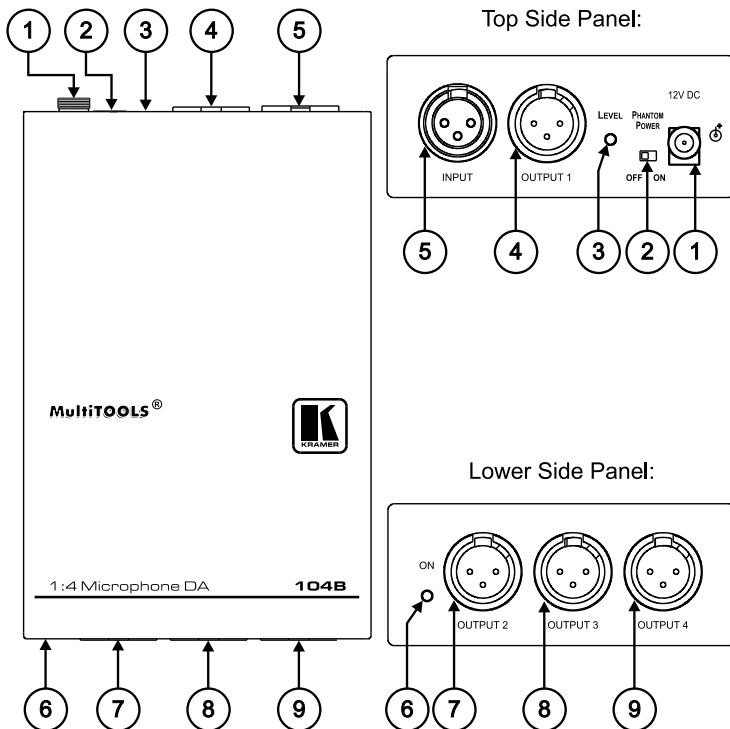


Figure 1: 104B 1:4 Microphone DA

Table 1: Features and Functions of the 104B 1:4 Microphone DA

#	Feature	Function
1	12V DC	+12V DC connector for powering the unit
2	PHANTOM POWER Switch	Move to the right to apply phantom power
3	LEVEL Trimmer	Adjusts <sup>1</sup> the audio output level
4	OUTPUT 1 XLR Male Connector	Connects to audio acceptor <sup>2</sup> 1
5	INPUT XLR Female Connector	Connects to the microphone
6	ON LED	Illuminates when receiving power
7	OUTPUT 2 XLR Male Connector	Connects to audio acceptor <sup>2</sup> 2
8	OUTPUT 3 XLR Male Connector	Connects to audio acceptor <sup>2</sup> 3
9	OUTPUT 4 XLR Male Connector	Connects to audio acceptor <sup>2</sup> 4

<sup>1</sup> Insert a screwdriver into the small hole and carefully rotate it to adjust the audio level

<sup>2</sup> A mixer

## 5 Using the 104B 1:4 Microphone DA

To connect your **104B 1:4 Microphone DA**, as the example in Figure 2 illustrates, do the following:

1. Connect a microphone to the INPUT XLR connector.
2. Connect up to<sup>1</sup> 4 OUTPUT XLR connectors to the audio acceptors (for example, mixers).
3. Connect the 12V DC power adapter to the power socket and connect the adapter to the mains electricity (not shown in Figure 2).
4. If required, adjust the audio signal level.

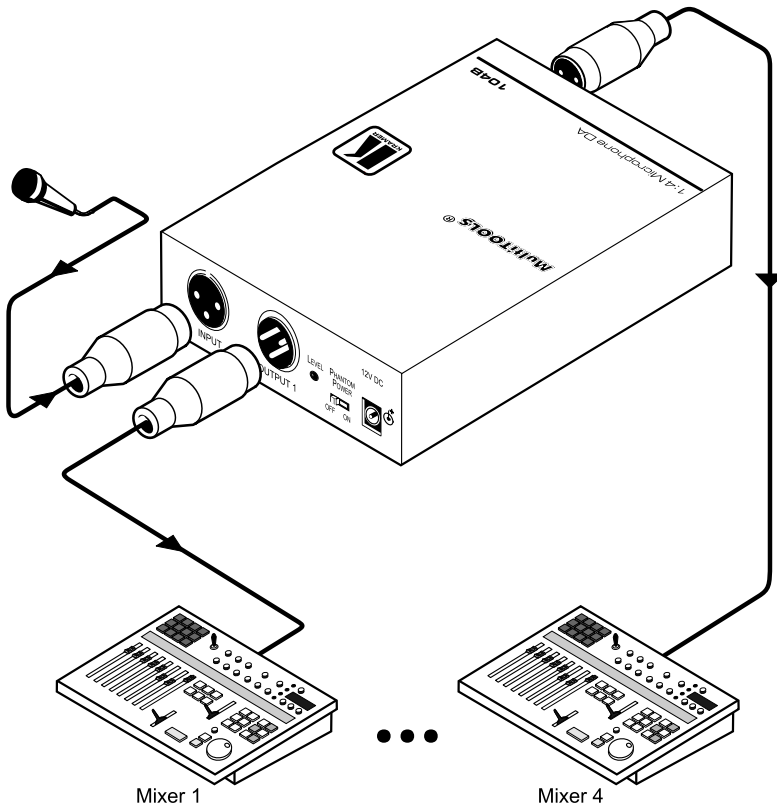


Figure 2: Connecting the 104B 1:4 Microphone DA

<sup>1</sup> You do not have to connect all the outputs

## 6 Technical Specifications

*Table 2: Technical Specifications<sup>1</sup> of the 104B 1:4 Microphone DA*

INPUT:	1 microphone mono balanced on an XLR female connector
OUTPUTS:	4 microphone mono balanced on XLR male connectors
MAX. OUTPUT LEVEL:	5.5Vpp
BANDWIDTH (-3dB):	>100kHz
S/N RATIO:	86dB
CONTROLS:	-3.2dB to +6.7dB level
COUPLING:	DC
AUDIO THD + NOISE:	0.13%
AUDIO 2nd HARMONIC:	0.005%
POWER SOURCE:	12 VDC, 193mA
DIMENSIONS:	16.2cm x 4.36cm x 10.7cm (6.36" x 1.72" x 4.2") W, D, H
WEIGHT:	0.15kg. (0.55lbs.) approx.
ACCESSORIES:	Power supply

---

<sup>1</sup> Specifications are subject to change without notice



---

## LIMITED WARRANTY

Kramer Electronics (hereafter *Kramer*) warrants this product free from defects in material and workmanship under the following terms

### HOW LONG IS THE WARRANTY

Labor and parts are warranted for seven years from the date of the first customer purchase

### WHO IS PROTECTED?

Only the first purchase customer may enforce this warranty

### WHAT IS COVERED AND WHAT IS NOT COVERED

Except as below, this warranty covers all defects in material or workmanship in this product. The following are not covered by the warranty:

- 1 Any product which is not distributed by Kramer, or which is not purchased from an authorized Kramer dealer. If you are uncertain as to whether a dealer is authorized, please contact Kramer at one of the agents listed in the web site [www.kramerelectronics.com](http://www.kramerelectronics.com)
- 2 Any product, on which the serial number has been defaced, modified or removed
- 3 Damage, deterioration or malfunction resulting from:
  - i) Accident, misuse, abuse, neglect, fire, water, lightning or other acts of nature
  - ii) Product modification, or failure to follow instructions supplied with the product
  - iii) Repair or attempted repair by anyone not authorized by Kramer
  - iv) Any shipment of the product (claims must be presented to the carrier)
  - v) Removal or installation of the product
  - vi) Any other cause, which does not relate to a product defect
  - vii) Cartons, equipment enclosures, cables or accessories used in conjunction with the product

### WHAT WE WILL PAY FOR AND WHAT WE WILL NOT PAY FOR

We will pay labor and material expenses for covered items. We will not pay for the following:

- 1 Removal or installations charges
- 2 Costs of initial technical adjustments (set-up), including adjustment of user controls or programming. These costs are the responsibility of the Kramer dealer from whom the product was purchased
- 3 Shipping charges

### HOW YOU CAN GET WARRANTY SERVICE

- 1 To obtain service on your product, you must take or ship it prepaid to any authorized Kramer service center
- 2 Whenever warranty service is required, the original dated invoice (or a copy) must be presented as proof of warranty coverage, and should be included in any shipment of the product. Please also include in any mailing a contact name, company, address, and a description of the problem(s)
- 3 For the name of the nearest Kramer authorized service center, consult your authorized dealer

### LIMITATION OF IMPLIED WARRANTIES

All implied warranties, including warranties of merchantability and fitness for a particular purpose, are limited in duration to the length of this warranty

### EXCLUSION OF DAMAGES

The liability of Kramer for any effective products is limited to the repair or replacement of the product at our option. Kramer shall not be liable for:

- 1 Damage to other property caused by defects in this product, damages based upon inconvenience, loss of use of the product, loss of time, commercial loss; or
- 2 Any other damages, whether incidental, consequential or otherwise. Some countries may not allow limitations on how long an implied warranty lasts and/or do not allow the exclusion or limitation of incidental or consequential damages, so the above limitations and exclusions may not apply to you

This warranty gives you specific legal rights, and you may also have other rights, which vary from place to place

**NOTE:** All products returned to Kramer for service must have prior approval. This may be obtained from your dealer. This equipment has been tested to determine compliance with the requirements of:

- EN-50081: "Electromagnetic compatibility (EMC);  
generic emission standard  
Part 1: Residential, commercial and light industry"
- EN-50082: "Electromagnetic compatibility (EMC) generic immunity standard  
Part 1: Residential, commercial and light industry environment"
- CFR-47: FCC Rules and Regulations:  
Part 15: "Radio frequency devices  
Subpart B – Unintentional radiators"

### CAUTION!

- ☒ Servicing the machines can only be done by an authorized Kramer technician. Any user who makes changes or modifications to the unit without the expressed approval of the manufacturer will void user authority to operate the equipment
- ☒ Use the supplied DC power supply to feed power to the machine
- ☒ Please use recommended interconnection cables to connect the machine to other components





---

**For the latest information on our products and a list of Kramer distributors, visit our Web site: [www.kramerelectronics.com](http://www.kramerelectronics.com), where updates to this user manual may be found. We welcome your questions, comments and feedback.**



**Caution**

**Safety Warning:**

Disconnect the unit from the power supply before opening/servicing.



---

**Kramer Electronics, Ltd.**

Web site: [www.kramerelectronics.com](http://www.kramerelectronics.com)

E-mail: [info@kramerel.com](mailto:info@kramerel.com)

P/N: 2900-000211 REV 1