2. Finish installing wall.

3. Use RotoZip or other tool

to cut hole.

IW31-EZ


Install Instructions For: IW31-EZ speaker

Installation aid/paint mask

SoundTube speakers must be installed by a professional audio installer/contractor. For safety and for optimum audio performance, installer must follow all directions issued by SoundTube Entertainment.

Box contents

1 Speaker

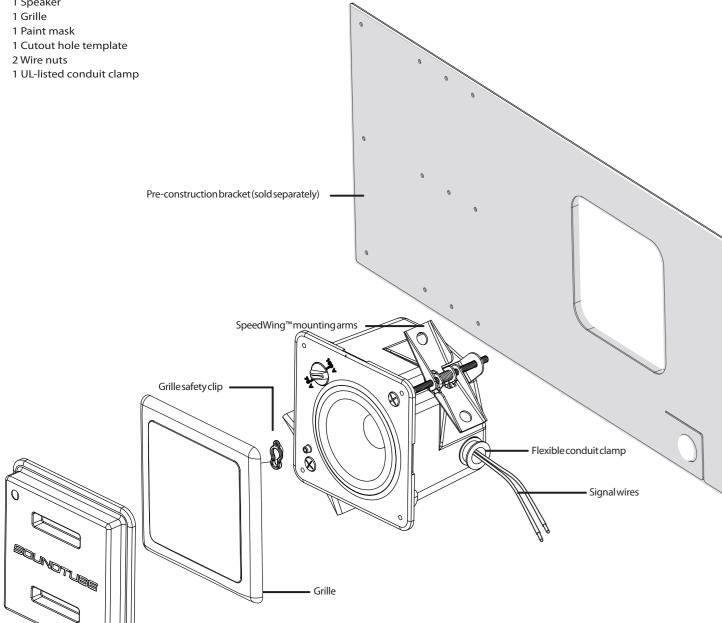

©2011 SoundTube Entertainment, Inc. All rights reserved. PN INS-IW31-EZ Rev09.12.11

 





Do not spec or install speaker near support beam, ventilation duct or other structure that may interfere with speaker function or dispersion.




Installation Instructions For: IW31-EZ speaker




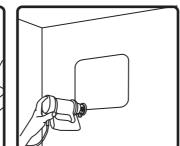


1. Unpack speaker. Leave paint mask in place until after speaker is installed or painting is complete.

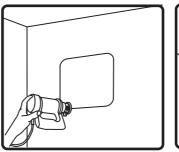


2. Use provided cutout template to mark hole. Use RotoZip or other tool to cut hole in wall. Hole size: 4.25 in. (108 mm) tall x 4.25 in. (108 mm) wide.

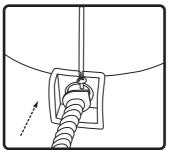

3. Feed speaker wires through conduit clamp and connect with wire nuts. Push wire nuts into backcan and affix conduit clamp.

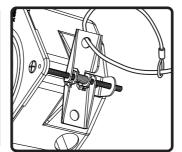

4. If required, attach seismic restraint system to the hole in the metal clamping arm, then to reinforced structure (safety cable not included).

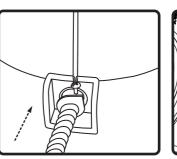


1. Nail or screw bracket to


IW31-EZ

studs.

5. Feed speaker wires through conduit clamp and connect with wire nuts. Push wire nuts into backcan and affix conduit clamp.

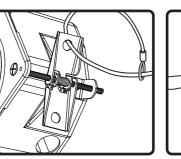

6. If required, attach seismic restraint system to the hole in the metal clamping arm, then to reinforced structure (safety cable not included).

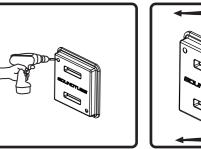

7. Insert speaker in hole. Tighten the two clamping screws. DO NOT OVERTIGHTEN



9-12 when painting is


complete.


4. Unpack speaker. Leave

paint mask in place until


painting is complete.

after speaker is installed or

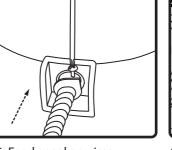


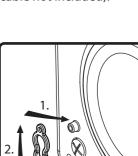


9. Adjust tap switch to proper setting. Switch is preset to the highest setting in the 70.7-volt mode.

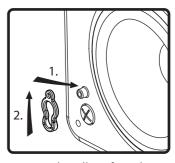

10. Attach grille safety clip by placing the large end of the clip over snap-fit post (1), then sliding clip until small end snaps into place around post (2).

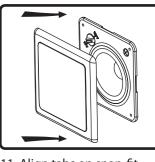


11. Align tabs on snap-fit grille with slots in baffle, gently press grille into place.

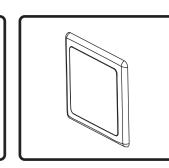

12. Done!




5. Insert speaker in hole. Tighten the two clamping screws. DO NOT OVERTIGHTEN

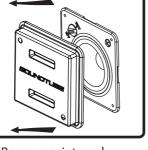


6. Remove paint mask unless painting is required. In that case, follow steps 7-10 when painting is complete.



7. Adjust tap switch to proper setting. Switch is preset to the highest setting in the 70.7-volt mode.

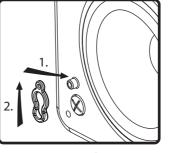

8. Attach grille safety clip by placing the large end of the clip over snap-fit post (1), then sliding clip until small end snaps into place around post (2).

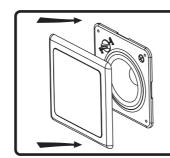

9. Align tabs on snap-fit grille 10. Done! with slots in baffle, gently press grille into place.

