


Kramer Electronics, Ltd.

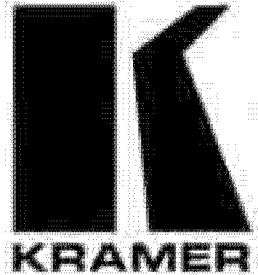

USER MANUAL

Model:

VS-41HD

4x1 HD/SD-SDI Switcher / DA

Contents

1	Introduction	1
2	Getting Started	1
2.1	Quick Start	1
3	Overview	3
4	Your VS-41HD 4x1 HD/SD-SDI Switcher / DA	3
5	Installing on a Rack	6
6	Connecting Your VS-41HD 4x1 HD/SD-SDI Switcher / DA	7
6.1	Dipswitch Settings	8
6.1.1	Setting the Machine ID Dipswitches	9
6.2	Controlling via RS-232 (for example, using a PC)	9
6.3	Controlling via the RS-485 Port	10
6.4	Controlling via ETHERNET	11
6.4.1	Connecting the ETHERNET Port directly to a PC (Crossover Cable)	11
6.4.2	Connecting the ETHERNET Port via a Network Hub (Straight-Through Cable)	13
6.4.3	Configuring the Ethernet Port	13
6.5	Controlling via the C.C REMOTE Connector	13
7	Operating the VS-41HD	14
7.1	Locking the Front Panel	14
8	Technical Specifications	15
9	Kramer Protocol 2000	16

Figures

Figure 1:	VS-41HD 4x1 HD/SD-SDI Switcher / DA	4
Figure 2:	Connecting the VS-41HD 4x1 HD/SD-SDI Switcher / DA	8
Figure 3:	VS-41HD SETUP Dipswitches	8
Figure 4:	Connecting a PC without using a Null-modem Adapter	9
Figure 5:	Controlling via RS-485 (for example, using an RC-3000)	10
Figure 6:	RJ-45 PINOUT	11
Figure 7:	Local Area Connection Properties Window	12
Figure 8:	Internet Protocol (TCP/IP) Properties Window	12
Figure 9:	Using the C.C REMOTE Connector	13

Tables

Table 1: Front Panel VS-41HD 4x1 HD/SD-SDI Switcher / DA	5
Table 2: Rear Panel VS-41HD 4x1 HD/SD-SDI Switcher / DA	5
Table 3: Machine # Dipswitch Settings	9
Table 4: Crossover Cable RJ-45 PINOUT	11
Table 5: Straight-through Cable RJ-45 PINOUT	13
Table 6: Technical Specifications of the VS-41HD 4x1 HD/SD-SDI Switcher / DA	15
Table 7: Protocol Definitions	16
Table 8: Instruction Codes for Protocol 2000	17

1 Introduction

Welcome to Kramer Electronics (since 1981): a world of unique, creative and affordable solutions to the infinite range of problems that confront the video, audio and presentation professional on a daily basis. In recent years, we have redesigned and upgraded most of our line, making the best even better! Our 500-plus different models now appear in 8 Groups¹, which are clearly defined by function.

Congratulations on purchasing your Kramer **VS-41HD** *4x1 HD/SD-SDI Switcher / DA*. This product is ideal for:

- Professional broadcasting and production studios
- Post production

The package includes the following items:

- **VS-41HD** *4x1 HD/SD-SDI Switcher / DA*
- Null-modem adapter and power cord
- This user manual²

2 Getting Started

We recommend that you:

- Unpack the equipment carefully and save the original box and packaging materials for possible future shipment
- Review the contents of this user manual
- Use Kramer high performance high resolution cables³

2.1 Quick Start

This quick start chart summarizes the basic setup and operation steps.


1 GROUP 1: Distribution Amplifiers; GROUP 2: Video and Audio Switchers, Matrix Switchers and Controllers; GROUP 3: Video, Audio, VGA/XGA Processors; GROUP 4: Interfaces and Sync Processors; GROUP 5: Twisted Pair Interfaces; GROUP 6: Accessories and Rack Adapters; GROUP 7: Scan Converters and Sealers; and GROUP 8: Cables and Connectors

2 Download up-to-date Kramer user manuals from the Internet at this URL: <http://www.kramerelectronics.com>


3 The complete list of Kramer cables is on our Web site at <http://www.kramerelectronics.com>

Step 1: Mount the machine - see section 5

Mount the machine in a rack or stick the 4 rubber feet to the underside




Step 2: Connect the inputs and outputs - see section 6

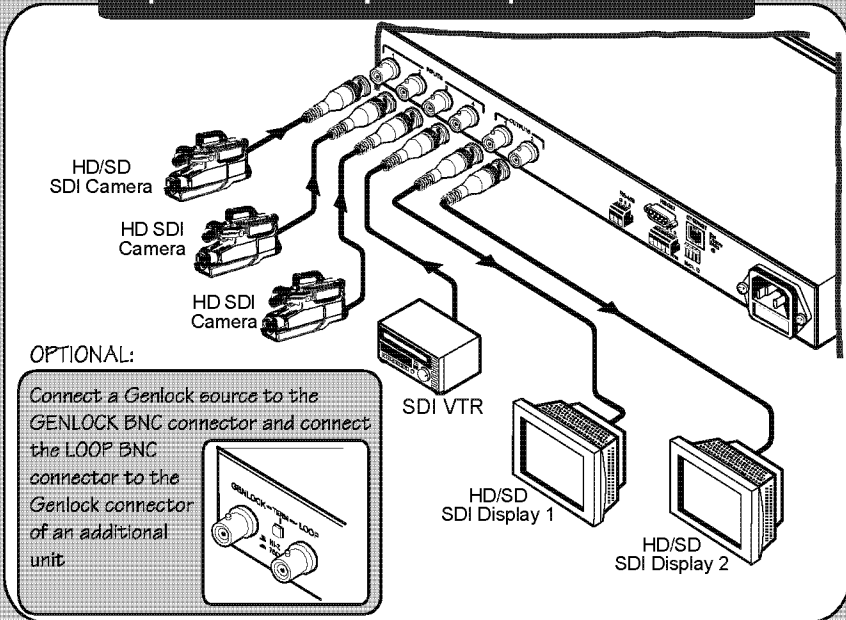

Step 3: Set the machine - see section 6

SET THE DIPSWITCHES


Set the machine ID number



CONNECT THE CONTACT CLOSURE REMOTE

Switch between inputs by connecting the appropriate input number PIN (1, 2, 3 or 4) to the G (Ground) PIN

DO NOT connect more than one PIN to the G PIN at the same time

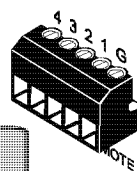

Step 4: Turn the power ON

Step 5: Operate the machine

Operate via the front panel buttons, IR remote control, RS-232, RS-485, remote control contact closure and ETHERNET

3 Overview

The Kramer **VS-41HD** is a true 4x1 switcher for standard definition¹ / high definition² SDI signals, that lets you distribute any one of the four inputs to two identical outputs. In particular, the **VS-41HD** features:

- Input and output signals on BNC connectors
- Selector buttons that automatically light up in different colors—green, when the **VS-41HD** detects a ‘standard definition’ signal, or blue, when it detects a ‘high definition’ signal
- Reclocking and equalization on each input
- Distribution of digital information (embedded audio, Teletext, time code and so on) during the vertical interval period
- Switching according to the Bi-level or Tri-level Genlock input according to SMPTE RP-168
- Front panel locking
- An OFF button to disconnect the output

The **VS-41HD**, which is housed in a 19" 1U rack mountable enclosure, and is fed from a 100-240 VAC universal switching power supply, can be controlled via the:

- Front panel buttons
- Infra-red remote control transmitter
- Remotely, by RS-232 or RS-485 serial commands transmitted by a touch screen system, PC, or other serial controller
- ETHERNET
- Remote contact closure for forced operation

To achieve the best performance:

- Connect only good quality connection cables, thus avoiding interference, deterioration in signal quality due to poor matching, and elevated noise levels (often associated with low quality cables)
- Avoid interference from neighboring electrical appliances that may adversely influence signal quality and position your Kramer **VS-41HD** away from moisture, excessive sunlight and dust

4 Your VS-41HD 4x1 HD/SD-SDI Switcher / DA

Figure 1, Table 1, and Table 2 define the **VS-41HD 4x1 HD/SD-SDI Switcher / DA**.

¹ Standard Definition (SD) means an NTSC or PAL compatible video format, consisting of 480 (for NTSC) or 576 (for PAL) lines of interlaced video

² High Definition (HD) in this case includes 480p, 576p, 720p and 1080i (all @ 50/60Hz); 1080p @ 24/25Hz; as well as the 1/1.0001 refresh rates

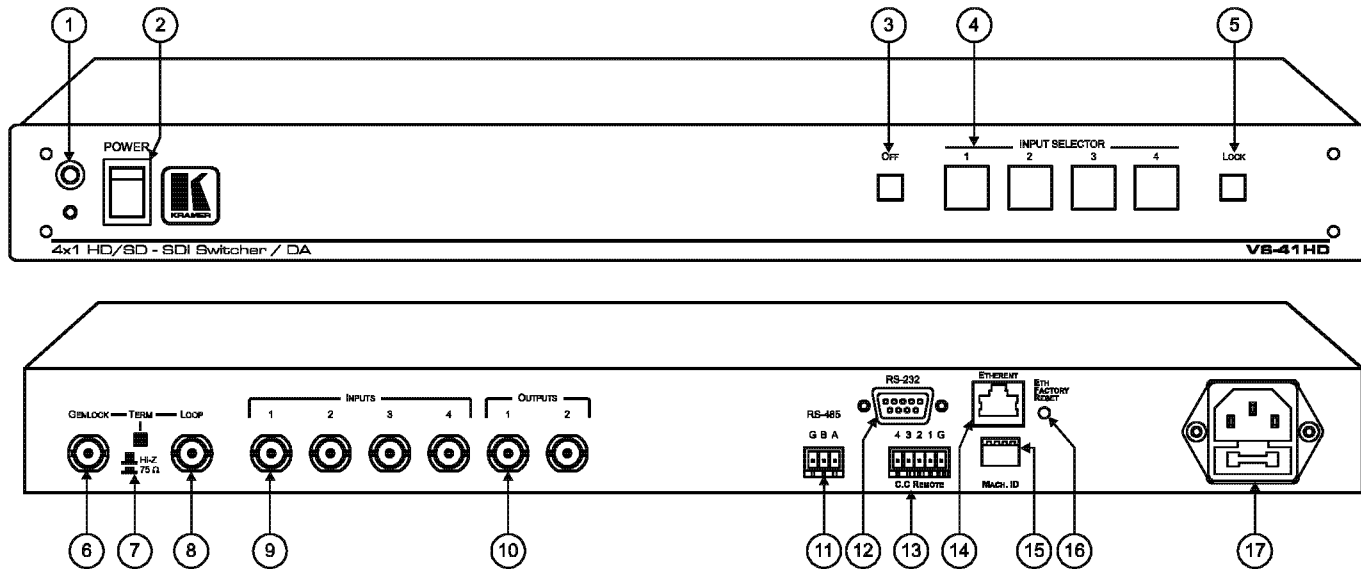


Figure 1: VS-41HD 4x1 HD/SD-SDI Switcher / DA

Table 1: Front Panel VS-41HD 4x1 HD/SD-SDI Switcher / DA

#	Feature	Function
1	IR Receiver	The red LED is illuminated when receiving signals from the Infra-red remote control transmitter
2	POWER Switch	Illuminated switch for turning the unit ON or OFF
3	OFF Button	Press to disconnect the outputs
4	INPUT SELECTOR Buttons	Select the input to switch to the output
5	LOCK Button	Disengages the front panel buttons

Table 2: Rear Panel VS-41HD 4x1 HD/SD-SDI Switcher / DA

#	Feature	Function
6	GENLOCK BNC Connector	Connect to the Genlock source
7	TERM Button	Press to terminate the Genlock source (75Ω) or release for looping ¹
8	LOOP BNC Connector	Connect to the GENLOCK connector of the next unit in the line
9	INPUTS BNC Connectors	Connect to the serial digital video sources (from 1 to 4)
10	OUTPUTS BNC Connectors	Connect the two identical outputs to serial digital video acceptors (1 and 2)
11	RS-485 Detachable Terminal Block Port	Pin G is for the Ground connection ² ; pins B (-) and A (+) are for RS-485
12	RS-232 DB 9F Port	Connects to the PC or the Remote Controller ³
13	C.C. REMOTE Terminal Block Connector	Connect to dry contact switches
14	ETHERNET Connector	Connects to the PC or other Serial Controller through computer networking
15	MACH. ID Dipswitches	Dipswitches for setting the machine ID number
16	ETH FACTORY RESET Button	Press to reset to factory default definitions ⁴ : IP number – 192.168.1.39 Mask – 255.255.255.0 Gateway – 192.168.1.1
17	Power Connector with Fuse	AC connector enabling power supply to the unit

1 Extending the input to another unit

2 The ground connection is sometimes connected to the shield of the RS-485 cable. In most applications, the ground is not connected

3 Via a null-modem connection

4 First disconnect the power cord and then connect it again while pressing the ETH Factory Reset button. The unit will power up and load its memory with the factory default definitions

5 Installing on a Rack

This section describes what to do before installing on a rack and how to rack mount.

Before Installing on a Rack

Before installing on a rack, be sure that the environment is within the recommended range:	
Operating temperature range	+5 to +45 Deg. Centigrade
Operating humidity range	5 to 65% RHL, non-condensing
Storage temperature range	-20 to +70 Deg. Centigrade
Storage humidity range	5 to 95% RHL, non-condensing



CAUTION!!


When installing on a 19" rack, avoid hazards by taking care that:

- 1 It is located within the recommended environmental conditions, as the operating ambient temperature of a closed or multi unit rack assembly may exceed the room ambient temperature.
- 2 Once rack mounted, enough air will still flow around the machine.
- 3 The machine is placed straight in the correct horizontal position.
- 4 You do not overload the circuit(s). When connecting the machine to the supply circuit, overloading the circuits might have a detrimental effect on overcurrent protection and supply wiring. Refer to the appropriate nameplate ratings for information. For example, for fuse replacement, see the value printed on the product label.
- 5 The machine is earthed (grounded) in a reliable way and is connected only to an electricity socket with grounding. Pay particular attention to situations where electricity is supplied indirectly (when the power cord is not plugged directly into the socket in the wall), for example, when using an extension cable or a power strip, and that you use only the power cord that is supplied with the machine.

How to Rack Mount

To rack-mount a machine:

- 1 Attach both ear brackets to the machine. To do so, remove the screws from each side of the machine (3 on each side), and replace those screws through the ear brackets.

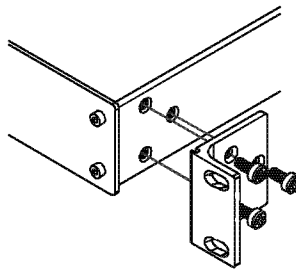

- 2 Place the ears of the machine against the rack rails, and insert the proper screws (not provided) through each of the four holes in the rack ears.

Note that:

- In some models, the front panel may feature built-in rack ears
- Detachable rack ears can be removed for desktop use
- Always mount the machine in the rack before you attach any cables or connect the machine to the power
- If you are using a Kramer rack adapter kit (for a machine that is not 19"), see the Rack Adapters user manual for installation instructions (you can download it at: <http://www.kramerelectronics.com>)

6 Connecting Your VS-41HD 4x1 HD/SD-SDI Switcher / DA

You can use your **VS-41HD** to switch one of the four standard definition / high definition SDI inputs to the two identical high definition / standard definition SDI outputs, as the illustration in Figure 2 shows.

To connect the **VS-41HD 4x1 HD/SD-SDI Switcher / DA**, as shown in the example in Figure 2, do the following¹:

1. Connect up to four SDI sources to the INPUTS BNC connectors:
 - An HD/SD SDI camera to INPUT 1
 - An HD SDI camera to INPUT 2
 - An HD SDI camera to INPUT 3
 - An SDI VTR to INPUT 4
2. Connect the SDI OUTPUT BNC connectors to up to² two SDI acceptors (for example, two HD/SD SDI displays).
3. Set the dipswitches (see section 6.1).
4. As an option³, connect:
 - A Genlock source to the GENLOCK BNC connector
 - The LOOP BNC connector to the GENLOCK connector of the next unit in the line, and release the TERM button for looping⁴
5. Connect a PC and/or controller (if required), to the:
 - RS-232 port (see section 6.2), and/or
 - RS-485 port (see section 6.3), and/or
 - ETHERNET connector (see section 6.4)
6. If required³, connect a remote dry contact switch (see section 6.5)
7. Connect the power cord⁵.

1 Switch OFF the power on each device before connecting it to your VS-41HD. After connecting your VS-41HD, switch on its power and then switch on the power on each device

2 When only one output is required, connect that output, and leave the other output unconnected

3 Not illustrated in Figure 2

4 Pushed in terminates the input. Release when the input extends to another unit

5 We recommend that you use only the power cord that is supplied with this machine


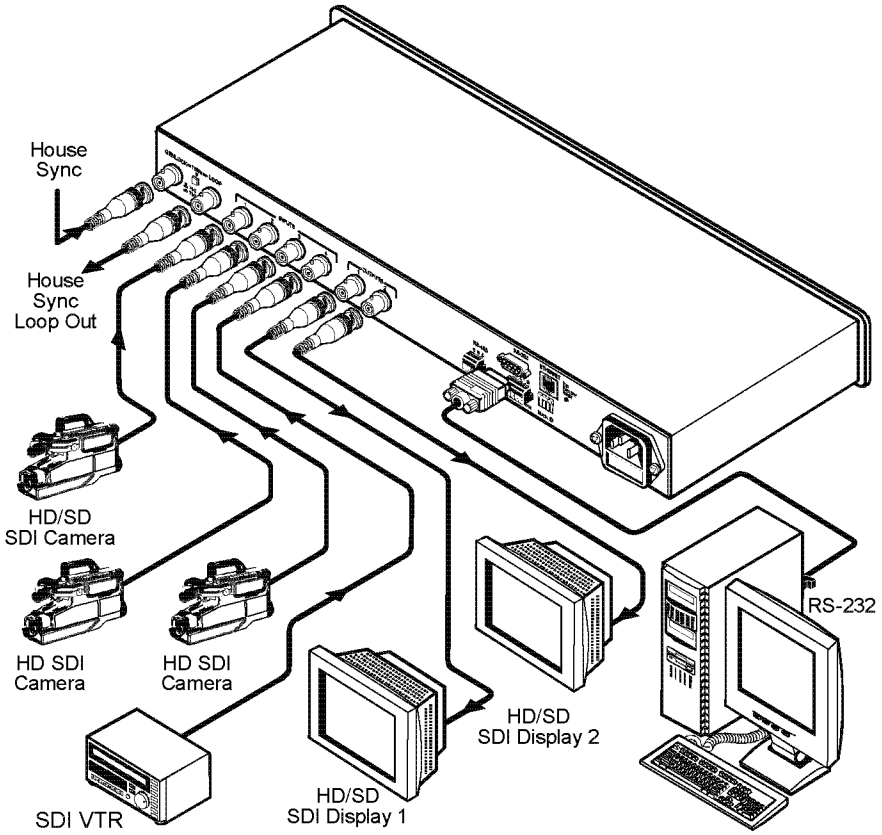


Figure 2: Connecting the VS-41HD 4x1 HD/SD-SDI Switcher / DA

6.1 Dipswitch Settings

By default, all dipswitches are set to OFF.

Figure 3 illustrates the VS-41HD dipswitches:

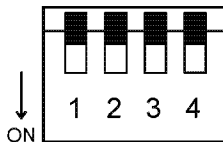

MACH. ID

Figure 3: VS-41HD SETUP Dipswitches

6.1.1 Setting the Machine ID Dipswitches

The Machine ID determines the position of a **VS-41HD** unit, specifying which **VS-41HD** unit is being controlled when several **VS-41HD** units connect to a PC or serial controller. Set the Machine number on a **VS-41HD** unit via MACH. ID DIPS 1, 2, 3 and 4, according to Table 3.

When using a standalone **VS-41HD** unit, set the Machine ID to 1. When connecting more than one **VS-41HD** unit, set the first machine (the Master) that is closest to the PC, as Machine ID 1 (dipswitches are set to OFF).

Table 3: Machine # Dipswitch Settings

Mach. #	DIP 1	DIP 2	DIP 3	DIP 4
1	OFF	OFF	OFF	OFF
2	OFF	OFF	OFF	ON
3	OFF	OFF	ON	OFF
4	OFF	OFF	ON	ON
5	OFF	ON	OFF	OFF
6	OFF	ON	OFF	ON
7	OFF	ON	ON	OFF
8	OFF	ON	ON	ON

6.2 Controlling via RS-232 (for example, using a PC)

To connect a PC to the **VS-41HD** unit, using the Null-modem adapter provided with the machine (recommended):

- Connect the RS-232 DB9 rear panel port on the **VS-41HD** unit to the Null-modem adapter and connect the Null-modem adapter with a 9-wire flat cable to the RS-232 DB9 port on your PC

To connect a PC to the **VS-41HD** unit, without using a Null-modem adapter:

- Connect the RS-232 DB9 port on your PC to the RS-232 DB9 rear panel port on the **VS-41HD** unit, as Figure 4 illustrates

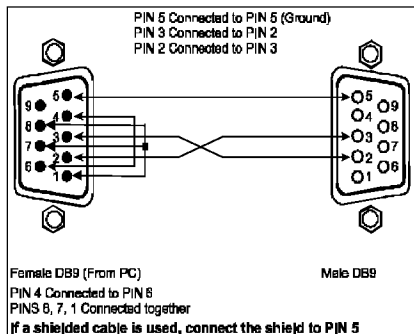


Figure 4: Connecting a PC without using a Null-modem Adapter

6.3 Controlling via the RS-485 Port

To cascade up to eight individual **VS-41HD** units, via RS-485 (with control via a Master Programmable Remote Control system such as the **Kramer RC-3000**), as Figure 5 illustrates, do the following:

1. Connect the “A” (+) and “B” (-) PINS on the RS-485 terminal block port of the **RC-3000** to the “A” (+) and “B” (-) PINS, respectively, on each of the eight **VS-41HD** units. (If using shielded twisted pair cable, the shield is usually connected to the “G” (Ground) PIN of the first unit).
2. Set the first **VS-41HD** unit as **MACHINE # 1** and the following seven **VS-41HD** units as **MACHINE # 2** to **MACHINE # 8**, according to Table 3.

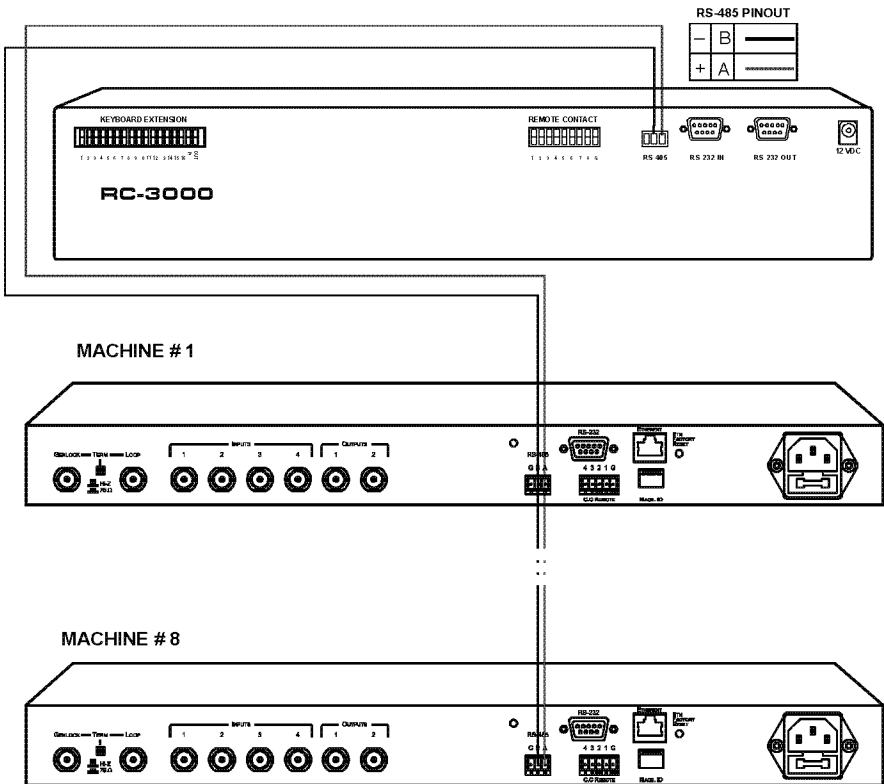


Figure 5: Controlling via RS-485 (for example, using an RC-3000)

6.4 Controlling via ETHERNET

You can connect the **VS-41HD** via the Ethernet, using a crossover cable (see section 6.4.1) for direct connection to the PC or a straight through cable (see section 6.4.2) for connection via a network hub or network router.


6.4.1 Connecting the ETHERNET Port directly to a PC (Crossover Cable)

You can connect the Ethernet port of the **VS-41HD** to the Ethernet port on your PC, via a crossover cable with RJ-45 connectors, as Table 4 and Figure 6 define.

Figure 6: RJ-45 PINOUT

Table 4: Crossover Cable RJ-45 PINOUT

EIA /TIA 568A Side 1		EIA /TIA 568B Side 2	
PIN	Wire Color	PIN	Wire Color
1	White-orange	1	White-green
2	Orange	2	Green
3	White-green	3	White-orange
4	Blue	4	Blue
5	White-blue	5	White-blue
6	Green	6	Orange
7	White-brown	7	White-brown
8	Brown	8	Brown
Pair 1	4 and 5	Pair 1	4 and 5
Pair 2	1 and 2	Pair 2	3 and 6
Pair 3	3 and 6	Pair 3	1 and 2
Pair 4	7 and 8	Pair 4	7 and 8

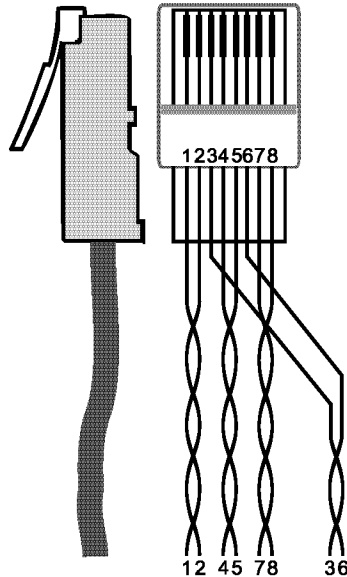

This type of connection is recommended for identification of the factory default IP Address of the **VS-41HD** during the initial configuration

After connecting the Ethernet port, configure your PC as follows:

1. Right-click the My Network Places icon on your desktop.
2. Select **Properties**.
3. Right-click Local Area Connection Properties.
4. Select **Properties**.
The Local Area Connection Properties window appears.

5. Select the Internet Protocol (TCP/IP) and click the **Properties** Button (see Figure 7).

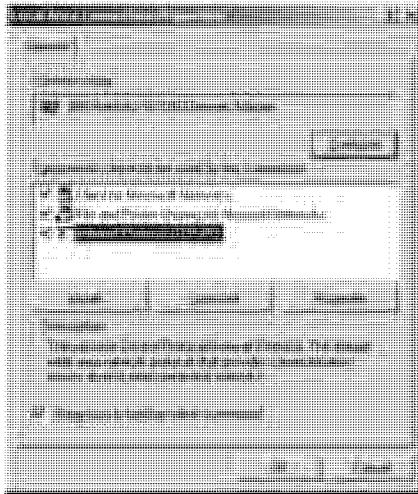


Figure 7: Local Area Connection Properties Window

6. Select Use the following IP address, and fill in the details as shown in Figure 8.
7. Click **OK**.

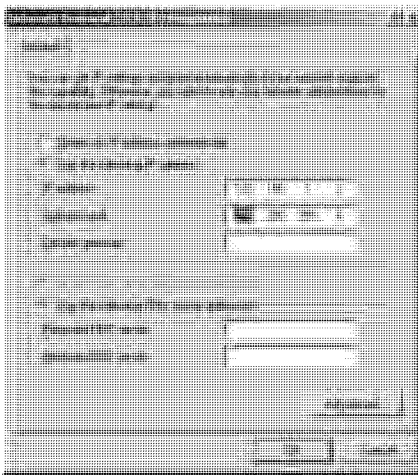


Figure 8: Internet Protocol (TCP/IP) Properties Window

6.4.2 Connecting the ETHERNET Port via a Network Hub (Straight-Through Cable)

You can connect the Ethernet port of the **VS-41HD** to the Ethernet port on a network hub or network router, via a straight-through cable with RJ-45 connectors, as Table 5 defines:

Table 5: Straight-through Cable RJ-45 PINOUT

Side 1		Side 2	
PIN	Wire Color	PIN	Wire Color
1	White-orange	1	White-orange
2	Orange	2	Orange
3	White-green	3	White-green
4	Blue	4	Blue
5	White-blue	5	White-blue
6	Green	6	Green
7	White-brown	7	White-brown
8	Brown	8	Brown

6.4.3 Configuring the Ethernet Port

After connecting the Ethernet port, you have to install and configure it.

For detailed instructions on how to install and configure your Ethernet port, see the “Ethernet Configuration (FC-11) guide.pdf” on our Web site: <http://www.kramerelectronics.com>.

6.5 Controlling via the C.C REMOTE Connector

Connecting the C.C REMOTE terminal block connector to a dry contact switch lets you route an input to the output by remote control. For example, to route input 1 to the output, as the example in Figure 9 illustrates, momentarily touch input # 1 to the Ground (G).

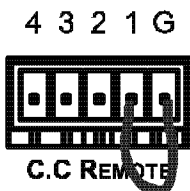


Figure 9: Using the C.C REMOTE Connector

7 Operating the VS-41HD

You can operate your **VS-41HD** via:

- The front panel buttons
- RS-232/RS-485 serial commands transmitted by a PC, touch screen system, or other serial controller
- The Kramer **RC-IR1** Infra-Red Remote Control Transmitter
- The ETHERNET

To switch an input to the outputs via the front panel buttons¹, press the desired input button.

When selecting an input that is not connected, that input button blinks.

7.1 Locking the Front Panel

To prevent changing the settings accidentally or tampering with the unit via the front panel buttons, lock² your **VS-41HD**. Unlocking releases the protection mechanism.

To lock the **VS-41HD**:

- Press the LOCK button for three seconds, until the LOCK button is illuminated
The front panel is locked. Pressing a button will have no effect

To unlock the **VS-41HD**:

- Press the illuminated LOCK button until the LOCK button is no longer illuminated
The front panel unlocks

¹ For details of how to route an input to an output using the REMOTE connector, see section 6.5

² Nevertheless, even though the front panel is locked you can still operate via RS-232 or RS-485, as well as via the Kramer IR Remote Control Transmitter

8 Technical Specifications

Table 6 includes the technical specifications:

Table 6: Technical Specifications¹ of the VS-41HD 4x1 HD/SD-SDI Switcher / DA

INPUTS:	4 SDI SMPTE-259M, 292M, 344M serial video, 75 ohms on BNC connectors 1 GENLOCK 75Ω / Hi-Z on looping BNC connectors, bi level, Tri level inputs
OUTPUTS:	2 identical equalized and reclocked SMPTE-259M, 292M, 344M outputs 75 ohms on BNC connectors
MAX. OUTPUT LEVEL:	800mVpp /75 ohms
JITTER:	Better than 0.2UI
DATA RATE:	Up to 1.485Gbps
CONTROLS:	Front-panel, RS-232; RS-485, ETHERNET, infra-red remote, dry contact, and panel lock
POWER SOURCE:	Universal, 100-240VAC, 50/60Hz 22VA
DIMENSIONS:	19 inch (W), 7 inch (D), 1U (H) rack mountable
WEIGHT:	1.5kg. (3.3lbs.) approx.
ACCESSORIES:	Power cord, Null-modem Adapter

¹ Specifications are subject to change without notice



9 Kramer Protocol 2000

The **VS-41HD** is compatible with Kramer's Protocol 2000 (version 0.46) (below). This RS-232/RS-485 communication protocol uses four bytes of information as defined below. For RS-232, a null-modem connection between the machine and controller is used. The default data rate is 9600 baud, with no parity, 8 data bits and 1 stop bit.

Table 7: Protocol Definitions

MSB								LSB
	DESTINATION	INSTRUCTION						
0	D	N5	N4	N3	N2	N1	N0	
7	6	5	4	3	2	1	0	
1st byte								
	INPUT							
1	I6	I5	I4	I3	I2	I1	I0	
7	6	5	4	3	2	1	0	
2nd byte								
	OUTPUT							
1	O6	O5	O4	O3	O2	O1	O0	
7	6	5	4	3	2	1	0	
3rd byte								
	MACHINE NUMBER							
1	OVR	X	M4	M3	M2	M1	M0	
7	6	5	4	3	2	1	0	
4th byte								

1st BYTE: Bit 7 – Defined as 0.

D – “DESTINATION”: 0 - for sending information to the switchers (from the PC);

1 - for sending to the PC (from the switcher).

N5...N0 – “INSTRUCTION”

The function that is to be performed by the switcher(s) is defined by the INSTRUCTION (6 bits). Similarly, if a function is performed via the machine's keyboard, then these bits are set with the INSTRUCTION NO., which was performed. The instruction codes are defined according to the table below (INSTRUCTION NO. is the value to be set for N5...N0).

2nd BYTE: Bit 7 – Defined as 1.

I6...I0 – “INPUT”.

When switching (ie. instruction codes 1 and 2), the INPUT (7 bits) is set as the input number which is to be switched. Similarly, if switching is done via the machine's front-panel, then these bits are set with the INPUT NUMBER which was switched. For other operations, these bits are defined according to the table.

3rd BYTE: Bit 7 – Defined as 1.

O6...O0 – “OUTPUT”.

When switching (ie. instruction codes 1 and 2), the OUTPUT (7 bits) is set as the output number which is to be switched. Similarly, if switching is done via the machine's front-panel, then these bits are set with the OUTPUT NUMBER which was switched. For other operations, these bits are defined according to the table.

4th BYTE: Bit 7 – Defined as 1.

Bit 5 – Don't care.

OVR – Machine number override.

M4...M0 – MACHINE NUMBER.

Used to address machines in a system via their machine numbers. When several machines are controlled from a single serial port, they are usually configured together with each machine having an individual machine number. If the OVR bit is set, then all machine numbers will accept (implement) the command, and the addressed machine will reply.

For a single machine controlled via the serial port, always set M4...M0 = 1, and make sure that the machine itself is configured as MACHINE NUMBER = 1.

Table 8: Instruction Codes for Protocol 2000

Note: All values in the table are decimal, unless otherwise stated.

INSTRUCTION		DEFINITION FOR SPECIFIC INSTRUCTION		NOTE
#	DESCRIPTION	INPUT	OUTPUT	
0	RESET VIDEO	0	0	1
1	SWITCH VIDEO	Set equal to video input which is to be switched (0 = disconnect)	Set equal to video output which is to be switched (0 = to all the outputs)	2, 15
2	SWITCH AUDIO	Set equal to audio input which is to be switched (0 = disconnect)	Set equal to audio output which is to be switched (0 = to all the outputs)	2
3	STORE VIDEO STATUS	Set as SETUP #	0 - to store 1 - to delete	2, 3, 15
4	RECALL VIDEO STATUS	Set as SETUP #	0	2, 3, 15
5	REQUEST STATUS OF A VIDEO OUTPUT	Set as SETUP #	Equal to output number whose status is reqd	4, 3
6	REQUEST STATUS OF AN AUDIO OUTPUT	Set as SETUP #	Equal to output number whose status is reqd	4, 3
7	VIS SOURCE	Set as input # when OUTPUT byte = 6; OR set as output # when OUTPUT byte = 7; OR set as blank period (in steps of 25ms) when OUTPUT byte = 32; OR set = 0. ****	0 - No VIS (immediate) 1 - Input # 1 2 - External digital sync 3 - External analog sync 4 - Dynamic sync 5 - Inter-machine sync 6 - Input # (INPUT byte) 7 - Output # (INPUT byte) 8 - User-defined sync 32 - RGBHV seamless switching 64 - Set for delayed switch 65 - Execute delayed switch 66 - Cancel delayed switch setting	2, 5, 17, 18
8	BREAKAWAY SETTING	0	0 - audio-follow-video 1 - audio breakaway	2
		1	0 - FOLLOW mode 1 - Normal mode	15
9	VIDEO / AUDIO TYPE SETTING	0 - for video	0 - CV 4 - SDI 1 - YC 5 - CV+YC 2 - YUV 6 - VGA scaler 3 - RGBS 7 - DVI	2
		1 - for audio	O0=0 – Unbalanced audio O0=1 – Balanced audio O1=0 – Digital audio O1=1 – Analog audio O4=0, O3=0, O2=0-Mono O4=0, O3=0, O2=1-Stereo	
		2 - for VGA and DVI	1 - 640X480 2 - 800X600 3 - 1024X768	
10	REQUEST VIS SETTING	Set as SETUP #, or set to 126 or 127 to request if machine has this function	0 - VIS source 1 - Input # or output # of source 2 - Vertical sync freq (Hz)	3, 4, 6, 7
11	REQUEST BREAKAWAY SETTING	Set as SETUP #, or set to 126 or 127 to request if machine has this function	0 - Request audio breakaway setting 1 - Request "FOLLOW" setting	3, 4, 6, 15
12	REQUEST VIDEO / AUDIO TYPE SETTING	Set as SETUP #, or set to 126 or 127 to request if machine has this function	0 - for video 1 - for audio 2 - for VGA	3, 4, 6
13	SET HIGHEST MACHINE ADDRESS	0 - for video 1 - for audio	Set equal to highest machine address	2
14	REQUEST HIGHEST MACHINE ADDRESS	0 - for video 1 - for audio	0	4
15	REQUEST WHETHER SETUP IS DEFINED / VALID INPUT IS DETECTED	SETUP # or Input #	0 - for checking if setup is defined 1 - for checking if input is valid	8

Kramer Protocol 2000

INSTRUCTION		DEFINITION FOR SPECIFIC INSTRUCTION		NOTE
#	DESCRIPTION	INPUT	OUTPUT	
16	ERROR / BUSY	For invalid / valid input (i.e. OUTPUT byte = 4 or OUTPUT byte = 5), this byte is set as the input #	0 - error 1 - invalid instruction 2 - out of range 3 - machine busy 4 - invalid input 5 - valid input	9, 25
17	RESERVED	---	---	10
18	RESET AUDIO	0	0	1
19	STORE AUDIO STATUS	Set as SETUP #	0 - to store 1 - to delete	2, 3
20	RECALL AUDIO STATUS	Set as SETUP #	0	2, 3
21	SET VIDEO PARAMETER	Equal to input / output number whose video parameter is to be set (0 = all)	Set as parameter value	2, 11, 24
22	SET AUDIO PARAMETER	Equal to input / output number whose gain is to be set (0 = all)	Set as parameter value	2, 11, 24
23	INCREASE / DECREASE VIDEO PARAMETER	Equal to input / output number whose video parameter is to be increased / decreased (0 = all)	0 - increase video gain 1 - decrease video gain 2 - increase contrast 3 - decrease contrast 4 - increase brightness 5 - decrease brightness 6 - increase colour 7 - decrease colour 8 - increase hue 9 - decrease hue 16 - increase H-phase 17 - decrease H-phase 18 - increase V-position 19 - decrease V-position	24
24	INCREASE / DECREASE AUDIO PARAMETER	Equal to input / output number whose parameter is to be increased / decreased (0 = all)	0 - increase output 1 - decrease output 2 - increase left output 3 - decrease left output 4 - increase right output 5 - decrease right output 6 - increase input 7 - decrease input 8 - increase left input 9 - decrease left input 10 - increase right input 11 - decrease right input	24
25	REQUEST AUDIO PARAMETER	Equal to input / output number whose parameter is requested	0	6, 24
26	REQUEST VIDEO PARAMETER	Equal to input / output number whose video parameter is requested	0	6, 24
30	LOCK FRONT PANEL	0 - Panel unlocked 1 - Panel locked	0	2
31	REQUEST WHETHER PANEL IS LOCKED	0	0	16
32 to 35	RESERVED	---	---	10
40	DIRECT MEMORY SAVE	Memory address	Data	20
42	AUDIO PARAMETER SETTINGS FOR INSTRUCTIONS 22, 24, 25	INPUT Bit: 10 - 0=input; 1=output 11 - Left 12 - Right	0 - Gain 1 - Bass 2 - Treble 3 - Midrange	24

INSTRUCTION		DEFINITION FOR SPECIFIC INSTRUCTION		NOTE
#	DESCRIPTION	INPUT	OUTPUT	
43	VIDEO PARAMETER SETTINGS FOR INSTRUCTIONS 21, 23, 26	1 - Input 2 - Output	0 - video gain 1 - contrast 2 - brightness 3 - colour 4 - hue 5 - H-phase 6 - V-position	24
56	CHANGE TO ASCII	0	1 - SVS protocol 2 - Generic protocol	19
57	SET AUTO-SAVE	13 - no save 14 - auto-save	0	12, 2
58	EXECUTE LOADED DATA	Set as 0, or as SETUP #.	1-Take 2-Cancel	22, 3
59	LOAD VIDEO DATA	Set equal to video input (0 = disconnect) ----- (127 = load SETUP #)	Set equal to video output (0 = to all the outputs) ----- or SETUP #	22, 23
60	LOAD AUDIO DATA	Set equal to audio input (0 = disconnect) ----- (127 = load SETUP #)	Set equal to audio output (0 = to all the outputs) ----- or SETUP #	22, 23
61	IDENTIFY MACHINE	1 - video machine name 2 - audio machine name 3 - video software version 4 - audio software version 5 - RS422 controller name 6 - RS422 controller version 7 - remote control name 8 - remote software version 9 - Protocol 2000 revision	0 - Request first 4 digits 1 - Request first suffix 2 - Request second suffix 3 - Request third suffix 10 - Request first prefix 11 - Request second prefix 12 - Request third prefix	13
62	DEFINE MACHINE	1 - number of inputs 2 - number of outputs 3 - number of setups	1 - for video 2 - for audio 3 - for SDI 4 - for remote panel 5 - for RS-422 controller	14
63	EXTENDED DATA	7 MSBs for INPUT data	7 MSBs for OUTPUT data	20

NOTES on the above table:

NOTE 1 - When the master switcher is reset, (e.g. when it is turned on), the reset code is sent to the PC. If this code is sent to the switchers, it will reset according to the present power-down settings.

NOTE 2 - These are bi-directional definitions. That is, if the switcher receives the code, it will perform the instruction; and if the instruction is performed (due to a keystroke operation on the front panel), then these codes are sent. For example, if the HEX code

01 85 88 83

was sent from the PC, then the switcher (machine 3) will switch input 5 to output 8. If the user switched input 1 to output 7 via the front panel keypad, then the switcher will send HEX codes:

41 81 87 83

to the PC.

When the PC sends one of the commands in this group to the switcher, then, if the instruction is valid, the switcher replies by sending to the PC the same four bytes that it was sent (except for the first byte, where the DESTINATION bit is set high).

NOTE 3 - SETUP # 0 is the present setting. SETUP # 1 and higher are the settings saved in the switcher's memory, (i.e. those used for Store and Recall).

NOTE 4 - The reply to a "REQUEST" instruction is as follows: the same instruction and INPUT codes as were sent are returned, and the OUTPUT is assigned the value of the requested parameter. The replies to instructions 10 and 11 are as per the definitions in instructions 7 and 8 respectively. For example, if the present status of machine number 5 is breakaway setting, then the reply to the HEX code

0B 80 80 85

would be HEX codes

4B 80 81 85

NOTE 5 - For the OUTPUT byte set as 6, the VIS source is the input selected using the OUTPUT byte. Similarly, for the OUTPUT byte set as 7, the VIS source is the output selected using the OUTPUT byte. Note also, that on some machines the sync source is not software selectable, but is selected using switches, jumpers, etc!

NOTE 6 – If INPUT is set to 127 for these instructions, then, if the function is defined on this machine, it replies with OUTPUT=1. If the function is not defined, then the machine replies with OUTPUT=0, or with an error (invalid instruction code).

If the INPUT is set to 126 for these instructions, then, if possible, the machine will return the current setting of this function, even for the case that the function is not defined. For example, for a video switcher which always switches during the VIS of input #1, (and its VIS setting cannot be programmed otherwise), the reply to the HEX code

0A FE 80 81 (ie. request VIS setting, with INPUT set as 126_{dec})

would be HEX codes

4A FE 81 81 (ie. VIS setting = 1, which is defined as VIS from input #1).

NOTE 7 – Setting OUTPUT to 0 will return the VIS source setting as defined in instruction #7. Setting to 1 will return the input # or output # of the sync source (for the case where the VIS source is set as 6 or as 7 in instruction #7). Setting to 2 returns the vertical sync frequency (0 for no input sync, 50 for PAL, 60 for NTSC, 127 for error).

NOTE 8 - The reply is as in TYPE 3 above, except that here the OUTPUT is assigned with the value 0 if the setup is not defined / no valid input is detected; or 1 if it is defined / valid input is detected.

NOTE 9 - An error code is returned to the PC if an invalid instruction code was sent to the switcher, or if a parameter associated with the instruction is out of range (e.g. trying to save to a setup greater than the highest one, or trying to switch an input or output greater than the highest one defined). This code is also returned to the PC if an RS-232 instruction is sent while the machine is being programmed via the front panel. Reception of this code by the switcher is not valid.

NOTE 10 – This code is reserved for internal use.

NOTE 11 – For machines where the video and / or audio gain is programmable.

NOTE 12 - Under normal conditions, the machine's present status is saved each time a change is made. The "power-down" save (auto-save) may be disabled using this code. Note that whenever the machine is turned on, the auto-save function is set.

NOTE 13 - This is a request to identify the switcher/s in the system. If the OUTPUT is set as 0, and the INPUT is set as 1, 2, 5 or 7, the machine will send its name. The reply is the decimal value of the INPUT and OUTPUT. For example, for a 2216, the reply to the request to send the audio machine name would be (HEX codes):

7D 96 90 81 (i.e. 128_{dec}+ 22_{dec} for 2nd byte, and 128_{dec}+ 16_{dec} for 3rd byte).

If the request for identification is sent with the INPUT set as 3 or 4, the appropriate machine will send its software version number. Again, the reply would be the decimal value of the INPUT and OUTPUT - the INPUT representing the number in front of the decimal point, and the OUTPUT representing the number after it. For example, for version 3.5, the reply to the request to send the version number would be (HEX codes):

7D 83 85 81 (i.e. 128_{dec}+ 3_{dec} for 2nd byte, 128_{dec}+ 5_{dec} for 3rd byte).

If the OUTPUT is set as 1, then the ASCII coding of the lettering following the machine's name is sent. For example, for the VS-7588YC, the reply to the request to send the first suffix would be (HEX codes):

7D D9 C3 81 (i.e. 128_{dec}+ ASCII for "Y"; 128_{dec}+ ASCII for "C").

NOTE 14 - The number of inputs and outputs refers to the specific machine which is being addressed, *not* to the system. For example, if six 16X16 matrices are configured to make a 48X32 system (48 inputs, 32 outputs), the reply to the HEX code

3E 82 81 82 (ie. request the number of outputs)

would be HEX codes

7E 82 90 82

ie. 16 outputs

NOTE 15 – When the OVR bit (4th byte) is set, then the "video" commands have universal meaning. For example, instruction 1 (SWITCH VIDEO) will cause all units (including audio, data, etc.) to switch. Similarly, if a machine is in "FOLLOW" mode, it will perform any "video" instruction.

NOTE 16 - The reply to the "REQUEST WHETHER PANEL IS LOCKED" is as in NOTE 4 above, except that here the OUTPUT is assigned with the value 0 if the panel is unlocked, or 1 if it is locked.

NOTE 17 – For clean switching of RGBHV video, the "seamless switching" option may be used. The blanking period for the transition of the RGB sources may be set in this case, in steps of 25 milliseconds.

For example, to set for 350ms blanking time (14 steps), send HEX codes

07 8E A0 81

NOTE 18 – Delayed execution allows switching after a delay dictated by RS-232. To do this, the user sends instruction 7 with the "Set for delayed switch" option (64_{dec}) before sending the switch command (instruction 1) or pressing via front panel. The switch is not executed (unless timed-out) until the "Execute delayed switch" code is sent, or the "Set for delayed switch"

code is sent again. (The mode is automatically cancelled after implementation of the switch if the “execute” command is used).

For example, to connect input 4 to output 3 after a delay, send HEX codes

07	80	C0	81	(set for delayed switch)
01	84	83	81	(switch code)

then, after the required delay, send HEX codes

07	80	C1	81	(execute delayed switch)
----	----	----	----	--------------------------

to implement the switch.

NOTE 19 – After this instruction is sent, the unit will respond to the ASCII command set defined by the OUTPUT byte. The ASCII command to operate with the HEX command set must be sent in order to return to working with HEX codes.

NOTE 20 – When data (ie. the INPUT and/or OUTPUT bytes) of more than 7 bits is required, this instruction is sent before sending the instruction needing the additional bits. The data in this instruction then becomes the Most Significant Bits of that next instruction. For example, to set the audio gain (instruction 22) of output 3 to 681_{dec} (2A9_{hex}), you would first send HEX codes

	3F	80	85	81
--	----	----	----	----

and then send HEX codes

	16	83	A9	81.
--	----	----	----	-----

To set the audio gain of output 6 to 10013_{dec} (271D_{hex}), first send HEX codes

	3F	80	CE	81
--	----	----	----	----

followed by HEX codes

	16	86	9D	81.
--	----	----	----	-----

NOTE 21 – To store data in the non-volatile memory of the unit, eg. the EEPROM for saving SETUPS. The EEPROM address is sent using the INPUT byte, and the data to be stored is sent using the OUTPUT byte. To use this instruction, it is necessary to understand the memory map, and memory structure of the particular machine.

NOTE 22 – Instruction 59 and instruction 60 load data for sending to the crosspoint switcher (or for storing in a SETUP), ie. the data is “lined-up” to be executed later. Instruction 58 executes the loaded data.

NOTE 23 – If the INPUT byte is set as 127_{dec}, then the data stored in a SETUP is loaded. The SETUP # is in the OUTPUT byte.

NOTE 24 – Further information needed in instructions 21, 22, 25 and 26, is sent using instruction 42 – which is sent prior to the instruction. For example, to request the audio gain value of right input # 9, send hex codes

	2A	84	80	81
--	----	----	----	----

and then send HEX codes

	19	89	81	81.
--	----	----	----	-----

NOTE 25 – For units which detect the validity of the video inputs, Instruction 16 will be sent whenever the unit detects a change in the state of an input (in real-time).

For example, if input 3 is detected as invalid, the unit will send the HEX codes

	10	83	84	81
--	----	----	----	----

If input 7 is detected as valid, then the unit will send HEX codes

	10	87	85	81.
--	----	----	----	-----

LIMITED WARRANTY

Kramer Electronics (hereafter *Kramer*) warrants this product free from defects in material and workmanship under the following terms.

HOW LONG IS THE WARRANTY

Labor and parts are warranted for seven years from the date of the first customer purchase.

WHO IS PROTECTED?

Only the first purchase customer may enforce this warranty.

WHAT IS COVERED AND WHAT IS NOT COVERED

Except as below, this warranty covers all defects in material or workmanship in this product. The following are not covered by the warranty:

1. Any product which is not distributed by Kramer, or which is not purchased from an authorized Kramer dealer. If you are uncertain as to whether a dealer is authorized, please contact Kramer at one of the agents listed in the web site www.kramerelectronics.com.
2. Any product, on which the serial number has been defaced, modified or removed.
3. Damage, deterioration or malfunction resulting from:
 - i) Accident, misuse, abuse, neglect, fire, water, lightning or other acts of nature
 - ii) Product modification, or failure to follow instructions supplied with the product
 - iii) Repair or attempted repair by anyone not authorized by Kramer
 - iv) Any shipment of the product (claims must be presented to the carrier)
 - v) Removal or installation of the product
 - vi) Any other cause, which does not relate to a product defect
 - vii) Cartons, equipment enclosures, cables or accessories used in conjunction with the product

WHAT WE WILL PAY FOR AND WHAT WE WILL NOT PAY FOR

We will pay labor and material expenses for covered items. We will not pay for the following:

1. Removal or installations charges.
2. Costs of initial technical adjustments (set-up), including adjustment of user controls or programming. These costs are the responsibility of the Kramer dealer from whom the product was purchased.
3. Shipping charges.

HOW YOU CAN GET WARRANTY SERVICE

1. To obtain service on you product, you must take or ship it prepaid to any authorized Kramer service center.
2. Whenever warranty service is required, the original dated invoice (or a copy) must be presented as proof of warranty coverage, and should be included in any shipment of the product. Please also include in any mailing a contact name, company, address, and a description of the problem(s).
3. For the name of the nearest Kramer authorized service center, consult your authorized dealer.

LIMITATION OF IMPLIED WARRANTIES

All implied warranties, including warranties of merchantability and fitness for a particular purpose, are limited in duration to the length of this warranty.

EXCLUSION OF DAMAGES

The liability of Kramer for any effective products is limited to the repair or replacement of the product at our option. Kramer shall not be liable for:

1. Damage to other property caused by defects in this product, damages based upon inconvenience, loss of use of the product, loss of time, commercial loss; or
2. Any other damages, whether incidental, consequential or otherwise. Some countries may not allow limitations on how long an implied warranty lasts and/or do not allow the exclusion or limitation of incidental or consequential damages, so the above limitations and exclusions may not apply to you.

This warranty gives you specific legal rights, and you may also have other rights, which vary from place to place.

NOTE: All products returned to Kramer for service must have prior approval. This may be obtained from your dealer.

This equipment has been tested to determine compliance with the requirements of:


- EN-50081: "Electromagnetic compatibility (EMC);
generic emission standard.
Part 1: Residential, commercial and light industry"
- EN-50082: "Electromagnetic compatibility (EMC) generic immunity standard.
Part 1: Residential, commercial and light industry environment".
- CFR-47: FCC Rules and Regulations:
Part 15: "Radio frequency devices
Subpart B – Unintentional radiators"

CAUTION!

- ☒ Servicing the machines can only be done by an authorized Kramer technician. Any user who makes changes or modifications to the unit without the expressed approval of the manufacturer will void user authority to operate the equipment.
- ☒ Use the supplied DC power supply to feed power to the machine.
- ☒ Please use recommended interconnection cables to connect the machine to other components.



For the latest information on our products and a list of Kramer distributors, visit our Web site: www.kramerelectronics.com, where updates to this user manual may be found. We welcome your questions, comments and feedback.

 <p>Caution</p>	<p>Safety Warning: Disconnect the unit from the power supply before opening/servicing.</p>
---	---

