

Kramer Electronics, Ltd.



USER MANUAL

Model:

VP-26

Presentation Matrix Switcher

Contents

1	Introduction	1
2	Getting Started	1
2.1	Quick Start	1
3	Overview	3
3.1	About the VP-26	3
3.2	About the Power Connect Feature	4
3.3	Shielded Twisted Pair (STP) / Unshielded Twisted Pair (UTP)	4
3.4	Recommendations for Achieving the Best Performance	4
3.5	Terminology Used in this User Manual	5
4	Your Presentation Matrix Switcher	5
5	Installing the VP-26 on a Rack	11
6	Connecting the VP-26 Presentation Matrix Switcher	12
6.1	Connecting the VP-26 Rear Panel	12
6.2	Connecting the Balanced/Unbalanced Stereo Audio Input/Output	15
6.3	Wiring the CAT5 LINE OUT RJ-45 Connector	16
6.4	Connecting a PC	16
6.5	Connecting via RS-485	17
6.6	Controlling via ETHERNET	18
6.6.1	Connecting the ETHERNET Port directly to a PC (Crossover Cable)	18
6.6.2	Connecting the ETHERNET Port via a Network Hub (Straight-Through Cable)	19
6.6.3	Control Configuration via the Ethernet Port	19
6.7	Controlling via RS-232 and RS-485	20
6.8	Dipswitch Settings	22
6.8.1	Setting the Machine # Dipswitches	22
7	Operating Your Switcher	23
7.1	The Front Panel Buttons	23
7.2	The Independent Switchers AFV Mode	24
7.3	The Master Audio Breakaway Mode	26
8	Flash Memory Upgrade	27
8.1	Switcher Flash Memory Upgrade	27
8.1.1	Downloading from the Internet	27
8.1.2	Connecting the PC to the RS-232 Port	27
8.1.3	Upgrading Firmware	28
8.2	Ethernet Flash Memory Upgrade	32
8.2.1	Downloading from the Internet	33
8.2.2	Connecting the PC to the RS-232 Port	33
8.2.3	Upgrading Firmware	33
9	Technical Specifications	35
10	Hex Table	36

10.1	Audio Gain Control Hex Tables	37
11	Communication Protocol	39

Figures

Figure 1:	VP-26 Presentation Matrix Switcher – Front View	6
Figure 2:	VP-26 Presentation Matrix Switcher – Rear View	8
Figure 3:	VP-26 Presentation Switcher / Controller – Underside View	10
Figure 4:	Connecting the VP-26 Presentation Matrix Switcher	14
Figure 5:	Connecting a Balanced Stereo Audio Input/Output	15
Figure 6:	Connecting an Unbalanced Stereo Audio Input	15
Figure 7:	Connecting an Unbalanced Stereo Audio Output	15
Figure 8:	CAT5 PINOUT	16
Figure 9:	Connecting a PC without using a Null-modem Adapter	16
Figure 10:	Controlling via RS-485 (for example, using an RC-3000)	17
Figure 11:	Local Area Connection Properties Window	18
Figure 12:	Internet Protocol (TCP/IP) Properties Window	19
Figure 13:	Control Configuration via RS-232 and RS-485	21
Figure 14:	Default Dipswitch Settings	22
Figure 15:	Independent Switchers Mode	25
Figure 16:	Switching in the Master Audio Mode	26
Figure 17:	Switching to the MIC in the Master Audio Mode	26
Figure 18:	Splash Screen	28
Figure 19:	Atmel – Flip Window	28
Figure 20:	Device Selection Window	29
Figure 21:	Selecting the Device from the Selection Window	29
Figure 22:	Loading the Hex	30
Figure 23:	RS-232 Window	30
Figure 24:	Atmel – Flip Window (Connected)	31
Figure 25:	Atmel – Flip Window (Operation Completed)	32
Figure 26:	The KFR-Programmer Window	33

Tables

Table 1: Terminology Used in this User Manual	5
Table 2: Front Panel VP-26 Presentation Matrix Switcher Features	7
Table 3: Rear Panel VP-26 Presentation Matrix Switcher Features	9
Table 4: VP-26 Underside Panel Features	10
Table 5: CAT5 PINOUT	16
Table 6: Dipswitch Settings	22
Table 7: Machine # Dipswitch Settings	22
Table 8: Technical Specifications of the VP-26 Presentation Switcher	35
Table 9: VP-26 Hex Table Video and Audio In-group IN-OUT 1 Selector	36
Table 10: VP-26 Hex Table Video and Audio In-group IN-OUT 2 Selector	36
Table 11: VP-26 Master Audio Selector Hex Table	37
Table 12: Set the Audio OUT 1 Gain Control for the Groups	37
Table 13: Set the Audio OUT 2 Gain Control for the Groups	37
Table 14: Set the Audio Output Gain Control for the Microphone	37
Table 15: Set the Audio Output Gain Control for the Master Audio	38
Table 16: Increase or Decrease the Audio Out 1 Gain by One Step	38
Table 17: Protocol Definitions	39
Table 18: Instruction Codes	40

1 Introduction

Welcome to Kramer Electronics (since 1981): a world of unique, creative and affordable solutions to the infinite range of problems that confront the video, audio and presentation professional on a daily basis. In recent years, we have redesigned and upgraded most of our line, making the best even better! Our 500-plus different models now appear in 8 Groups¹, which are clearly defined by function.

Congratulations on purchasing your Kramer **VP-26 Presentation Matrix Switcher**, which is ideal for presentation and conference room systems, production studios, rental and staging.

The package includes the following items:

- **VP-26 Presentation Matrix Switcher**
- Windows®-based Kramer control software
- Null-modem adapter and power cord²
- Kramer **RC-IR1/2** Infra-Red Remote Control Transmitter (including the required battery and a separate user manual³)
- This user manual³

2 Getting Started

We recommend that you:

- Unpack the equipment carefully and save the original box and packaging materials for possible future shipment
- Review the contents of this user manual
- Use Kramer high performance high resolution cables⁴

2.1 Quick Start

This quick start chart summarizes the basic setup and operation steps.

1 GROUP 1: Distribution Amplifiers; GROUP 2: Video and Audio Switchers, Matrix Switchers and Controllers; GROUP 3: Video, Audio, VGA/XGA Processors; GROUP 4: Interfaces and Sync Processors; GROUP 5: Twisted Pair Interfaces; GROUP 6: Accessories and Rack Adapters; GROUP 7: Scan Converters and Scalers; and GROUP 8: Cables and Connectors


2 We recommend that you use only the power cord that is supplied with this machine

3 Download up-to-date Kramer user manuals from our Web site at <http://www.kramerelectronics.com>

4 The complete list of Kramer cables is on our Web site at <http://www.kramerelectronics.com>


Step 1: Mount the machine - see section 5

Mount the machine in a rack or stick the 4 rubber feet to the underside




Step 2: Connect the inputs and outputs - see section 6

Connect the video inputs and outputs



Connect the audio Inputs and outputs



Step 3: Connect the control port - see section 6

If required, connect an RS-232 optional Control Port, and/or the ETHERNET Port

Step 4: Turn the power ON

Step 5: Set the machine - see section 7


INDEPENDENT SWITCHERS MODE

- For each switcher section:
- VGA/JXGA - AUDIO SELECTOR
 - VIDEO (CV) - AUDIO SELECTOR
 - S-VIDEO - AUDIO SELECTOR
 - COMP - AUDIO SELECTOR

Press a button to route any input to the outputs

MASTER AUDIO MODE

Press one of nine buttons to select the audio signal to route to the MASTER OUTPUT (LINE and SPKR)



Adjust the master and mic audio level



Lock the front panel buttons



Press to talk over the master audio output

Step 6: Operate the machine

Operate via the front panel buttons, IR remote control, RS-485, RS-232, and ETHERNET

3 Overview

This section describes:

- A summary of the **VP-26**, see section 3.1
- The power connect feature, see section 3.2
- Using shielded twisted pair (STP)/unshielded twisted pair (UTP), see section 3.3
- Recommendations for achieving the best performance, see section 3.4
- The terminology used in this user manual, see section 3.5

3.1 About the VP-26

The **VP-26** is a high quality one-box presentation matrix switcher, which includes three independent 4x2 audio/video matrix switchers, one independent 2x2 audio/video matrix switcher and a master audio switcher. It combines the functions of a 4x2 matrix switcher for computer graphics (VGA/UXGA) signals with audio, a 4x2 matrix switcher for composite video and audio, a 4x2 matrix switcher for s-Video and audio, and a 2x2 matrix switcher for component video (Y, PB/CB, PR/CR) as well as the master audio switcher that routes one of the pre-selected audio inputs (from these four switchers) to two separate outputs.

In addition, the **VP-26**:

- Has a VGA/UXGA video bandwidth of 300MHz to ensure transparent performance even in the most critical applications, and is HDTV compatible
- Has a composite/SDI video bandwidth of 420MHz, an s-Video bandwidth of 320MHz, a component video bandwidth of 380MHz, and a CAT5 resolution of up to UXGA
- Includes 37 selector buttons, microphone input level control and master audio level control
- Features a microphone talk-over mode (the microphone input signal lowers the line audio output level when the connected microphone detects sound)
- Has a CAT5 output, with a transmission range of more than 300 feet (over 100 meters) that transmits the OUT 2 VGA/UXGA video and audio signals to a remote acceptor via a receiver
- Includes an internal 5-Watt per channel (24kHz, 3dB), stereo power amplifier for connecting the speakers directly to the machine
- Has a panel LOCK button to prevent tampering with the front panel
- Recalls the previous setup via the non-volatile memory after power up
- Supports changing the audio output levels via RS-232 commands

Control the **VP-26** using the front panel buttons, or remotely via:

- RS-485 or RS-232 serial commands transmitted by a touch screen system, PC, or other serial controller
- The Kramer Infra-Red remote control transmitter
- The ETHERNET

3.2 About the Power Connect Feature

The Power Connect feature lets you power a transmitter / receiver system by connecting just one power adapter— to either the transmitter or the receiver. The other unit is fed via the cable connecting between the transmitter/receiver. The Power Connect feature applies as long as the cable can carry power. The distance does not exceed 50 meters on standard CAT5 cable, for longer distances, heavy gauge cable should be used¹.

For a CAT5 cable exceeding a distance of 50 meters, a separate power supply should be connected to the receiver.

3.3 Shielded Twisted Pair (STP) / Unshielded Twisted Pair (UTP)

The decision whether to use shielded twisted pair (STP) cable or unshielded twisted pair (UTP) cable depends on the nature of the application.

It is recommended that in applications with high interference, shielded twisted pair (STP) cable is used. However, the shield itself does create a capacitance that degrades the frequency response of the machines. For shorter distances, of 50m or so, shielded twisted pair (STP) cable is preferred because it provides protection from interference (degradation is not apparent).

For long-range applications, unshielded twisted pair (UTP) cable is preferred. However, the unshielded twisted pair (UTP) cable should be installed far away from electric cables, motors and so on, which are prone to create electrical interference.

3.4 Recommendations for Achieving the Best Performance

To achieve the best performance:

- Connect only good quality connection cables, thus avoiding interference, deterioration in signal quality due to poor matching, and elevated noise- levels (often associated with low quality cables)
- Avoid interference from neighboring electrical appliances and position your Kramer **VP-26** away from moisture, excessive sunlight and dust

¹ CAT5 cable is still suitable for the video/audio transmission, but not for feeding the power at these distances

3.5 Terminology Used in this User Manual

Table 1 defines some terms that are used in this user manual.

Table 1: Terminology Used in this User Manual

Term	Definition
802.3	The standard specification for ETHERNET that is maintained by the Institute of Electrical and Electronics Engineers (IEEE).
Dynamic Host Configuration Protocol (DHCP)	Allows the network administrator to distribute IP addresses from a central point and automatically send a new IP address when an Ethernet point is plugged into a different network location.
Gateway	A network position serving as an entry to another network. On the Internet, a node or stopping point can be either a gateway node or a host (end-point) node.
IP Address	A 32-binary digit number that identifies each sender or receiver (within a network via a particular server or workstation) of data (HTML pages or e-mails) that is sent in packets across the Internet. Every device connected to an IP network must have a unique IP address. This address is used to reference the specific unit.
Local Area Network (LAN)	Computers sharing a common communications line or wireless link, which often share a server within a defined geographic area.
Media Access Control (MAC) Address	A computer's unique hardware number (or address) in a LAN or other network. On an Ethernet LAN, the (MAC) address is identical to the Ethernet address.
Transmission Control Protocol/Internet Protocol (TCP/IP)	The basic communication language or protocol of the Internet that breaks the message into appropriately sized packets for the network, and can be used as a communications protocol in an intranet or an extranet.

4 Your Presentation Matrix Switcher

Figure 1, Figure 2, Table 2 and Table 3 describe the front and rear panels of the **VP-26**, respectively.

Your Presentation Matrix Switcher

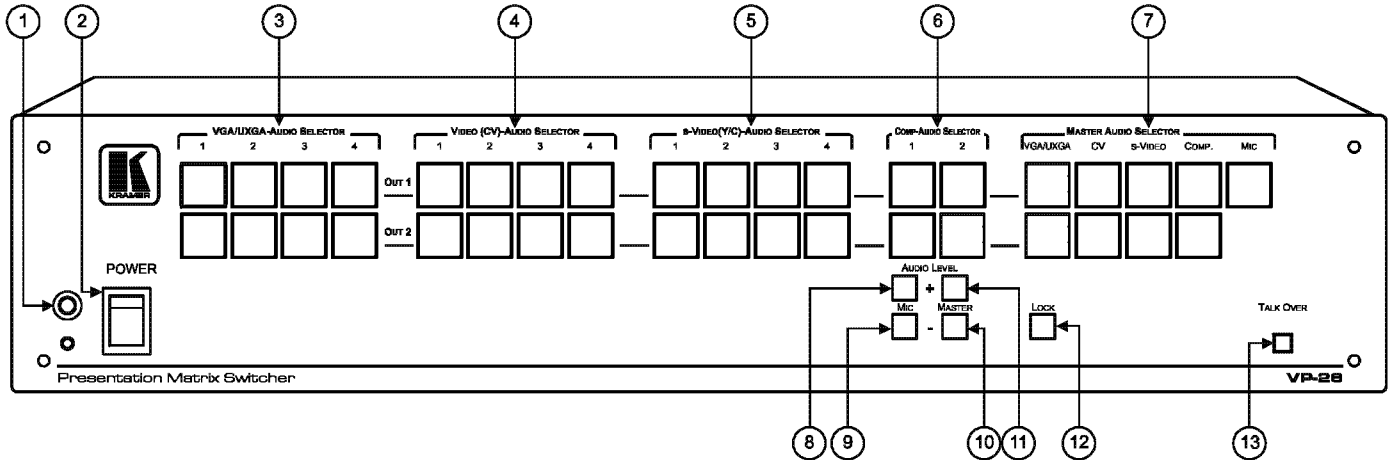


Figure 1: VP-26 Presentation Matrix Switcher – Front View

Table 2: Front Panel VP-26 Presentation Matrix Switcher Features

#	Feature		Function	
1	IR (Infra-Red) Receiver		Signals from the remote control transmitter illuminate the LED	
2	POWER Switch		Illuminated switch for turning the unit ON and OFF	
3	VGA/UXGA-AUDIO SELECTOR Buttons		Selects the VGA/UXGA video-audio source to switch to OUT 1 and/or OUT 2 (from 1 to 4)	
4	VIDEO (CV)-AUDIO SELECTOR Buttons		Selects the composite video-audio source to switch to OUT 1 and/or OUT 2 (from 1 to 4)	
5	s-VIDEO (Y/C)-AUDIO SELECTOR Buttons		Selects the s-Video-audio source to switch to OUT 1 and/or OUT 2 (from 1 to 4)	
6	COMP-AUDIO SELECTOR Buttons		Selects the component video-audio source to switch to OUT 1 and/or OUT 2 (input 1 and 2)	
7	MASTER AUDIO SELECTOR	VGA/UXGA Button	Press to route the selected audio signal (OUT 1 or OUT 2) from the VGA/UXGA section to the master audio outputs ¹	
		CV Button	Press to route the selected audio signal (OUT 1 or OUT 2) from the composite video section to the master audio outputs ¹	
		s-VIDEO Button	Press to route the selected audio signal (OUT 1 or OUT 2) from the s-Video section to the master audio outputs ¹	
		COMP. Button	Press to route the selected audio signal (OUT 1 or OUT 2) from the component video section to the master audio outputs ¹	
		MIC Button	Press to route the microphone input to the master audio outputs ¹	
8	AUDIO LEVEL	MIC	+ Button	Increase the microphone audio signal level
9			- Button	Decrease the microphone audio signal level
10		MASTER	- Button	Decrease the master audio signal level
11			+ Button	Increase the master audio signal level
12	LOCK Button		Press to lock the front panel buttons	
13	TALK OVER Button		Push the button to activate talk over ²	

1 MASTER OUTPUT: LINE and SPEAKER

2 With the TALK OVER button pressed in, speaking into the microphone amplifies the voice of the speaker, overriding and fading out all other audio channels. However, pressing the MIC button in the Master Audio Selector renders the Talk Over function inactive

Your Presentation Matrix Switcher

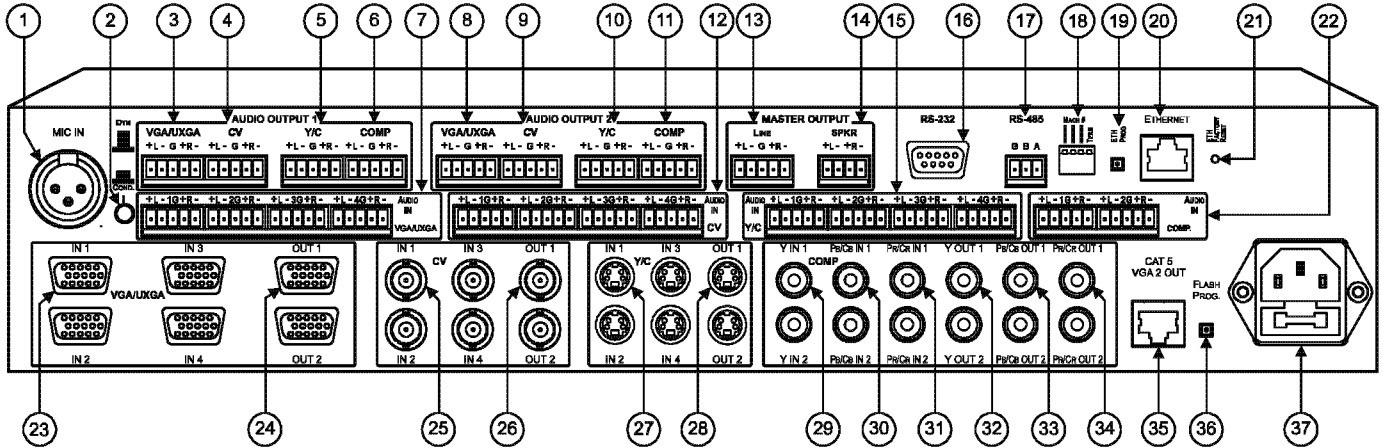


Figure 2: VP-26 Presentation Matrix Switcher – Rear View

Your Presentation Matrix Switcher

Table 3: Rear Panel VP-26 Presentation Matrix Switcher Features

#	Feature		Function
1	MIC IN XLR Connector		Connect to the microphone
2	COND. / DYN Selector Switch		Push in to select a condenser, release to select a dynamic microphone
3	AUDIO OUTPUT 1	VGA/UXGA Terminal Block Connector	Connect to a VGA/UXGA balanced audio acceptor
4		CV Terminal Block Connector	Connect to a composite video balanced audio acceptor
5		Y/C Terminal Block Connector	Connect to an s-Video balanced audio acceptor
6		COMP Terminal Block Connector	Connect to a component video balanced audio acceptor
7	VGA/UXGA AUDIO IN Terminal Block Connectors		Connect to the VGA/UXGA balanced audio sources ¹
8	AUDIO OUTPUT 2	VGA/UXGA Terminal Block Connector	Connect to a VGA/UXGA balanced audio acceptor
9		CV Terminal Block Connector	Connect to a composite video balanced audio acceptor
10		Y/C Terminal Block Connector	Connect to an s-Video balanced audio acceptor
11		COMP Terminal Block Connector	Connect to a component video balanced audio acceptor
12	CV AUDIO IN Terminal Block Connectors		Connect to the composite video balanced audio sources ¹
13	MASTER OUTPUT	LINE Terminal Block Connector	Connect the master balanced audio channel acceptor ²
14		SPKR Terminal Block Connector	Connect to a pair of loudspeakers
15	Y/C AUDIO IN Terminal Block Connectors		Connect to the s-Video balanced audio sources ¹
16	RS-232 DB 9F Port		Connects to the PC or the Remote Controller
17	RS-485 Terminal Block Port		Pins B (-) and A (+) are for RS-485; Pin G may be connected to the shield (if required)
18	Dipswitches		Dipswitches for setup of the unit (DIPs 1, 2 and 3 are for setting the machine # and DIP 4 is for RS-485 termination; see section 6.8)
19	ETH PROG Button		Press to upgrade the Ethernet microcontroller firmware (see section 8.2)
20	ETHERNET Connector		Connects to the PC or other Serial Controller through computer networking
21	ETH Factory Reset Button		Press to reset to factory default definitions ³ : IP Address: 192.168.1.39 Mask: 255.255.255.0 Gateway: 192.168.1.1

1 From 1 to 4

2 Both the LINE and the SPKR terminal block connectors receive the same signal: the LINE outputs it as it is while the SPKR is amplified

3 Turn the machine OFF using the power switch and then turn it ON while pressing the ETH Factory Reset button. The unit will power up and load its memory with the factory default definitions



Your Presentation Matrix Switcher

#	Feature	Function
22	COMP AUDIO IN Terminal Block Connectors	Connect to the component video balanced audio sources ¹
23	VGA/UXGA	IN HD15 Connectors
24		OUT HD15 Connectors
25	CV	IN BNC Connectors
26		OUT BNC Connectors
27	Y/C	IN 4p Connectors
28		OUT 4p Connectors
29	COMP	Y IN RCA Connectors
30		PB/CB IN RCA Connectors
31		PR/CR IN RCA Connectors
32		Y OUT RCA OUT Connectors
33		PB/CB OUT RCA Connectors
34	PR/CR OUT RCA Connectors	
35	CAT5 VGA 2 OUT ³ Twisted Pair Connector	Connect to a remote computer graphics acceptor via a receiver (for example, the TP-122 ⁴)
36	FLASH PROG. Button	Push in for "Program" to upgrade to the latest Kramer firmware (see section 8), or release for Normal (the factory default)
37	Power Connector with Fuse	AC connector enabling power supply to the unit

Figure 3 and Table 4 define the **VP-26** underside features:

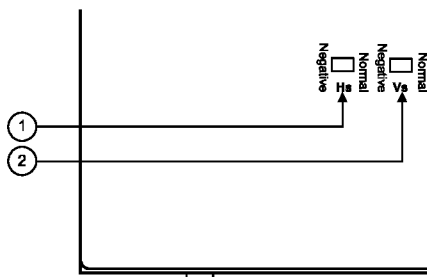


Figure 3: VP-26 Presentation Switcher / Controller – Underside View

Table 4: VP-26 Underside Panel Features

#	Feature	Function
1	HS Switch	Slide the switch to the right (to NORMAL) to retain the polarity Slide the switch to the left ⁵ to change the HS polarity to NEGATIVE polarity ⁶
2	VS Switch	Slide the switch to the right (to NORMAL) to retain the polarity Slide the switch to the left ⁵ to change the VS polarity to NEGATIVE polarity ⁶

¹ From 1 to 2

² From 1 to 4

³ The CAT5 outputs the VGA/UXGA OUT 2 signal only

⁴ See section 6.1

⁵ By default, both switches are set to the right

⁶ Downgoing syncs

5 Installing the VP-26 on a Rack

This section describes what to do before installing on a rack and how to rack mount.

Before Installing on a Rack

Before installing on a rack, be sure that the environment is within the recommended range:	
Operating temperature range	+5 to +45 Deg. Centigrade
Operating humidity range	5 to 65% RHL, non-condensing
Storage temperature range	-20 to +70 Deg. Centigrade
Storage humidity range	5 to 95% RHL, non-condensing



CAUTION!!


When installing on a 19" rack, avoid hazards by taking care that:

- 1 It is located within the recommended environmental conditions, as the operating ambient temperature of a closed or multi unit rack assembly may exceed the room ambient temperature.
- 2 Once rack mounted, enough air will still flow around the machine.
- 3 The machine is placed straight in the correct horizontal position.
- 4 You do not overload the circuit(s). When connecting the machine to the supply circuit, overloading the circuits might have a detrimental effect on overcurrent protection and supply wiring. Refer to the appropriate nameplate ratings for information. For example, for fuse replacement, see the value printed on the product label.
- 5 The machine is earthed (grounded) in a reliable way and is connected only to an electricity socket with grounding. Pay particular attention to supply connections other than direct connections to the branch circuit (for example, the use of power strips), and that you use only the power cord that is supplied with the machine.

How to Rack Mount

To rack-mount a machine:

- 1 Attach both ear brackets to the machine. To do so, remove the screws from each side of the machine (5 on each side), and replace those screws through the ear brackets.

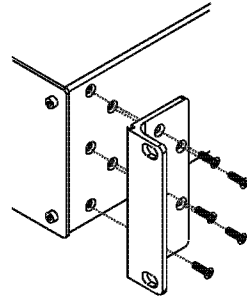

- 2 Place the ears of the machine against the rack rails, and insert the proper screws (not provided) through each of the four holes in the rack ears.

Note that:

- In some models, the front panel may feature built-in rack ears
- Detachable rack ears can be removed for desktop use
- Always mount the machine in the rack before you attach any cables or connect the machine to the power
- If you are using a Kramer rack adapter kit (for a machine that is not 19"), see the Rack Adapters user manual for installation instructions (you can download it at: <http://www.kramerelectronics.com>)

6 Connecting the VP-26 Presentation Matrix Switcher

This section describes how to:

- Connect the rear panel (see section 6.1)
- Connect the audio (see section 6.2)
- Wire the CAT5 connector (see section 6.3)
- Connect a PC or other controller via the RS-232 port (see section 6.4)
- Connect a controller via the RS-485 port (see section 6.5)
- Control via the ETHERNET (see section 6.6)
- Cascade several machines (see section 6.7)
- Set the dipswitches (see section 6.8)

6.1 Connecting the VP-26 Rear Panel

To connect¹ the **VP-26**, as the example² illustrated in Figure 4 shows³, do the following⁴:

1. Connect the following video sources, that is, one⁵:
 - VGA/UXGA source (for example, a computer graphics source) to the VGA/UXGA IN 1 HD15F connector
 - Composite video source (for example, a composite video player) to the CV IN 1 BNC connector
 - s-Video source (for example, an s-Video player) to the Y/C IN 1 4p connector
 - Component video source (for example, a DVD player) to the three IN 1 RCA connectors Y, PB/CB and PR/CR
2. Connect the OUT 1 acceptors to a projector⁶ as follows:
 - The composite video CV OUT BNC connector to the composite video input of the projector
 - The s-Video Y/C OUT 4p connector to the s-Video input of the projector

1 You do not need to connect all the inputs

2 In this example, each of the OUT 1 connectors (one from each group) is connected to the same projector. Use the projector controller to switch between the VP-26 video outputs (or projector inputs)

3 In Figure 4, the audio connections are not shown, except for the microphone and speakers connections

4 Switch OFF the power on each device before connecting it to your VP-26. After connecting your VP-26, switch on its power and then switch on the power on each device. Switching on the VP-26, recalls the previous setup from the non-volatile memory

5 Although in this example only one source is connected, you can connect all four inputs, that is, 12 in total

6 In this example a projector is used, but you can also connect separate outputs such as displays, video recorders and so on

- The VGA/UXGA UXGA OUT HD15F connector to the VGA/UXGA input of the projector
 - The three OUT RCA connectors Y, PB/CB and PR/CR to the component video input of the projector
3. Connect the appropriate balanced audio sources and acceptors (not shown in Figure 4¹).
 4. Connect the MASTER OUTPUT LINE terminal block connector, if required (not shown in Figure 4; see section 7.3).
 5. Connect the MASTER OUTPUT SPKR block connector to a pair of loudspeakers, by connecting the left loudspeaker to the “L+” and the “L-” terminal block connectors, and the right loudspeaker to the “R+” and the “R-” terminal block connectors. **Do not Ground the loudspeakers.**
 6. Connect the CAT5 VGA 2 OUT twisted pair connector (see section 6.3) to a line receiver (for example, the **TP-122 XGA / Audio Line Receiver**², which is connected to a remote display and speakers).
 7. Connect a dynamic or a condenser microphone³, if required, to the MIC IN XLR connector.
 8. You can connect a PC and/or controller to the:
 - RS-232 port (see section 6.4)
 - RS-485 port (see section 6.5)
 - ETHERNET (see section 6.6)
 9. Connect the unit to additional machines (if required) via the RS-485 port (see section 6.7) for control.
 10. Connect the power cord.

1 In Figure 4, the audio connections are not shown, except for the microphone and speakers connections

2 The receiver receives the CAT5 signal, decodes it and outputs it to a VGA acceptor

3 Use the Con / Dyn switch (refer to the rear panel, item 2 in Figure 2) to select a dynamic microphone or a condenser

Connecting the VP-26 Presentation Matrix Switcher

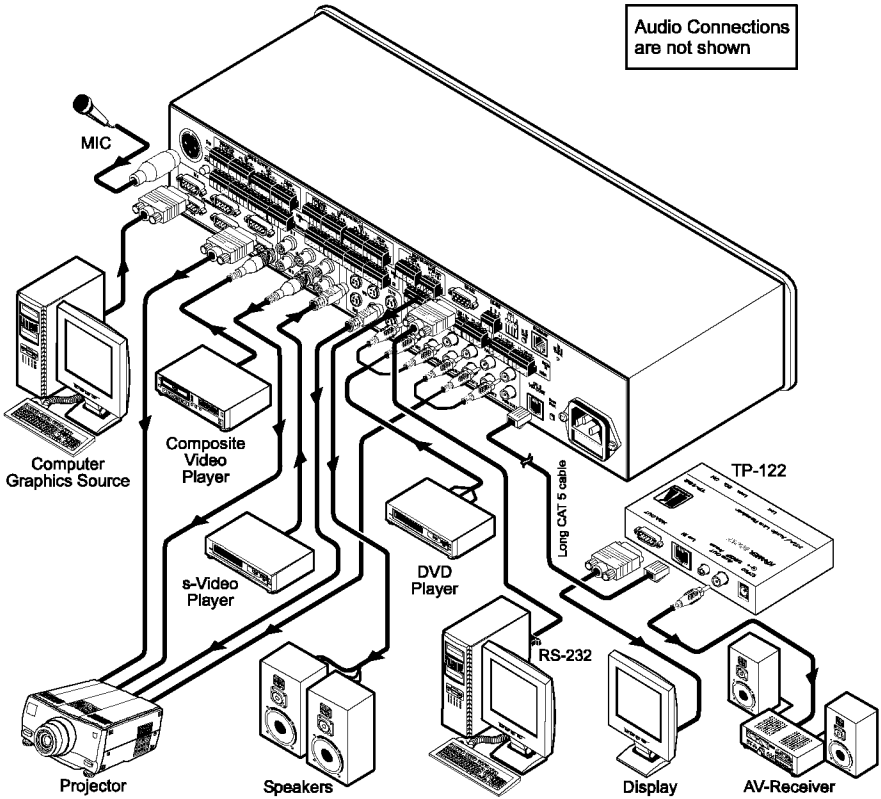


Figure 4: Connecting the VP-26 Presentation Matrix Switcher

6.2 Connecting the Balanced/Unbalanced Stereo Audio Input/Output

Figure 5, Figure 6, and Figure 7 illustrate how to wire a balanced/unbalanced input and/or output connection:

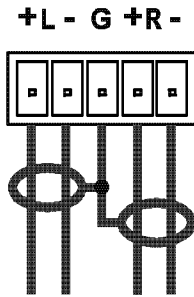


Figure 5: Connecting a Balanced Stereo Audio Input/Output

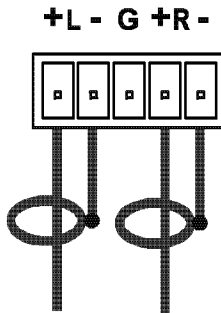


Figure 6: Connecting an Unbalanced Stereo Audio Input

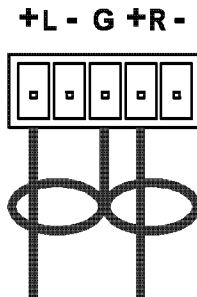


Figure 7: Connecting an Unbalanced Stereo Audio Output


6.3 Wiring the CAT5 LINE OUT RJ-45 Connector

Table 5 and Figure 8 define the CAT5 PINOUT, using a straight pin-to-pin cable with RJ-45 connectors:

Table 5: CAT5 PINOUT

EIA /TIA 568A		EIA /TIA 568B	
PIN	Wire Color	PIN	Wire Color
1	Green / White	1	Orange / White
2	Green	2	Orange
3	Orange / White	3	Green / White
4	Blue	4	Blue
5	Blue / White	5	Blue / White
6	Orange	6	Green
7	Brown / White	7	Brown / White
8	Brown	8	Brown
Pair 1	4 and 5	Pair 1	4 and 5
Pair 2	3 and 6	Pair 2	1 and 2
Pair 3	1 and 2	Pair 3	3 and 6
Pair 4	7 and 8	Pair 4	7 and 8

Figure 8: CAT5 PINOUT

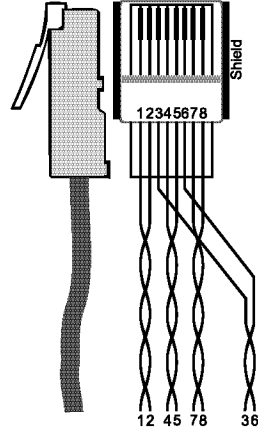

6.4 Connecting a PC

You can connect a PC (or other controller) to the **VP-26** via the RS-232 port.

To connect using the Null-modem adapter provided with the machine (recommended method):

- Connect the RS-232 DB9 rear panel port on the **VP-26** to the Null-modem adapter and connect the Null-modem adapter with a 9-wire flat cable to the RS-232 DB9 port on your PC

To connect without using a Null-modem adapter:

- Connect the RS-232 DB9 port on your PC to the RS-232 DB9 rear panel port on the **VP-26**, as Figure 9 illustrates

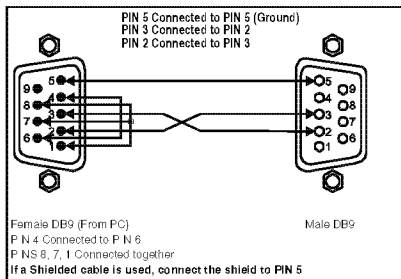


Figure 9: Connecting a PC without using a Null-modem Adapter

6.5 Connecting via RS-485

You can control a **VP-26** unit via an RS-485 controller, or a Master Programmable Remote Control system such as the Kramer **RC-3000**.

To connect an **RC-3000** to a **VP-26** unit (see Figure 10), connect the RS-485 terminal block port on the **RC-3000** to the RS-485 port on the **VP-26** unit, as follows:

- Connect the “A” (+) PIN on the RS-485 rear panel port of the **RC-3000** to the “A” (+) PIN on the RS-485 rear panel port of the **VP-26** unit
- Connect the “B” (-) PIN on the RS-485 rear panel port of the **RC-3000** to the “B” (-) PIN on the RS-485 rear panel port of the **VP-26** unit
- If shielded twisted pair cable is used, the shield may be connected to the “G” (Ground) PIN on one of the units (for example, on the **RC-3000**)
- Set the **VP-26** unit to a Machine # other than 1, according to Table 7, and set DIP 4 ON (for RS-485 Line Termination with 120Ω)

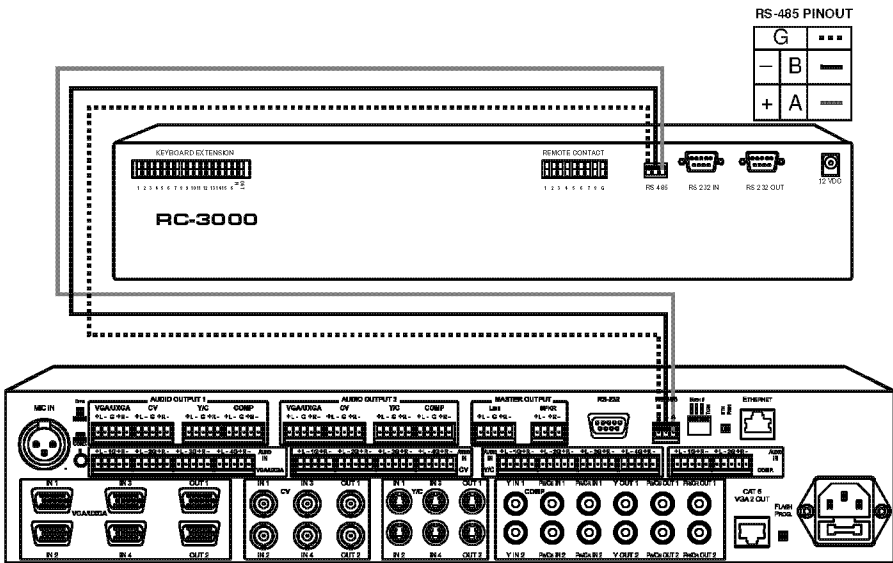


Figure 10: Controlling via RS-485 (for example, using an RC-3000)

6.6 Controlling via ETHERNET

You can connect the **VP-26** via the Ethernet, using a crossover cable (see section 6.6.1) for direct connection to the PC or a straight through cable (see section 6.6.2) for connection via a network hub or network router¹.

6.6.1 Connecting the ETHERNET Port directly to a PC (Crossover Cable)

You can connect the Ethernet port of the **VP-26** to the Ethernet port on your PC, via a crossover cable with RJ-45 connectors.

This type of connection is recommended for identification of the factory default IP Address of the **VP-26** during the initial configuration

After connecting the Ethernet port, configure your PC as follows:

1. Right-click the My Network Places icon on your desktop.
2. Select **Properties**.
3. Right-click Local Area Connection Properties.
4. Select **Properties**.
The Local Area Connection Properties window appears.
5. Select the Internet Protocol (TCP/IP) and click the **Properties** Button (see Figure 11).

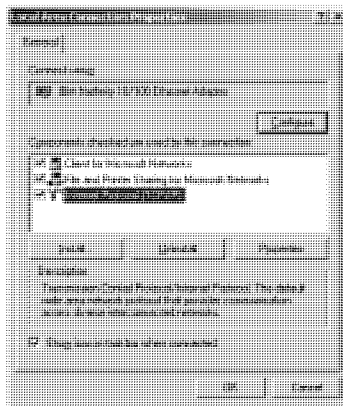


Figure 11: Local Area Connection Properties Window

¹ After connecting the Ethernet port, you have to install and configure your Ethernet Port. For detailed instructions, see the “Ethernet Configuration (PC-11) guide.pdf” file in the technical support section on our Web site:

<http://www.kramerelectronics.com>

6. Select Use the following IP Address, and fill in the details as shown in Figure 12.
7. Click **OK**.

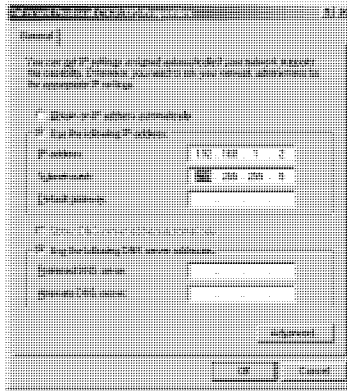


Figure 12: Internet Protocol (TCP/IP) Properties Window

6.6.2 Connecting the ETHERNET Port via a Network Hub (Straight-Through Cable)

You can connect the Ethernet port of the **VP-26** to the Ethernet port on a network hub or network router, via a straight-through cable with RJ-45 connectors.

6.6.3 Control Configuration via the Ethernet Port

To control several units via the Ethernet, connect the Master unit (Machine # 1) via the Ethernet port to the LAN port of your PC. Use your PC initially to configure the settings (see section 6.6).

6.7 Controlling via RS-232 and RS-485

You can cascade up to eight **VP-26** units with control from a PC or serial controller.

To cascade up to eight individual **VP-26** units, via RS-232 and RS-485, as illustrated in Figure 13, do the following:

1. Connect the video sources and acceptors, as well as the appropriate audio sources and acceptors, as described in section 6.1.
2. Connect the RS-232 port on the first **VP-26** unit to the PC using the Null-modem adapter provided with the machine (recommended), as section 6.4 describes.
3. Connect the RS-485 terminal block port on the first **VP-26** unit to the RS-485 port on the second **VP-26** unit and so on, connecting all the RS-485 ports.
4. Set the dipswitches, as section 6.8.1 describes. In particular:
 - Set the first **VP-26** unit as Machine # 1, the second unit to Machine # 2, and so on - up to Machine # 8 for the eighth unit
 - Set Dip 4 ON on the first and last **VP-26** units (terminating the RS-485 line at 120Ω). On the other units, set DIP 4 OFF

Connecting the VP-26 Presentation Matrix Switcher

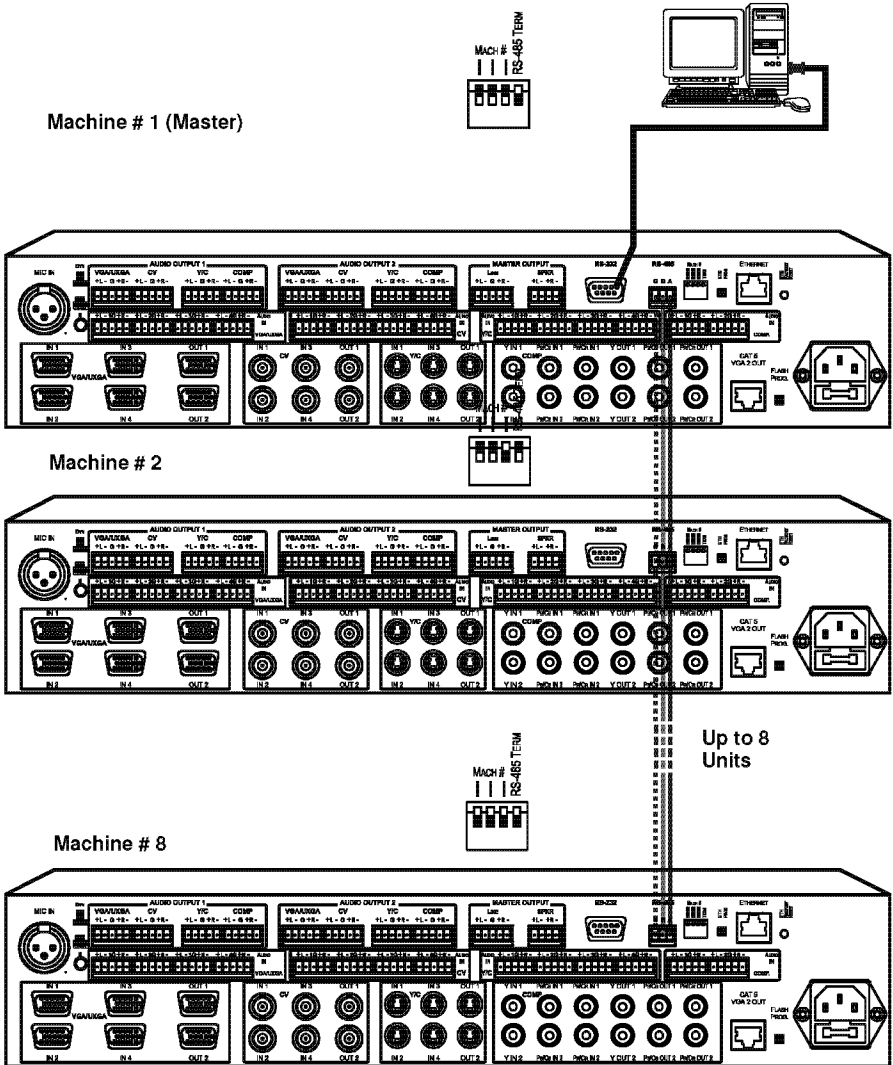


Figure 13: Control Configuration via RS-232 and RS-485

6.8 Dipswitch Settings

Figure 14 and Table 6 define the factory default dipswitch settings¹:

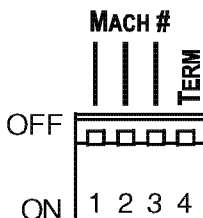


Figure 14: Default Dipswitch Settings

Table 6: Dipswitch Settings

DIPS	Function	Description
1, 2, 3	Machine #	Determines the number of the machine in the sequence
4	RS-485 TERM	ON for RS-485 Line Termination with 120Ω; OFF for no RS-485 Line Termination

6.8.1 Setting the Machine # Dipswitches

You can cascade up to eight **VP-26** units. The Machine # determines the position of a **VP-26** unit, specifying which **VP-26** unit is being controlled when several **VP-26** units connect to a PC or serial controller. Set the Machine # on a **VP-26** unit via Setup DIPS 1, 2 and 3, according to Table 7.

Table 7: Machine # Dipswitch Settings

Machine #	Dipswitch		
	1	2	3
1 ^{Master}	OFF	OFF	OFF
2	OFF	OFF	ON
3	OFF	ON	OFF
4	OFF	ON	ON
5	ON	OFF	OFF
6	ON	OFF	ON
7	ON	ON	OFF
8	ON	ON	ON

¹ By default, all dipswitches are set to OFF

7 Operating Your Switcher

This section describes the:

- Front panel buttons (see section 7.1)
- Independent switchers AFV mode (see section 7.2)
- Master audio breakaway mode (see section 7.3)

7.1 The Front Panel Buttons

The front panel buttons include:

- Two sets of four (from 1 to 4) VGA/UXGA-AUDIO SELECTOR buttons for switching to OUT 1 and/or OUT 2
- Two sets of four (from 1 to 4) VIDEO (CV)-AUDIO SELECTOR buttons for switching OUT 1 and/or OUT 2
- Two sets of four (from 1 to 4) s-VIDEO (Y/C)-AUDIO SELECTOR buttons for switching to OUT 1 and/or OUT 2
- Two sets of two (1 and 2) COMP-AUDIO SELECTOR buttons for switching to OUT 1 and/or OUT 2
- Nine MASTER AUDIO SELECTOR buttons (two sets of VGA/UXGA, CV, s-VIDEO and COMP for OUT 1 and OUT 2 signals, and MIC)
- MIC AUDIO LEVEL up and down buttons to adjust the level at the master audio out¹ connectors² and the talk-over function threshold³
- MASTER AUDIO LEVEL up and down buttons to adjust the audio output level at the master audio out connectors¹, without influencing any other audio output
- Panel LOCK button to lock the front panel buttons
- TALK OVER button⁴, which lowers or mutes the MASTER AUDIO LEVEL when the microphone picks up speech⁵

1 MASTER OUT and SPKR OUT

2 Useful in the TALK OVER mode, when the microphone level needs to be adjusted separately

3 Achieving optimum results for a particular environment when using a microphone may require experimentation in adjusting the AUDIO and MIC LEVELS

4 Two channels are active in the Talk Over mode, a source selected via the MASTER AUDIO SELECTOR buttons and the microphone channel

5 Adjust the microphone level via the MIC AUDIO LEVEL + and - buttons

By default¹, the stereo audio signals switch together with the video, that is, the unit is set in an AFV² mode. You can change to breakaway mode³, via RS-232

Pressing an illuminated AUDIO SELECTOR button for more than 2 seconds mutes the master audio output, and the button no longer illuminates. The video will continue to display but without sound.

7.2 The Independent Switchers AFV Mode

In the independent switchers AFV mode, the four matrix switchers of the **VP-26** operate independently of each other. For each matrix switcher, you can select any input to switch to the outputs, as illustrated in Figure 15.

The audio input signal follows the video signal and the last audio signal selected is outputted to the master audio output

You can route any combination of:

- Two of the four VGA/UXGA inputs to the VGA/UXGA⁴ outputs
- Two of the four CV inputs to the CV outputs
- Two of the four Y/C inputs to the Y/C outputs
- The COMP inputs to the COMP outputs

For example⁵, in the CV matrix switcher section, you can switch IN 1 to OUT 1 and IN 4 to OUT 2 by pressing the VIDEO (CV)-AUDIO SELECTOR button 1 on the OUT 1 set, and button 4 on the OUT 2 set.

The same applies to the other matrix switcher sections (CV, Y/C and COMP).

Each pressed button illuminates⁶, indicating selection and outputting of that video and audio source.

You can choose not to use one or more of the matrix switchers

1 This is, the pre-installed factory default. The default can be modified via the Windows®-based Kramer control software

2 Audio-Follow-Video, in which all operations relate to both the video and the audio channels

3 In which video and audio channels switch independently

4 The OUT 2 signal is also routed to the CAT5 VGA 2 OUT connector

5 Assuming that all inputs are connected

6 Pressing an illuminated button for more than 2 seconds will disconnect the output and the button will no longer illuminate

Operating Your Switcher

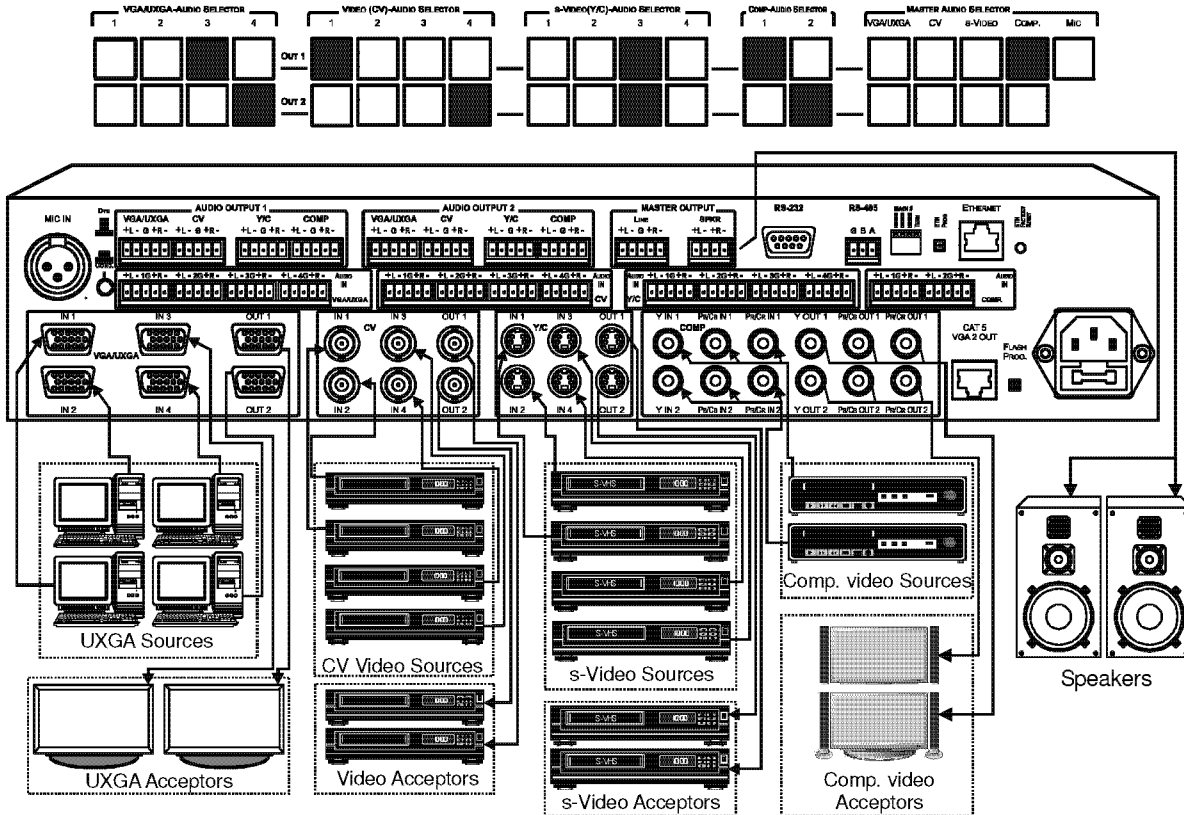


Figure 15: Independent Switchers Mode



7.3 The Master Audio Breakaway Mode

The Master Audio automatically follows the last input selected¹ (for example, COMP OUT 1 in Figure 15), regardless of the switcher group (VGA, s-Video, composite video or component video), and the respective button² under the MASTER AUDIO SELECTOR section illuminates, indicating that the selected input (for example, COMP OUT 1 in Figure 15) is routed to the master outputs.

In the Master Audio Breakaway mode³, switching a video input will not switch the respective audio signal. You can independently route an audio input signal from any of the A/V matrix switchers or from the microphone, to the MASTER OUTPUT LINE⁴ and/or SPKR⁴ outputs, regardless of the video input last selected.

You can change the audio input switched to the master output by pressing the relevant button under the MASTER AUDIO SELECTOR section⁵. For example, press the CV OUT 2 button under the MASTER AUDIO SELECTOR section to route the composite video input 4 signal to the MASTER OUTPUT, as illustrated in Figure 16:




Figure 16: Switching in the Master Audio Mode

When a microphone is connected to the MIC IN XLR connector, you can press the MIC button under the MASTER AUDIO SELECTOR section. The MIC button illuminates (see Figure 17) and the speakers output the MIC IN⁶ audio signal, while retaining the current video display. You can return to the composite video (CV) audio output by pressing the relevant CV button under the MASTER AUDIO SELECTOR section once again.




Figure 17: Switching to the MIC in the Master Audio Mode

1 The Independent Switchers AFV mode

2 Replacing the previous illuminated button

3 You can set the machine to the breakaway mode via RS-232

4 The MASTER audio signal is routed simultaneously to the LINE and the SPKR channels. The only difference between them is that the SPKR channel has an internal power amplifier, which lets you connect the speakers directly to the unit

5 The nine MASTER AUDIO SELECTOR buttons include one button for each of the outputs and the MIC button

6 Another way to use the microphone is to press the TALK OVER button: the main audio level is lowered when the microphone picks up speech

8 Flash Memory Upgrade

The **VP-26** lets you upgrade both the:

- Switcher Microcontroller (see section 8.1)
- Ethernet Microcontroller (see section 8.2)

8.1 Switcher Flash Memory Upgrade

The **VP-26** firmware is located in FLASH memory, which lets you upgrade to the latest Kramer firmware version in minutes! The process involves:

- Downloading from the Internet (see section 8.1.1)
- Connecting the PC to the RS-232 port (see section 8.1.2)
- Upgrading Firmware (see section 8.1.3)

8.1.1 Downloading from the Internet

You can download the up-to-date file¹ from the Internet. To do so:

1. Go to our Web site at <http://www.kramerelectronics.com> and download the file: “*FLIP_VP26.zip*” from the Technical Support section.
2. Extract the file: “*FLIP_VP26.zip*” to a folder (for example, C:\Program Files\Kramer Flash).
3. Create a shortcut on your desktop to the file: “*FLIP.EXE*”.

8.1.2 Connecting the PC to the RS-232 Port

Before installing the latest Kramer firmware version on a **VP-26** unit, do the following:

1. Connect the RS-232 DB9 rear panel port on the **VP-26** unit to the Null-modem adapter and connect the Null-modem adapter with a 9-wire flat cable to the RS-232 DB9 COM port on your PC (see section 6.4).
2. On the rear panel, push in the FLASH PROG. button (to program), using a screwdriver.
3. Connect the power on the **VP-26** unit and switch it ON.
4. On the rear panel, push in the FLASH PROG. (see Figure 2), using a screwdriver.

¹ The files indicated in this section are given as an example only. These file names are liable to change from time to time

8.1.3 Upgrading Firmware

Follow these steps to upgrade the firmware:

1. Double click the desktop icon: “*Shortcut to FLIP.EXE*”.
The Splash screen appears as follows:

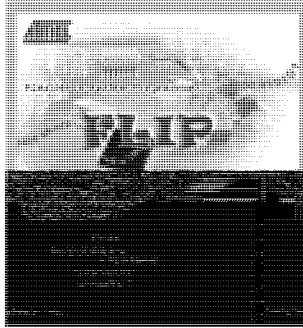


Figure 18: Splash Screen

2. After a few seconds, the Splash screen is replaced by the “*Atmel – Flip*” window:

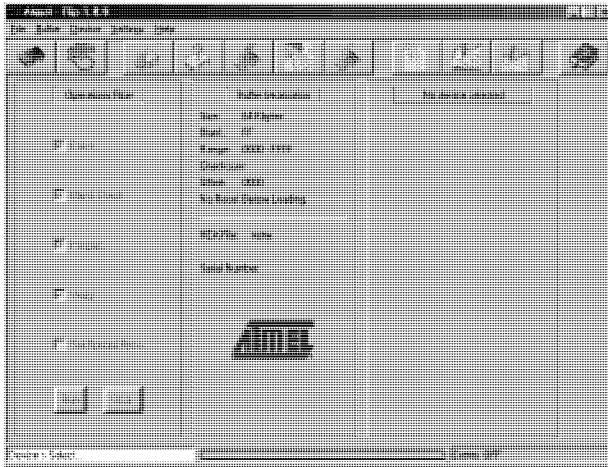


Figure 19: Atmel – Flip Window

3. Press the keyboard shortcut key *F2* (or select the “*Select*” command from the *Device* menu, or press the integrated circuit icon in the upper right corner of the window).
The “*Device Selection*” window appears:

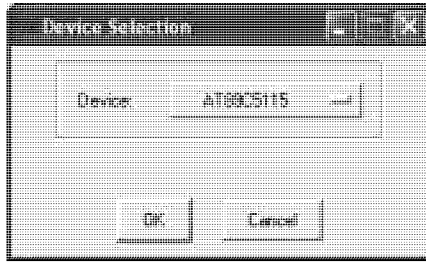


Figure 20: Device Selection Window

4. Click the button next to the name of the device and select from the list: AT89C51RD2:

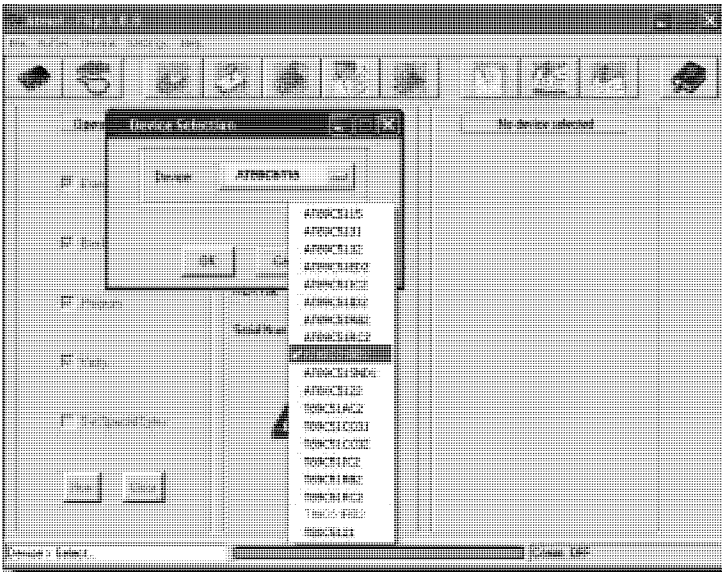


Figure 21: Selecting the Device from the Selection Window

5. Click OK and select "Load Hex" from the File menu.

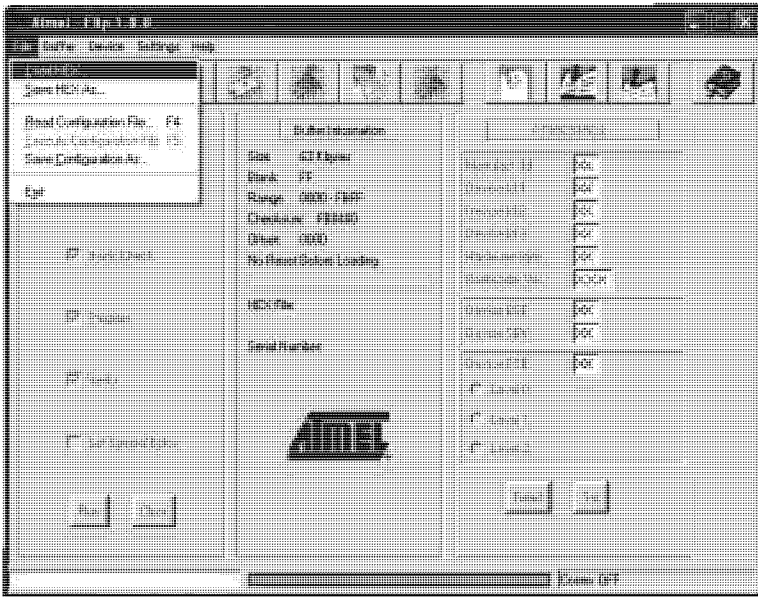


Figure 22: Loading the Hex

6. The Open File window opens. Select the correct HEX file that contains the updated version of the firmware for **VP-26** (for example, *26M_V1p2.hex*) and click Open.
7. Press the keyboard shortcut key *F3* (or select the “*Communication / RS232*” command from the *Settings* menu, or press the keys: *Alt SCR*). The “*RS232*” window appears. Change the COM port according to the configuration of your computer and select the 9600 baud rate:



Figure 23: RS-232 Window

8. Click Connect.
In the “*Atmel – Flip*” window, in the *Operations Flow* column, the *Run* button is active, and the name of the chip appears as the name of the third column: *AT89C51RD2*.

Verify that in the *Buffer Information* column, the “*HEX File: VP26.hex*” appears.

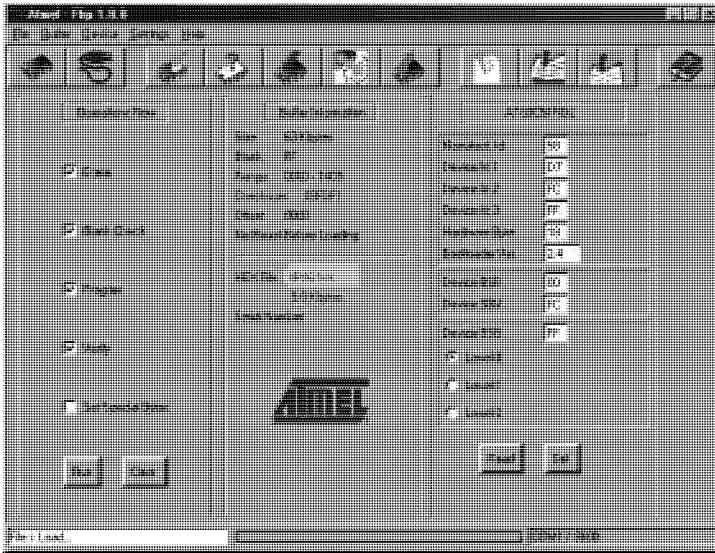


Figure 24: Atmel – Flip Window (Connected)

9. Click *Run*.

After each stage of the operation is completed, the check-box for that stage becomes colored green¹.

When the operation is completed, all 4 check-boxes will be colored green and the status bar message: *Memory Verify Pass* appears²:

¹ See also the blue progress indicator on the status bar

² If an error message: “Not Finished” shows, click Run again

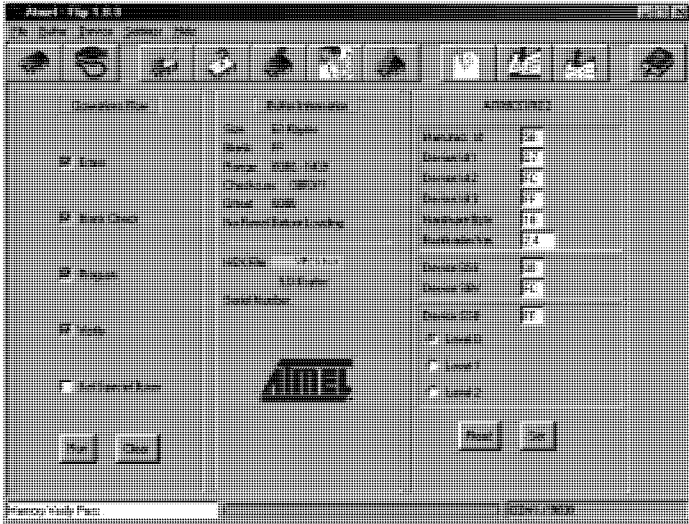


Figure 25: Atmel – Flip Window (Operation Completed)

10. Close the “Atmel – Flip” window.
11. Disconnect the power on the **VP-26**.
12. Disconnect the RS-232 rear panel port on the **VP-26** unit from the Null-modem adapter.
13. Release the FLASH PROG. button on rear panel.
14. Connect the power to the **VP-26**.

8.2 Ethernet Flash Memory Upgrade

The **VP-26** firmware is located in FLASH memory, which lets you upgrade to the latest Kramer firmware version in minutes!

The process involves:

- Downloading the upgrade package from the Internet
- Connecting the PC to the RS-232 port
- Upgrading the firmware

8.2.1 Downloading from the Internet

You can download the up-to-date file¹ from the Internet. To do so:

1. Go to our Web site at <http://www.Kramerelectronics.com> and download the file: “SetKFRETH11-xx.zip” from the technical support section.
2. Extract the file “SetKFRETH11-xx.zip” package, which includes the KFR-Programmer application setup and the .s19 firmware file, to a folder (for example, C:\Program Files\KFR Upgrade).
3. Install the KFR-Programmer Application.

8.2.2 Connecting the PC to the RS-232 Port

Before installing the latest Kramer Ethernet firmware version on the **VP-26**, do the following:

1. Connect the RS-232 DB9 port (COM 1) on the **VP-26** to a Null-modem adapter and connect the Null-modem adapter with a 9-wire flat cable to the RS-232 DB9 COM port on your PC.
2. Push in the ETH PROG button, located on the machine rear side.
3. Connect the power on your machine.

8.2.3 Upgrading Firmware

Follow these steps to upgrade the firmware:

1. Double click the KFR-Programmer desktop icon.
The KFR-Programmer window appears (see Figure 26).

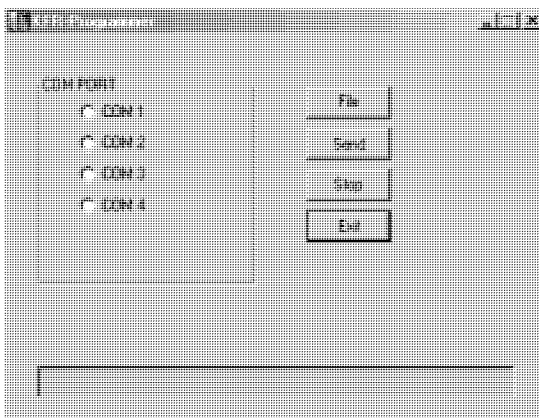


Figure 26: The KFR-Programmer Window

¹ File names are liable to change from time to time

2. Select the required COM Port¹.
3. Press the File button to select the *.s19* firmware file included in the package.
4. Press the Send button to download the file. The Send button lights red.
5. Wait until downloading is completed and the red Send button turns off.
6. Disconnect the power on the **VP-26**.
7. Release the ETH PROG button, located on the machine rear side.
8. Connect the power on your machine.

¹ To which the VP-26 is connected on your PC

9 Technical Specifications

Table 8 includes the technical specifications¹:

Table 8: Technical Specifications of the VP-26 Presentation Switcher

INPUTS:	4 VGA / UXGA on HD15F connectors 4 s-Video, 1 Vpp (Y), 0.3Vpp (C) / 75 Ω on 4p connectors 4 composite video 1Vpp / 75 Ω on BNC connectors 2 sets of component video (Y, Pb/Cb, Pr/Cr) 1Vpp, 0.7Vpp, 0.7Vpp on RCA connectors Each input is accompanied by the appropriate balanced stereo-audio channels: +4dBm / 50 kΩ on detachable terminal block connectors Mic: 3mV / 10 kΩ condenser / dynamic on an XLR connector	
OUTPUTS:	2 VGA / UXGA on HD15F connectors 2 s-Video - 1 Vpp (Y), 0.3Vpp (C), / 75 Ω on 4p connectors 2 composite video 1 Vpp / 75 Ω on BNC connectors 2 sets of component video (Y, Pb/Cb, Pr/Cr) 1Vpp, 0.7Vpp, 0.7Vpp on RCA connectors 1 UTP CAT5 connector (Line OUT) Each output is accompanied by the appropriate balanced stereo-audio channel: +4dBm / 150 Ω on detachable terminal blocks 1 master stereo audio +4dBm / 150 Ω on a detachable terminal block 1 stereo speaker output 2x5W continuous into 4Ω	
MAX. OUTPUT LEVEL:	VIDEO: VGA/UXGA: 2.85Vpp; YC: 2.8Vpp; CV: 3.8Vpp; Component video 2.7Vpp; CAT5: 2Vpp	AUDIO: Group: 20dBm Master: 15dBm
BANDWIDTH (-3dB):	VIDEO: VGA/UXGA: 300MHz; YC: 320MHz; CV: 420MHz; Component video: 380MHz; CAT5: up to UXGA	AUDIO: Group: 46kHz Speakers: 40kHz Master: 33kHz
DIFF. GAIN:	VGA / UXGA: 0.15%; YC: 0.03%; CV: 0.03%; CAT5: 6.4%	
DIFF. PHASE:	VGA / UXGA: 0.09 Deg.; YC: 0.03 Deg.; CV: 0.03 Deg.; CAT5: 0.2 Deg.	
K-FACTOR:	<0.1%	
S/N RATIO:	VIDEO: VGA / UXGA: 75dB YC: 81dB; CV: 75dB; Component video: 76dB; CAT5: 59dB; (unweighted)	AUDIO: Group: 74dB Speakers: 53dB (max pwr weighted) Master out: 72dB
CROSSTALK (all hostile):	VIDEO: VGA / UXGA: -45dB; YC: -48dB; CV: -41dB; Component video: -43dB	AUDIO: Group: < -76dB Master: < -69dB @ 1kHz
CONTROLS:	Channel selector for video and audio, for VGA / UXGA, YC and CV; master audio output selector, master audio level, mic audio level, talkover, lock, RS-232, RS-485, Ethernet, IR	
COUPLING:	VIDEO: VGA / UXGA, YC and CV: DC	AUDIO: AC, input and output
AUDIO THD + NOISE@1kHz:	Group: 0.08%; Speakers: 2% (max pwr); Master: 0.25%	
AUDIO 2nd HARMONIC:	Group: 0.065%; Speakers: 1.6% (max pwr); Master: 0.155%	
POWER SOURCE:	100 - 264VAC, 50/60Hz, 37VA	
DIMENSIONS:	19-inch (W), 7-inch (D) 2U (H) rack-mountable	
WEIGHT:	3.8 kg (8.4 lbs.) approx.	
ACCESSORIES:	Power cord, Null modem adapter, Windows®-based Kramer control software, Windows®-based Ethernet Configuration Manager and Virtual Serial Port Manager, Infra-red remote control transmitter	

¹ Specifications are subject to change without notice



10 Hex Table

Table 9 and Table 10 list the Hex values (which the protocol in section 11 describes in more detail) for the **VP-26 Presentation Switcher**. RS-232 communication is at 9600 baud, no parity, 8 data bits and 1 stop bit.

Table 9: VP-26 Hex Table Video and Audio In-group IN-OUT 1 Selector

Inputs		VGA OUT 1	Composite Video OUT 1	s-Video OUT 1	Component Video OUT 1
Group	#				
VGA	In 1	01 81 81 81			
	In 2	01 82 81 81			
	In 3	01 83 81 81			
	In 4	01 84 81 81			
Composite Video	In 1		01 81 82 81		
	In 2		01 82 82 81		
	In 3		01 83 82 81		
	In 4		01 84 82 81		
s-Video	In 1			01 81 83 81	
	In 2			01 82 83 81	
	In 3			01 83 83 81	
	In 4			01 84 83 81	
Component Video	In 1				01 81 84 81
	In 2				01 82 84 81

Table 10: VP-26 Hex Table Video and Audio In-group IN-OUT 2 Selector

Inputs		VGA OUT 2	Composite Video OUT 2	s-Video OUT 2	Component Video OUT 2
Group	#				
VGA	In 1	01 81 85 81			
	In 2	01 82 85 81			
	In 3	01 83 85 81			
	In 4	01 84 85 81			
Composite Video	In 1		01 81 86 81		
	In 2		01 82 86 81		
	In 3		01 83 86 81		
	In 4		01 84 86 81		
s-Video	In 1			01 81 87 81	
	In 2			01 82 87 81	
	In 3			01 83 87 81	
	In 4			01 84 87 81	
Component Video	In 1				01 81 88 81
	In 2				01 82 88 81

Table 11: VP-26 Master Audio Selector Hex Table

Master Audio Selector (Group Audio OUT)	Audio Master OUT
VGA Audio OUT 1	02 81 81 81
Composite Video Group Audio OUT 1	02 82 81 81
s-Video Group Audio OUT 1	02 83 81 81
Component Video Group Audio OUT 1	02 84 81 81
VGA Audio OUT 2	02 85 81 81
Composite Video Group Audio OUT 2	02 86 81 81
s-Video Group Audio OUT 2	02 87 81 81
Component Video Group Audio OUT 2	02 88 81 81
Microphone	02 8A 81 81
Disconnect All	02 80 81 81

10.1 Audio Gain Control Hex Tables

The following tables describe the audio gain controls.

Table 12: Set the Audio OUT 1 Gain Control for the Groups

Audio Gain Control for Groups				
VGA 1	Composite Video 1	s-Video 1	Composite Video 1	Notes
16 81 80 81	16 82 80 81	16 83 80 81	16 84 80 81	Mute
⋮	⋮	⋮	⋮	
16 81 EC 81	16 82 EC 81	16 83 EC 81	16 84 EC 81	0dB (1:1)
⋮	⋮	⋮	⋮	
16 81 FF 81	16 82 FF 81	16 83 FF 81	16 84 FF 81	9dB

Table 13: Set the Audio OUT 2 Gain Control for the Groups

Audio Gain Control for Groups				
VGA 2	Composite Video 2	s-Video 2	Composite Video 2	Notes
16 85 80 81	16 86 80 81	16 87 80 81	16 88 80 81	Mute
⋮	⋮	⋮	⋮	
16 85 EC 81	16 86 EC 81	16 87 EC 81	16 88 EC 81	0dB (1:1)
⋮	⋮	⋮	⋮	
16 85 FF 81	16 86 FF 81	16 87 FF 81	16 88 FF 81	9dB

Table 14: Set the Audio Output Gain Control for the Microphone

Audio Gain Control for Microphone	
16 8A 80 81	Mute
⋮	
16 8A CD 81	
⋮	
16 8A FF 81	Maximum

Table 15: Set the Audio Output Gain Control for the Master Audio

Audio Gain Control for Master Out	
16 89 80 81	Mute
⋮	
16 89 F9 81	0dB
⋮	
16 89 FF 81	3dB

Table 16: Increase or Decrease the Audio Out 1 Gain by One Step

	VGA OUT 1	Composite Video OUT 1	s-Video OUT 1	Component Video OUT 1	Master Out	Microphone
Increase	18 81 80 81	18 82 80 81	18 83 80 81	18 84 80 81	18 89 80 81	18 8A 80 81
Decrease	18 81 81 81	18 82 81 81	18 83 81 81	18 84 81 81	18 89 81 81	18 8A 81 81
	VGA OUT 2	Composite Video OUT 2	s-Video OUT 2	Component Video OUT 2		
Increase	18 85 80 81	18 86 80 81	18 87 80 81	18 88 80 81		
Decrease	18 85 81 81	18 86 81 81	18 87 81 81	18 88 81 81		

11 Communication Protocol

This protocol, which enables RS-232 communication between the **VP-26** and the PC, uses 4 bytes of information, and data is at 9600 baud, no parity, 8 data bits and 1 stop bit.

Table 17: Protocol Definitions

MSB		INSTRUCTION						LSB	
DESTINATION		N5	N4	N3	N2	N1	N0		
0	D								
7	6	5	4	3	2	1	0		
1st byte									
				INPUT					
1	0	0	0	0	I2	I1	I0		
7	6	5	4	3	2	1	0		
2nd byte									
				OUTPUT					
1	0	0	0	0	0	O1	O0		
7	6	5	4	3	2	1	0		
3rd byte									
				MACHINE NUMBER					
1	0	0	0	M3	M2	M1	M0		
7	6	5	4	3	2	1	0		
4th byte									

1st BYTE: Bit 7 – Defined as 0.

D – “DESTINATION BIT”.

This bit is always low, when sending from the PC to the switchers, and high for information sent to the PC.

N5...N0 – “INSTRUCTION”.

These 6 bits define the function that is to be performed by the switcher(s). Similarly, if a function is performed via the machine’s keyboard, then these bits are set with the INSTRUCTION NO, which was performed. The instruction codes are defined according to the table below (INSTRUCTION NO. is the value to be set for N5...N0).

2nd BYTE: Bit 7 – Defined as 1.
Bits 3 – 6 - Defined as 0.
I2... I0 – “INPUT”.

For disconnect, set as 0. For other operations, these bits are defined according to Table 18.

3rd BYTE: Bit 7 – defined as 1.
Bits 2-6 defined as 0.
O1, O0 – “OUTPUT”

For operations, these bits are defined according to Table 18.

4th BYTE: Bit 7 – Defined as 1.

Bits 3-6 Defined as 0.

M3... M0 – “MACHINE NUMBER”.

MACHINE NUMBER = (DIPSWITCH CODE) + 1.

Table 18: Instruction Codes

INSTRUCTION		DEFINITION FOR SPECIFIC INSTRUCTION		NOTE
#	DESCRIPTION	INPUT	OUTPUT	
0	RESET MACHINE	0	0	1
1	SWITCH GROUPS	1-4 Set equal to video and audio inputs to be switched for the relative group	1-8 Set equal to group to which output is to be switched	2
2	SWITCH AUDIO OUTPUTS	1-10* Set equal to audio output to be switched to Master Audio out	1	2
5	REQUEST GROUP STATUS	0	1-8 Set equal to the group of which status is required	3
6	REQUEST STATUS OF MASTER AUDIO OUTPUT	0	1	3
8	BREAKAWAY SETTING	0	0 – Audio-follow-video 1 – Audio breakaway	2
11	REQUEST BREAKAWAY SETTING	0	0	3
16	ERROR	Don't care	0 – Invalid instruction 1 – Out of range	4
18	RESET MACHINE	0	0	1
22	SET AUDIO GAIN OF AUDIO OUTPUT	1-10*	Gain value	7
24	INCREASE/DECREASE AUDIO GAIN	1-10*	0 – Increase gain 1 – Decrease gain	8
25	REQUEST GAIN	1-10*	0 – Video gain 1 – Audio gain	3, 9
30	LOCK FRONT PANEL	0 – Panel unlocked 1 – Panel locked	0	
31	REQUEST WHETHER PANEL IS LOCKED	0	0	3
57	SET AUTO SAVE	1 – Autosave 2 – No save	Don't care	5
61	IDENTIFY MACHINE	1 or 2 – Machine name 3 or 4 – Program version	0 – request first 4 digits 1 – request first suffix 10 – request first prefix	6
62	DEFINE MACHINE	1 – Number of inputs 2 – Number of outputs	1 – For video 2 – For audio	3

* 1 – for VGA1, 2 – for CV1, 3 – for SV1, 4 – for YUV1, 5 – for VGA2, 6 – for CV2, 7 – for SV2, 8 – for YUV2, 9 – for master audio, 10 – for microphone

NOTES on to Table 18:

NOTE 1

When the master switcher is reset, (e.g. when it is turned on), the reset code is sent to the PC. If this code is sent to the switchers, it will reset according to the present power-down settings.

NOTE 2

These are bi-directional definitions. That is, if the switcher receives the code, it will perform the instruction; and if the instruction is performed (due to a keystroke operation on the front panel), then these codes are sent. For example, if:

0000 0001 Instruction "Switch Groups"
1000 0010 Input #2
1000 1001 in composite video group
1000 0001 Machine #1 (master)

Was sent from the PC, then the switcher (machine #1) will switch input 2 in composite video group to its output. If the user switched input 4 in the VGA group via the front panel keypad, then the switcher will send:

0100 0001
1000 0100
1000 0011
1000 0001 to the PC.

When the PC sends instruction #1 or #2 to the switcher, then, if the instruction is valid, the switcher replies by sending the same four bytes to the PC that were sent (except for the first byte, where the DESTINATION bit is set high).

NOTE 3

The reply to a "REQUEST" instruction is as follows: the same instruction and input codes as were sent are returned, and the OUTPUT is assigned to the value of the requested parameter. The reply to the instruction #5 (what is the status of the VGA group?):

```
0000 0101
1000 0000
1000 0011
1000 0001
Would be:
0100 0101
1000 0000
1000 0100
1000 0001
```

NOTE 4

An error code is returned to the PC if an invalid code was sent to the switcher (for example, when trying to switch an input or a group which is greater than the highest one defined). This code is also returned to the PC if an RS-232 instruction is sent while the machine is being programmed via the front panel. Reception of this code by the switcher will not be valid.

NOTE 5

Under normal conditions, the machine's present status is saved each time a change is made. The power-down save (the auto save) may be disabled using this code. Note that each time that the machine is turned ON, the auto save function is automatically set.

NOTE 6

This is a request to identify the switchers in a system. If the INPUT is set as 1 or 2, the machine will send its name. The reply is the decimal value of the INPUT and the OUTPUT. For example, the reply to the request to send the machine's name (for machine #001) will be:

```
0111 1101
1000 0000 (i.e. 128+0)
1001 0111 (i.e. 128+23)
1000 0001
```

If the request for identification is sent with the INPUT set as 3 or 4, the appropriate machine will send its software version number. Again, the reply would be the decimal value of the INPUT and OUTPUT - the INPUT representing the number in front of the decimal point, and the OUTPUT representing the number following the decimal point. For example, for version 3.5 the reply will be:

```
0111 1101
1000 0011 (i.e. 128+3)
1000 0101 (i.e. 128+5)
1000 0001
```

NOTE 7

GAIN VALUE – Number from 0 to 127

NOTE 8

Answer = Current Audio Gain (0–127)

LIMITED WARRANTY

Kramer Electronics (hereafter *Kramer*) warrants this product free from defects in material and workmanship under the following terms.

HOW LONG IS THE WARRANTY

Labor and parts are warranted for seven years from the date of the first customer purchase.

WHO IS PROTECTED?

Only the first purchase customer may enforce this warranty.

WHAT IS COVERED AND WHAT IS NOT COVERED

Except as below, this warranty covers all defects in material or workmanship in this product. The following are not covered by the warranty:

1. Any product which is not distributed by Kramer, or which is not purchased from an authorized Kramer dealer. If you are uncertain as to whether a dealer is authorized, please contact Kramer at one of the agents listed in the Web site www.kramerelectronics.com.
2. Any product, on which the serial number has been defaced, modified or removed.
3. Damage, deterioration or malfunction resulting from:
 - i) Accident, misuse, abuse, neglect, fire, water, lightning or other acts of nature
 - ii) Product modification, or failure to follow instructions supplied with the product
 - iii) Repair or attempted repair by anyone not authorized by Kramer
 - iv) Any shipment of the product (claims must be presented to the carrier)
 - v) Removal or installation of the product
 - vi) Any other cause, which does not relate to a product defect
 - vii) Cartons, equipment enclosures, cables or accessories used in conjunction with the product

WHAT WE WILL PAY FOR AND WHAT WE WILL NOT PAY FOR

We will pay labor and material expenses for covered items. We will not pay for the following:

1. Removal or installations charges.
2. Costs of initial technical adjustments (set-up), including adjustment of user controls or programming. These costs are the responsibility of the Kramer dealer from whom the product was purchased.
3. Shipping charges.

HOW YOU CAN GET WARRANTY SERVICE

1. To obtain service on your product, you must take or ship it prepaid to any authorized Kramer service center.
2. Whenever warranty service is required, the original dated invoice (or a copy) must be presented as proof of warranty coverage, and should be included in any shipment of the product. Please also include in any mailing a contact name, company, address, and a description of the problem(s).
3. For the name of the nearest Kramer authorized service center, consult your authorized dealer.

LIMITATION OF IMPLIED WARRANTIES

All implied warranties, including warranties of merchantability and fitness for a particular purpose, are limited in duration to the length of this warranty.

EXCLUSION OF DAMAGES

The liability of Kramer for any effective products is limited to the repair or replacement of the product at our option. Kramer shall not be liable for:

1. Damage to other property caused by defects in this product, damages based upon inconvenience, loss of use of the product, loss of time, commercial loss; or:
2. Any other damages, whether incidental, consequential or otherwise. Some countries may not allow limitations on how long an implied warranty lasts and/or do not allow the exclusion or limitation of incidental or consequential damages, so the above limitations and exclusions may not apply to you.

This warranty gives you specific legal rights, and you may also have other rights, which vary from place to place.

NOTE: All products returned to Kramer for service must have prior approval. This may be obtained from your dealer.

This equipment has been tested to determine compliance with the requirements of:


- EN-50081: "Electromagnetic compatibility (EMC); generic emission standard.
Part 1: Residential, commercial and light industry"
- EN-50082: "Electromagnetic compatibility (EMC) generic immunity standard.
Part 1: Residential, commercial and light industry environment".
- CFR-47: FCC Rules and Regulations:
Part 15: "Radio frequency devices
Subpart B Unintentional radiators"

CAUTION!

- ☒ Servicing the machines can only be done by an authorized Kramer technician. Any user who makes changes or modifications to the unit without the expressed approval of the manufacturer will void user authority to operate the equipment.
- ☒ Use the supplied DC power supply to feed power to the machine.
- ☒ Please use recommended interconnection cables to connect the machine to other components.



For the latest information on our products and a list of Kramer distributors, visit our Web site: www.kramerelectronics.com, where updates to this user manual may be found. We welcome your questions, comments and feedback.

 <p>Caution</p>	<p>Safety Warning: Disconnect the unit from the power supply before opening/servicing.</p>
---	---



Kramer Electronics, Ltd.
Web site: www.kramerelectronics.com
E-mail: info@kramerel.com
P/N: 2900-000218 REV 2