

16_x16
sources displays

Modular Matrix for HDMI with HDCP

GEF-HDFST-MOD-16416-HD
GEF-HDFST-MOD-16416-HDELR

User Manual
Release A1



GefenPRO®

Important Safety Instructions

GENERAL SAFETY INFORMATION

1. Read these instructions.
2. Keep these instructions.
3. Heed all warnings.
4. Follow all instructions.
5. Do not use this product near water.
6. Clean only with a dry cloth.
7. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
8. Do not install or place this product near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
9. Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
10. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
11. Only use attachments/accessories specified by the manufacturer.
12. To reduce the risk of electric shock and/or damage to this product, never handle or touch this unit or power cord if your hands are wet or damp. Do not expose this product to rain or moisture.
13. Unplug this apparatus during lightning storms or when unused for long periods of time.
14. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
15. Batteries that may be included with this product and/or accessories should never be exposed to open flame or excessive heat. Always dispose of used batteries according to the instructions.

RACK MOUNT SAFETY INFORMATION

- a. Maximum recommended ambient temperature: 40 °C (104 °F).
- b. Increase the air flow as needed to maintain the recommended temperature inside the rack.
- c. Do not exceed maximum weight loads for the rack. Install heavier equipment in the lower part of the rack to maintain stability.

Warranty Information

Gefen warrants the equipment it manufactures to be free from defects in material and workmanship.

If equipment fails because of such defects and Gefen is notified within two (2) years from the date of shipment, Gefen will, at its option, repair or replace the equipment, provided that the equipment has not been subjected to mechanical, electrical, or other abuse or modifications. Equipment that fails under conditions other than those covered will be repaired at the current price of parts and labor in effect at the time of repair. Such repairs are warranted for ninety (90) days from the day of reshipment to the Buyer.

This warranty is in lieu of all other warranties expressed or implied, including without limitation, any implied warranty or merchantability or fitness for any particular purpose, all of which are expressly disclaimed.

1. Proof of sale may be required in order to claim warranty.
2. Customers outside the US are responsible for shipping charges to and from Gefen.
3. Copper cables are limited to a 30 day warranty and cables must be in their original condition.

The information in this manual has been carefully checked and is believed to be accurate. However, Gefen assumes no responsibility for any inaccuracies that may be contained in this manual. In no event will Gefen be liable for direct, indirect, special, incidental, or consequential damages resulting from any defect or omission in this manual, even if advised of the possibility of such damages. The technical information contained herein regarding the features and specifications is subject to change without notice.

For the latest warranty coverage information, refer to the Warranty and Return Policy under the Support section of the Gefen Web site at www.gefen.com.

PRODUCT REGISTRATION

Please register your product online by visiting the Register Product page under the Support section of the Gefen Web site.

Contacting Gefen Technical Support

Gefen, LLC
c/o Customer Service
20600 Nordhoff St.
Chatsworth, CA 91311

Telephone: (818) 772-9100
(800) 545-6900

Fax: (818) 772-9120

Email: support@gefenpro.com

Visit us on the Web: www.gefenpro.com

Technical Support Hours: 8:00 AM to 5:00 PM Monday - Friday, Pacific Time

For 24 / 7 support, see the back of the product for the support number

16x16 Modular Matrix for HDMI w/ HDCP
is a trademark of Gefen, LLC.

Important Notice

Gefen, LLC reserves the right to make changes in the hardware, packaging, and any accompanying documentation without prior written notice.

© 2013 Gefen, LLC. All Rights Reserved.
All trademarks are the property of their respective owners.

Operating Notes

- There is no internal scaling in the 16x16 Modular Matrix for HDMI w/ HDCP. All of the attached monitors must be able to display the output resolutions of the source devices. For maximum compatibility it is recommended that only one compatible/common resolution be used by all of the source devices.
- Routing features can be accessed using RS-232 or IP control. See [RS-232 and IP Configuration](#) for more information.
- The 16x16 Modular Matrix for HDMI w/HDCP is available in several pre-configured versions to meet the requirements of your particular application. This User Manual covers both configurations. See [Pre-Configured Options](#) for additional information.

Features and Packing List

Features

- Supports resolutions up to 1080p Full HD
- HDMI Features Supported
 - ▶ HDCP compliant
 - ▶ 12-bit Deep Color
 - ▶ LPCM 7.1, Dolby® TrueHD, and DTS-HD Master Audio™
 - ▶ Lip-Sync pass-through
- ELR and HDBaseT® technologies allow extension up to 330 feet (100 meters)
- POL feature provides power to each ELR receiver through the CAT-5e cable
- Gefen FST speeds up the HDCP authentication process
- Fast and Slow FST Modes
- Advanced EDID management for rapid integration of sources and displays
- Front-panel display for status feedback
- Front-panel push buttons for local switching
- IP controlled via built-in web server, Telnet, and UDP
- RS-232 Serial interface for remote control via an automation control system
- IR control of the matrix via front panel sensor and from each Receiver location
- Broadcast of IR commands from the matrix side to all viewing locations, and from each receiver location to the matrix all sources
- Routing states can be stored and recalled at the touch of a button
- Output masking command
- Stand-by mode
- Field upgradable firmware via USB or IP
- Dual redundant hot-swappable power supplies
- Rack-mountable



Packing List

See [Pre-Configured Options](#) for packing list details for each pre-configured option. If any of these items are not present in your box when you first open it, immediately contact your dealer or Gefen.

Table of Contents

01 Getting Started

Pre-Configured Options.....	2
Panel Layout	3
Front Panel.....	3
Back Panel.....	4
Installation	6
Sample Wiring Diagram	6
GEF-HDFST-MOD-16416-HD	7
GEF-HDFST-MOD-16416-HDELR	7

02 Operating the 16x16 Modular Matrix for HDMI w/ HDCP

Basic Operation.....	12
Standby Mode	12
Powering the Matrix	12
Accessing the Menu System.....	13
Menu System	15
IP Configuration Menu	15
Temperature Menu.....	17
LCM Contrast Menu.....	18
Routing Basics	19
Routing a Source to an Output.....	19
Routing a Source to Multiple Outputs	21
Routing a Source to All Outputs.....	23
Saving a Routing Preset	25
Recalling a Saved Routing Preset	26
Locking the Matrix	27
IR Control	28
Using PACS to Control Display Devices.....	28
Controlling the Source Device.....	29
Controlling Multiple Sources	30

03 Advanced Operation

RS-232 and IP Configuration	34
RS-232 Interface	34
RS-232 Settings	34
IP / UDP Configuration.....	35
Commands.....	36
IP Configuration	36
UDP Configuration	47
FST	51
Routing and Masking	54
System	64

Web Interface	84
Using the built-in Web Server	84
Main ► Routing	85
Main ► I/O Status	91
Main ► Display Info	93
I/O Setup ► Preset Names	94
I/O Setup ► I/O Names	95
I/O Setup ► HPD Control	96
I/O Setup ► FST	97
I/O Setup ► HDCP	98
Manage EDID ► Assign	99
Manage EDID ► Bank Names	102
Manage EDID ► Upload/Download	103
Configuration ► Change IP Settings	104

04 Appendix

Card Removal and Installation	112
Power Supply Failure and Replacement	115
Power Supply Failure	115
Power Supply Replacement	116
Firmware Upgrade Procedure	118
Upgrading using the Web interface	118
Upgrading using USB	119
Specifications	120

16_x16
sources displays

**Modular Matrix for
HDMI with HDCP**

01 Getting Started

Pre-Configured Options

The following list outlines the available pre-configured options. Because this User Manual covers information on all available configurations, it is important to identify the type of 16x16 Modular Matrix for HDMI w/ HDCP that was purchased.

► **16 HDMI Inputs / 16 HDMI Outputs (GEF-HDFST-MOD-16416-HD)**

Two input cards. Each card uses eight HDMI inputs, providing a total of 16 HDMI inputs.

Two output cards. Each card uses eight HDMI outputs, providing a total of 16 HDMI outputs.

Packing List:

- (1) 16x16 Modular Matrix for HDMI w/ HDCP Frame
- (2) Modular Matrix 8 HDMI Input Cards
- (2) Modular Matrix 8 HDMI Output Cards
- (1) DB-9 cable
- (2) AC power cords
- (1) Quick-Start Guide

► **16 HDMI Input / 16 CAT-5 ELR-POL Outputs (GEF-HDFST-MOD-16416-HDELR)**

Two input cards. Each card uses eight HDMI inputs, providing a total of 16 HDMI inputs.


Two output cards. Each card uses eight ELR-POL outputs. Each of these ELR-POL outputs are connected to a Receiver unit, using a CAT-5e cable, allowing you to extend the HDMI signal up to 330 feet (100 meters). 16 ELR-POL Receiver units are included with this package option.

Packing List:

- (1) 16x16 Modular Matrix for HDMI w/ HDCP Frame
- (2) Modular Matrix 8 HDMI Input Cards
- (2) Modular Matrix 8 HDMI Sender over CAT-5 Cards
- (16) HDMI ELR Receivers with POL
- (1) DB-9 Cable
- (2) AC Power Cords
- (1) Quick-Start Guide

Panel Layout


Front Panel

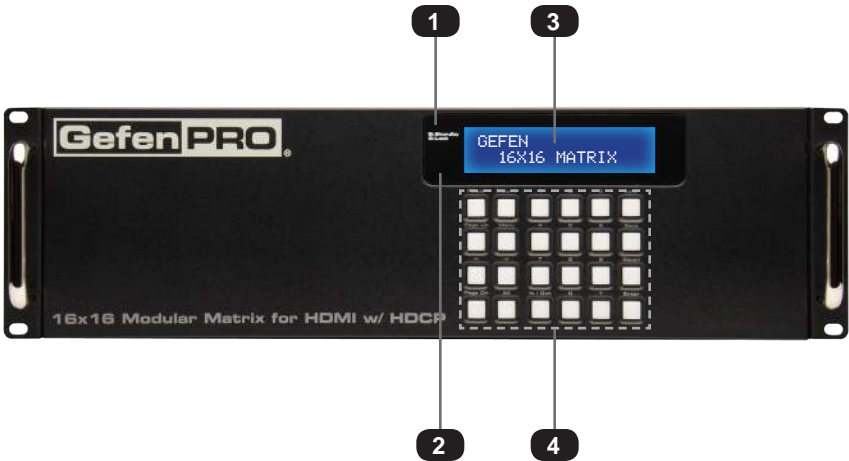

ID	Name	Description
1	Standby / Lock (LED)	When the matrix is in standby mode, this LED indicator will glow bright blue. When the matrix is locked, the LED indicator will glow bright green. See Locking the Matrix for more information.
2	IR sensor	This IR sensor receives signals from an IR remote.
3	Front panel display	Provides feedback and matrix status during various operations.
4	Front panel buttons	Used to control various features on the Matrix. See the section Basic Operation for more information.

Back Panel

(GEF-HDFST-MOD-16416-HDELRL shown)

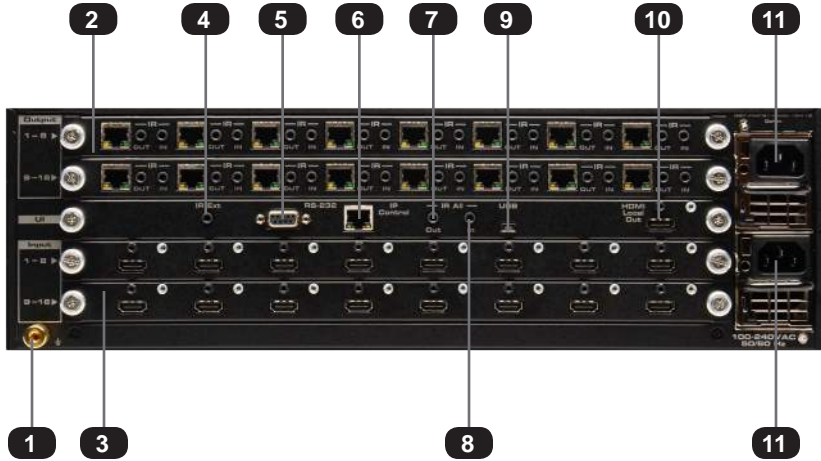

ID	Name	Description
1	Grounding terminal	Connect a grounding wire from the grounding terminal to an approved ground path.
2	Output (1 - 16)	These two expansion bays accept Output cards, only (HDMI or ELR).
3	Input (1 - 16)	These two expansion bays accept Input cards, only (HDMI).
4	IR Ext	Connect an IR Extender (Gefen part no. EXT-RMT-IREXT) to this port.
5	RS-232	Connect the included RS-232 cable from this port to an RS-232 device. See RS-232 and IP Configuration for more information.
6	IP Control	Connect an Ethernet cable between this jack and a LAN to use IP control. See RS-232 and IP Configuration for more information.


7	IR All (Out)	Connect an IR blaster to this port to send IR commands to multiple devices. This port is only active if the unit is configured with the ELR-POL Output option.
8	IR All (In)	This port is designed to be used with automation devices such as the Gefen PACS (Gefen part no. EXT-PACS). Connect the IR cable from an IR Emitter port on the PACS to this IR port. This port is only active if the unit is configured with the ELR-POL Output option.
9	USB	This mini USB port is used for upgrading the firmware. See Upgrading using USB for more information.
10	HDMI Local Out	Connect a local HDTV display to this HDMI port. This port is useful for monitoring the currently routed input signal.
11	IEC connector	Connect the included AC power cords from these power receptacles to available electrical outlets.

Installation

As there are several versions of the 16x16 Modular Matrix for HDMI w/HDCP available, each version will be covered. Locate the connection instructions for the version which was purchased. The wiring diagram at the bottom of the page provides a general reference for connecting the 16x16 Modular Matrix for HDMI w/ HDCP.

- ▶ GEF-HDFST-MOD-16416-HD
- ▶ GEF-HDFST-MOD-16416-HDELRL

Sample Wiring Diagram

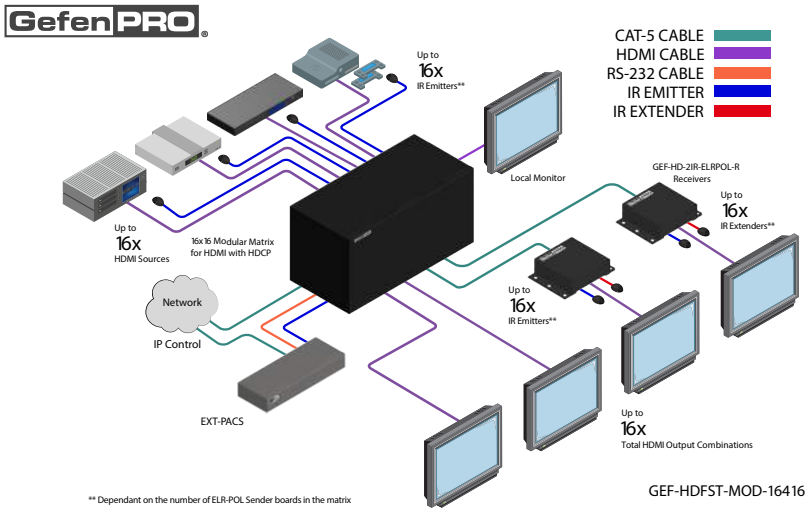


WARNING: Both power supplies should always be connected to grounded electrical AC outlets. Each power cord should be connected to an electrical outlet on a separate circuit.

GEF-HDFST-MOD-16416-HD

1. Connect up to 16 Hi-Def sources to the HDMI inputs on the rear panel of the 16x16 Modular Matrix for HDMI w/ HDCP using HDMI cables.
2. Connect up to 16 HDTV displays to the HDMI outputs on the rear panel of the 16x16 Modular Matrix for HDMI w/ HDCP.
3. Connect both AC power cords from the 16x16 Modular Matrix for HDMI w/ HDCP to available electrical outlets. Connecting both AC power cords will provide redundancy should one of the power supplies fail. It is recommended that each power cord be connected to an electrical outlet on a separate circuit.

GEF-HDFST-MOD-16416-HDELRL

1. Connect up to 16 Hi-Def sources to the HDMI inputs on the rear panel of the 16x16 Modular Matrix w/ HDCP using HDMI cables.
2. Connect a CAT-5e cable (or better), up to 330 feet (100 meters) from each ELR-POL jack on the Sender card to each of the included ELR-POL Receiver units, as shown below.

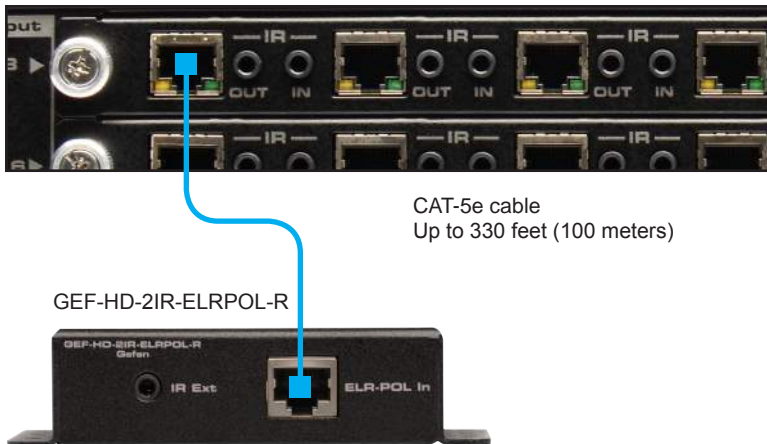


Once the matrix is powered, the Link indicators will glow bright green to indicate a solid link between the output card and the Receiver unit.

The POL indicators will glow bright amber to indicate that the Receiver unit is being powered.

(continued on next page)

3. Connect an HDMI cable from the **HDMI Out** port on each ELR-POL Receiver unit to an HDTV display.

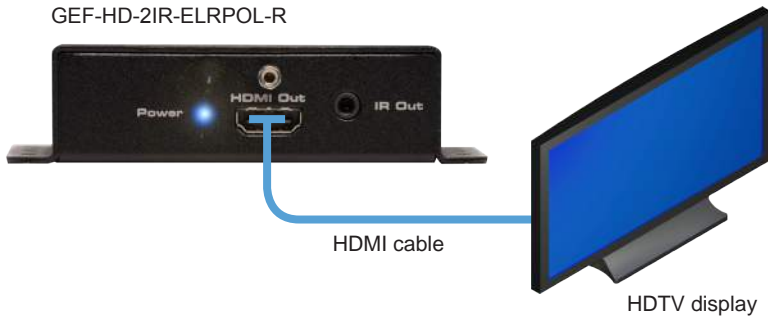

4. Connect both AC power cords from the 16x16 Modular Matrix for HDMI w/ HDCP to available electrical outlets. Connecting both AC power cords will provide redundancy should one of the power supplies fail. It is recommended to connect each power cord to electrical outlets on two separate circuits.

Power to the Receiver unit is delivered from the power supply in the matrix over the CAT-5e cable using Gefen Power Over Line (POL) technology. The Link indicator will glow bright green to indicate a solid connection between the matrix and the Receiver unit. The Power indicator will glow bright blue to indicate that the Receiver unit is being powered.

If either of these LED indicators are OFF, inspect the CAT-5 cable for loose connections or possible defects.

16x16
sources displays


**Modular Matrix for
HDMI with HDCP**

02 Operating the 16x16 Modular Matrix for HDMI w/ HDCP

Basic Operation

Standby Mode

After the AC power cord(s) is/are connected to the matrix, the LED indicator next to the display will glow bright blue. The matrix is now in *standby mode*.

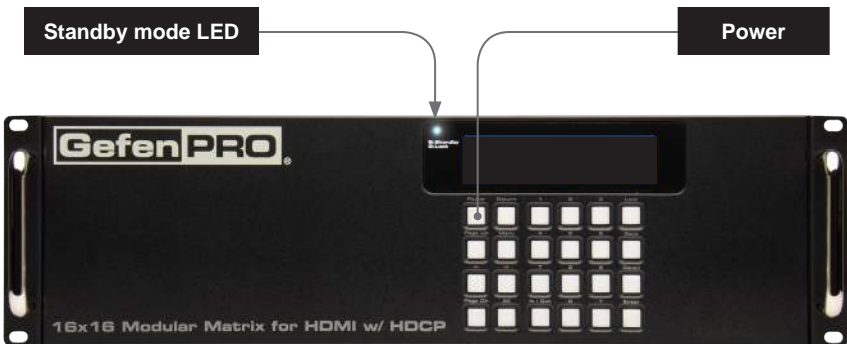

Standby mode is similar to powering-off the matrix. However, in standby mode, the matrix can be powered-on by executing the `#power` command. See [RS-232 and IP Configuration](#) for more information on using the RS-232 / IP commands.

Powering the Matrix


1. From *standby mode*, press the **Power** button on the front panel.
2. The standby mode LED will turn off.
3. After a few moments, the *home screen* will be displayed:



4. To return to *standby mode*, press the **Power** button on the front panel.

Accessing the Menu System

The 16x16 Modular Matrix for HDMI w/ HDCP uses a built-in menu system which provides access to other non-routing functions. Use the **Menu** button to access the menu system.

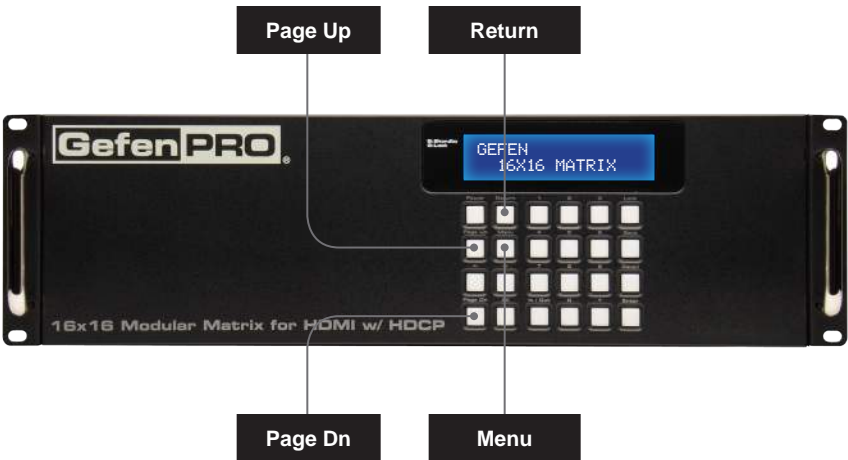

1. From the *home screen*, press the **Menu** button.
2. To cycle through each of the menus, do one of the following:
 - ▶ Consecutively press the **Menu** button. Using the **Menu** button will move forward through each of the menus.
 - ▶ Use the **Page Up** or **Page Dn** buttons. Use the **Page Up** button to go backward through each menu system. Use the **Page Dn** button to go forward through the menu system.
3. Press the **Return** button at any time to return to the *home screen*.



(continued on next page)

Display	Description
1. IP CONFIG	Allows IP configuration for the following: IP address, Net mask, and Gateway address. See RS-232 and IP Configuration for more information.
2. TEMPERATURE	Provides temperature information of the internal boards. See Temperature Menu for more information.
3. LCM CONTRAST	Allows contrast adjustment of the front-panel display. See LCM Contrast Menu for more information.

Menu System

IP Configuration Menu

The 16x16 Modular Matrix for HDMI w/ HDCP can be controlled using the built-in Web interface, Telnet, or UDP protocols. In order to use these communication methods, the IP settings of the matrix must be set accordingly. The IP Configuration menu displays the current IP address, net mask, and gateway address for the matrix.




NOTE: Depending upon the network, all related IP, Telnet, and UDP settings will need to be assigned. IP settings cannot be changed using the front-panel buttons and must be configured using the RS-232 / IP command set. See [RS-232 and IP Configuration](#) for more information.

1. From the *home screen*, press the **Menu** button. The **IP Config** menu will be displayed.


```
1. IP CONFIG
```

2. Press the **Enter** button to enter the **IP Config** menu. The current IP address of the matrix will be displayed.

```
1A. IP ADDRESS:
192.168.1.239
```

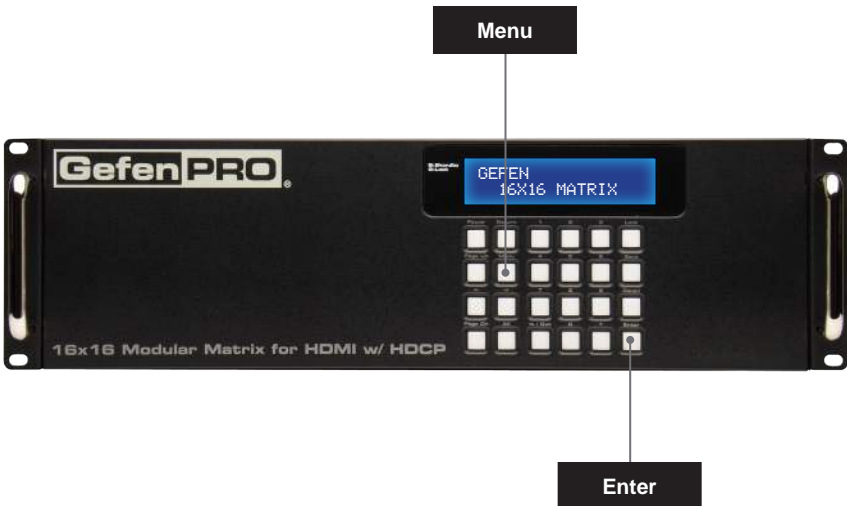

- Press the ← or → button to move backward or forward, respectively, to display the current IP address, net mask, and gateway address of the matrix.

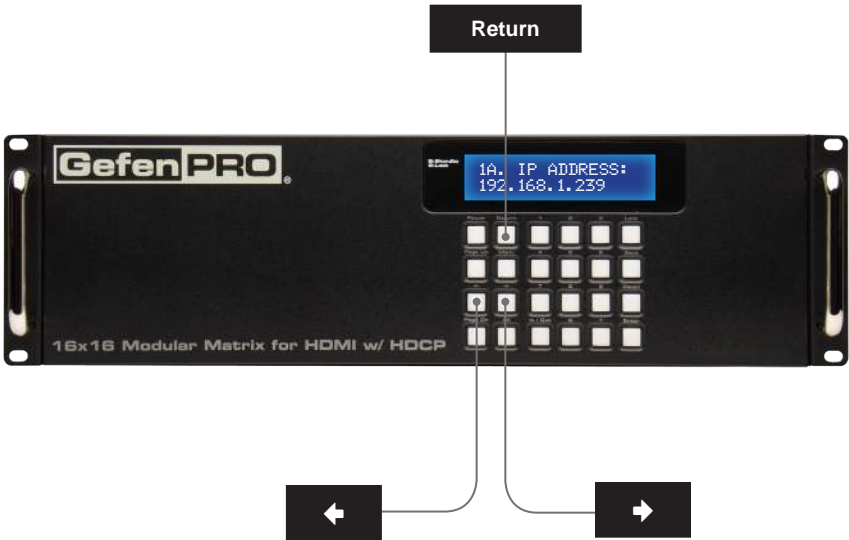

Display	Description
<pre>1A. IP ADDRESS: 192.168.1.239</pre>	Displays the current IP address of the matrix. Use the <code>#sipadd</code> command to change the IP address.
<pre>1B. NETMASK 255.255.255.0</pre>	Displays the subnet mask of the matrix. Use the <code>#snetmask</code> command to change the subnet mask.
<pre>1C. GATEWAY 192.168.1.1</pre>	Displays the gateway address of the matrix. Use the <code>#sgateway</code> command to change the gateway address.

- Press the **Return** button, twice, to return to the *home screen*.

Temperature Menu

Temperature data within the enclosure can be reported using the buttons on the front panel.

1. From the *home screen*, press the **Menu** button. The **IP Config** menu will be displayed.



```
1. IP CONFIG
```

2. Consecutively press the **Page Up** or **Page Dn** button until the **Temperature** menu is displayed.



```
2. TEMPERATURE
```

3. Press the **Enter** button to enter the **Temperature** menu. The temperature for each of the internal boards will be displayed.



```
2A. T1: 44.375°C  
T2: 43.250°C
```

4. Press the **Return** button, twice, to return to the *home screen*.



```
GEFEN  
16X16 MATRIX
```

LCM Contrast Menu

The LCM Contrast Menu is used to adjust the visual intensity (contrast) of the characters in the front-panel display. The contrast can be set to four different levels of intensity. The default value is 4.

1. From the *home screen*, press the **Menu** button. The **IP Config** menu will be displayed.



```
1. IP CONFIG
```

2. Consecutively press the **Page Up** or **Page Dn** button until the **LCM Contrast** menu is displayed.



```
3. LCM CONTRAST
```

3. Press the **Enter** button to enter the **LCM Contrast** menu.



```
3A. CONTRAST:  
RANGE: 1-4
```

4. Enter a number between 1 and 4, using the keypad on the front panel. For example, to set the contrast to 1, press button 1 on front panel. Once the desired button is pressed, the value will appear in the display and the setting will take effect. If another setting is desired, enter a number between 1 and 4 to see the effect.



```
3A. CONTRAST: 1  
RANGE: 1-4
```

5. Press the **Enter** button to accept the changes. The display will indicate "OK".



```
3A. CONTRAST: 1  
RANGE: 1-4  OK
```

6. After a few moments, the *home screen* will be displayed.


Routing Basics

Displaying the Current Routing Status

To display the current routing status of the 16x16 Modular Matrix for HDMI w/ HDCP, press the **Page Up** or **Page Dn** buttons.

1. Press the **Page Dn** button on the front panel. The routing status of the first four outputs is displayed.

In the illustration below, we can see that Input 1 is routed to Output 1, Input 7 is routed to Output 2, and so on.

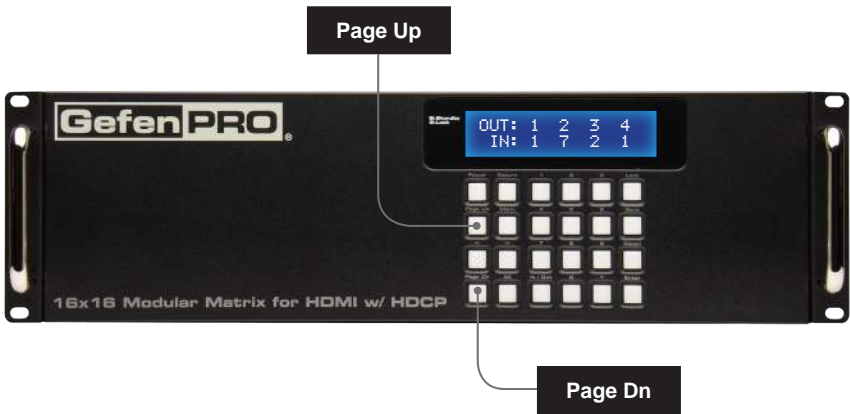

2. Press the **Page Dn** button to view the routing status of the next four inputs / outputs.

```

OUT:  5  6  7  8
IN: 10  4  4  7
  
```

Consecutively press the **Page Dn** button to view the next four outputs. The last item to be displayed will be the routing status of **HDMI Local Out**.

```

OUT: 17 - LOCAL
IN:  3
  
```

Routing a Source to an Output

The following example illustrates how to route a source to an output. An input may be routed to a single or multiple outputs. Multiple inputs cannot be routed to a single output.

1. Press the **In / Out** button on the front panel.



2. The front panel display will indicate that routing mode is active.



3. Select an input (1 - 16) using the numerical keys on the front panel. For this example, we will route Input 15 to Output 12. Enter the input by pressing buttons 1 and 5.



If an incorrect value is entered by accident, use the ← button to delete the last number entered.

4. Press the **In / Out** button, again. The display will change to the following:



OUT:
IN: 15

5. Enter the number of the output using the numerical keys on the front panel. Since we want to route Input 15 to Output 12, we will press buttons 1 and 2. The selected output will appear on the display.



OUT: 12
IN: 15

Once again, if an incorrect output value is entered by accident, use the ← button to delete the last number entered.

If the decision to change the *input* is made, press the **Return** button to go back to the previous screen. The previous input entry will automatically be erased:



PORT SELECT
IN:

6. Once the desired input and output have been entered, press the **Enter** button to execute the routing process. The display will show the following:



OK

7. After a few moments, the *home screen* will be displayed.



GEFEN
16X16 MATRIX

Routing a Source to Multiple Outputs

The following example illustrates how to route a source to multiple outputs.



IMPORTANT: When routing a source to multiple outputs, **HDMI Local Out** (Output 17) is not included as part of the routing process. To route a source to **HDMI Local Out**, it must be performed separately. See [Routing a Source to an Output](#) or [Routing a Source to Multiple Outputs](#).

1. Press the **In / Out** button on the front panel.



2. The front panel display will indicate that routing mode is active.



PORT SELECT
IN:

3. Select an input (1 - 16) using the numerical keys on the front panel.



PORT SELECT
IN: 3

If an incorrect value is entered by accident, use the ← button to delete the last number entered.

4. Press the **In / Out** button, again. The display will change to the following:



```
OUT:  
IN: 3
```

5. Enter the number of the first output using the numerical keys on the front panel. The selected output will appear on the display.



```
OUT: 12  
IN: 3
```

If an incorrect output value is entered by accident, use the ← button to delete the last number entered.

If the decision to change the *input* is made, press the **Return** button to go back to the previous screen. The previous input entry will automatically be erased:

6. Press the **+** button to add another output.




```
OUT: 12  
IN: 3 3
```

7. Enter the desired output. In the example below, we have entered 4.



```
OUT: 12 4  
IN: 3 3
```

8. Repeat steps 6 and 7 to add more outputs.
9. Press the **Enter** button to complete the routing procedure.
10. After a few moments, the *home screen* will be displayed.



```
GEFEN  
16X16 MATRIX
```

Routing a Source to All Outputs

The following example illustrates the process for routing a single input to all outputs, simultaneously.

1. Press the **All** button on the front panel.



2. The display on the front panel will show the following:

SWITCH ALL OUT
TO :

3. Select an input (1 - 16) using the numerical keys on the front panel. For this example, we will route Input 10 to all outputs. Therefore, we'll press buttons 1 and 0.

SWITCH ALL OUT
TO : 10


If an incorrect value is entered by accident, use the ← button to delete the last number entered.

4. Press the **Enter** button on the front panel.
5. The display will indicate that the routing process was successful.



SWITCH ALL OUT
TO : 10 OK

6. After a few moments, the *home screen* will be displayed.



GEFEN
16X16 MATRIX

Saving a Routing Preset

The 16x16 Modular Matrix for HDMI w/ HDCP allows routing (and masking) states to be saved to internal non-volatile memory. Each routing state can be recalled at a later time. Even if the matrix is powered OFF, the presets will be retained in memory.

1. Press the **Save** button on the front panel.



2. The display will show the following:

```
SAVE TO
NO:      (1-8)
```

3. Select a preset (1 - 8) by using the numerical keys on the front panel. For this example, we will save the current routing status to Preset 2 by pressing button **2**.

```
SAVE TO
NO: 2    (1-8)
```

4. Press the **Enter** button to save the current routing state to the preset. The display will indicate that the routing process was successful.

```
SAVE TO
NO: 2 OK  (1-8)
```

5. After a few moments, the *home screen* will be displayed.

Recalling a Saved Routing Preset

The 16x16 Modular Matrix for HDMI w/ HDCP allows saved routing (and masking) states to be recalled from memory for instant access.

In this example, we will recall the routing preset that we stored in the previous example.

1. Press the **Recall** button on the front panel.



Recall

2. The display will show the following:

```
RECALL FROM
NO:          (1-8)
```

3. Select a preset (1 - 8) by using the numerical keys on the front panel. For this example, we will recall Preset 3 by pressing button **3**.

```
RECALL FROM
NO: 3       (1-8)
```

4. Press the **Enter** button to recall the preset.

```
RECALL FROM
NO: 3 OK    (1-8)
```

5. After a few moments, the *home* screen will be displayed.


Locking the Matrix

Locking the matrix will prevent any changes by disabling all buttons (except the **Lock** button) on the front panel. This feature is useful in preventing routing or other changes caused by accidentally bumping or pressing the buttons on the front panel.

1. Press the **Lock** button on the front panel.



2. Once the matrix is locked, the LED indicator next to the display will glow bright green.

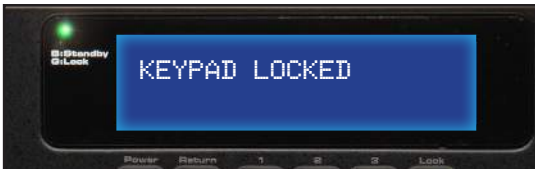

3. To unlock the matrix, press and hold the **Lock** button again, until the LED indicator turns off. The display will return to the *home screen*.




IR Control

The 16x16 Modular Matrix for HDMI w/ HDCP provides IR control. Controlling IR through the matrix can be accomplished using the Gefen PACS (Gefen part no. EXT-PACS) or Mini PACS (Gefen part no. GTB-MINI-PACS). Other IR controllers can also be used. Refer to the user documentation that came with your product for details.


Using PACS to Control Display Devices

1. Connect a 3.5mm-to-3.5mm mini-mono cable from one of the IR Emitter jacks, on the PACS, to the **IR IN** jack on the 16x16 Modular Matrix for HDMI w/ HDCP.
2. Connect an IR emitter from the **IR Out** jack on the Receiver unit to IR sensor on the display.

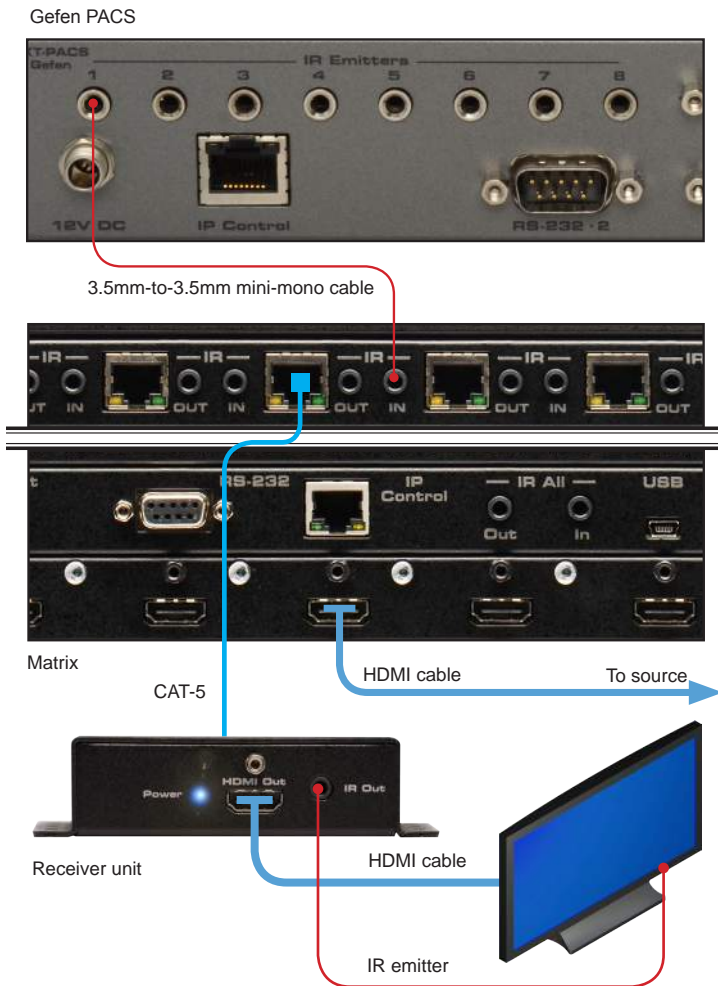

Controlling the Source Device


1. Connect an IR extender to the **IR Ext** jack on the Receiver unit.
2. Connect an IR emitter from the **IR OUT** jack on the 16x16 Modular Matrix for HDMI w/ HDCP to the IR sensor on the source.
3. To control the source from the viewing location, point the source's IR remote control at the associated IR extender.

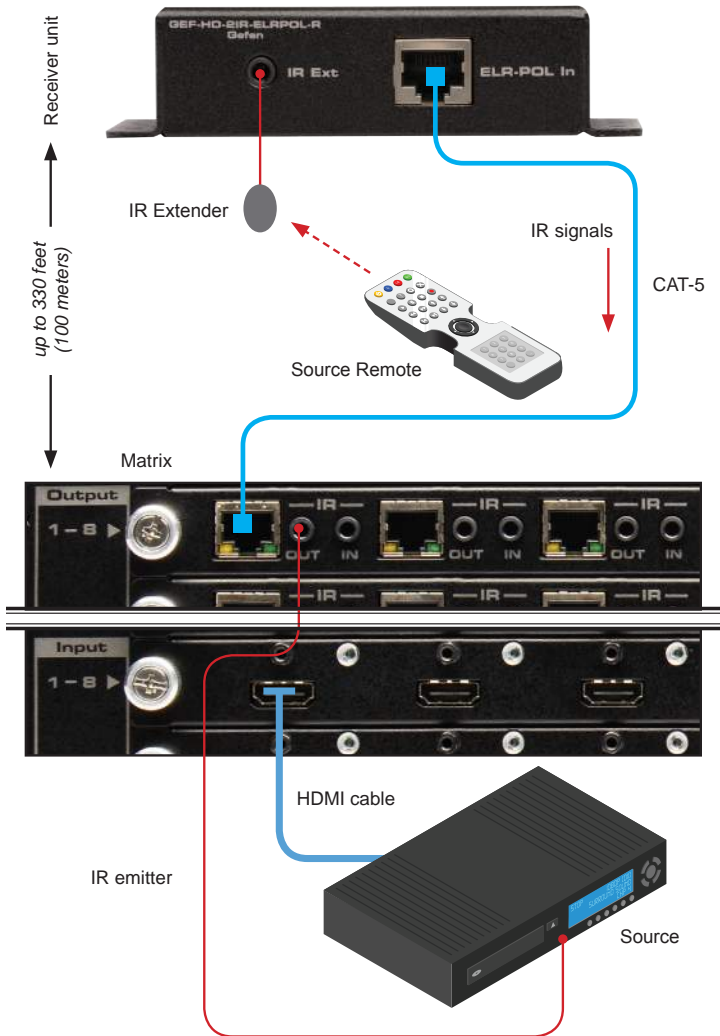

Controlling Multiple Sources

1. Connect an IR extender to the **IR Ext** jack on the Receiver unit.
2. Connect an IR blaster to the **IR All OUT** jack on the 16x16 Modular Matrix for HDMI w/ HDCP.

Note that an IR emitter can also be connected to control individual sources that are not controlled using the IR blaster.

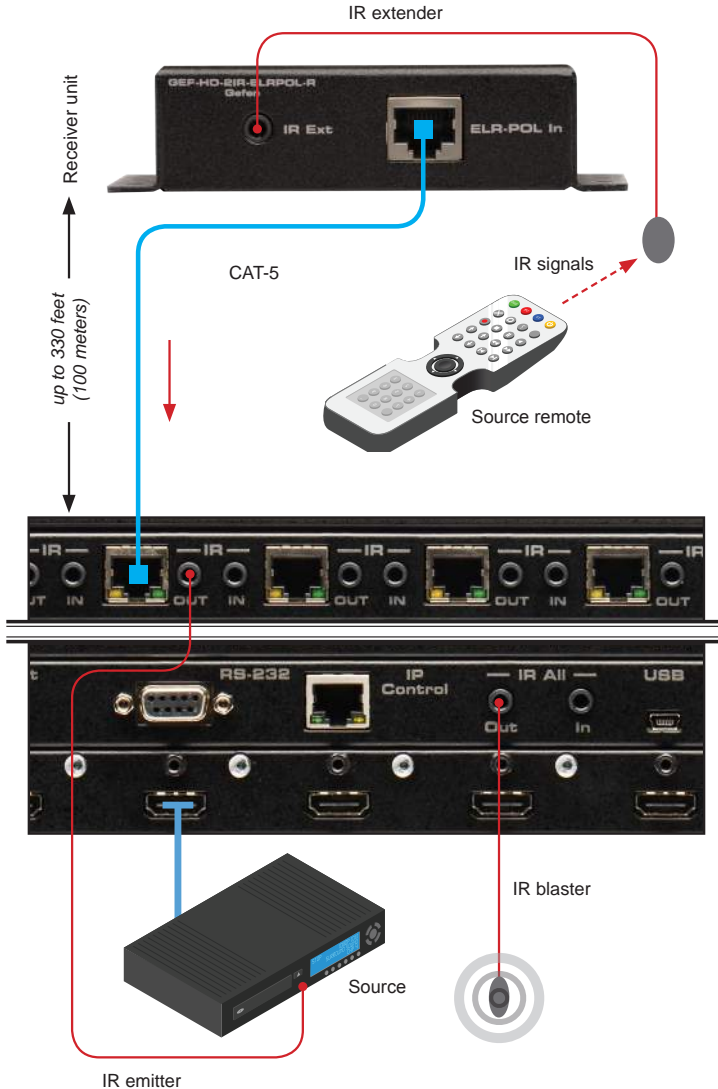


16_{sources} **x** **16**_{displays}

**Modular Matrix for
HDMI with HDCP**

03 Advanced Operation


RS-232 and IP Configuration

RS-232 Interface

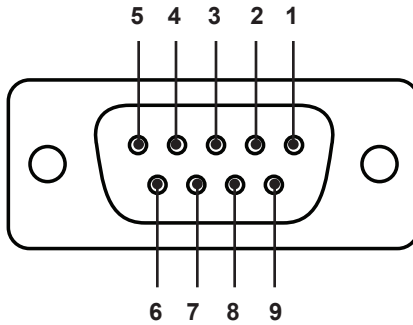

RS-232 Controller

Matrix

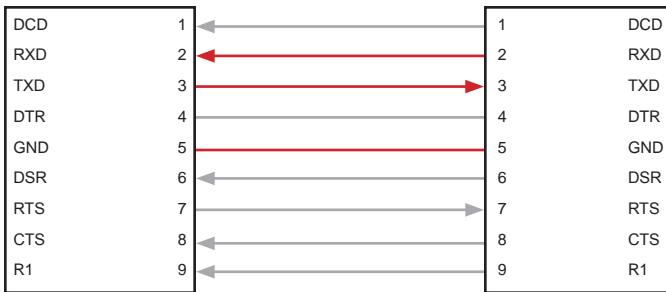

Only TXD, RXD, and GND pins are used.

RS-232 Settings

Description	Setting
Baud rate	19200
Data bits	8
Parity	None
Stop bits	1
Hardware flow control	None



IMPORTANT: When sending RS-232 commands, a carriage return must be included at the end of the command. A space *must* be included between the command and the parameter.

IP / UDP Configuration

The 16x16 Modular Matrix for HDMI w/ HDCP supports IP-based control using Telnet, UDP, or the built-in Web-based GUI. To set up IP control, the network settings for the 16x16 Modular Matrix for HDMI w/ HDCP must be configured via RS-232. The default network settings for the matrix are as follows:

Description	IP Address / Port	Description	IP Address / Port
IP Address	192.168.1.72	UDP Port	23
Subnet	255.255.255.0	Local UDP Port	50007
Gateway	192.168.1.1	Remote UDP IP	192.168.1.255
HTTP Port	80	Remote UDP Port	50008

1. Connect an RS-232 cable from the PC to the 16x16 Modular Matrix for HDMI w/ HDCP. Also make sure that an Ethernet cable is connected between the matrix and the network.
2. Launch a terminal emulation program (e.g. HyperTerminal) and use the RS-232 settings listed on the previous page.



NOTE: Depending upon the network, all related IP, Telnet, and UDP settings will need to be assigned. Consult your network administrator to obtain the proper settings.

3. Set the IP address for the matrix using the `#sipadd` command.
4. Set the subnet mask using the `#snetmask` command.
5. Set the gateway (router) IP address using the `#sgateway` command.
6. Set the Telnet listening port using the `#set_telnet_port` command.
7. Set the HTTP listening port using the `#set_http_port` command.
8. Set the UDP remote IP address for the matrix using the `#set_udp_remote_ip` command.
9. Set the UDP listening port for the matrix using the `#set_udp_port` command.
10. Set the UDP remote port for the matrix using the `#set_udp_remote_port` command.
11. Reboot the matrix to apply all changes, then type the IP address that was specified in step 3, in a Web browser to access the Web GUI. Use the same IP address to Telnet to the matrix.

Commands

IP Configuration

Command	Description
<code>#display_telnet_welcome</code>	Enable / disable the Telnet welcome message
<code>#ipconfig</code>	Displays the current IP configuration
<code>#resetip</code>	Resets the IP configuration to factory-default settings
<code>#set_http_port</code>	Sets the Web server listening port
<code>#set_telnet_pass</code>	Sets the Telnet password
<code>#set_telnet_port</code>	Sets the Telnet listening port for the matrix
<code>#set_webui_ad_pass</code>	Sets the Administrator password for the Web GUI
<code>#set_webui_op_pass</code>	Sets the Operator password for the Web GUI
<code>#sgateway</code>	Sets the IP address of the (router) gateway
<code>#show_gateway</code>	Displays the current gateway address of the matrix
<code>#show_http_port</code>	Displays the current HTTP listening port of the matrix
<code>#show_ip</code>	Displays the current IP address of the matrix
<code>#show_mac_addr</code>	Displays the MAC address of the matrix
<code>#show_netmask</code>	Displays the current net mask of the matrix
<code>#show_telnet_port</code>	Displays the Telnet listening port
<code>#sipadd</code>	Sets the IP address of the matrix
<code>#snetmask</code>	Sets the Net mask of the matrix
<code>#use_telnet_pass</code>	Force password during Telnet sessions

#display_telnet_welcome

The #display_telnet_welcome command enables / disables the Telnet welcome message during a Telnet session.

Syntax:

```
#display_telnet_welcome
```

Parameters:

param1 Value [0 ... 1]

Value	Description
0	Disable welcome message
1	Enable welcome message

Example:

```
#display_telnet_welcome 1  
TELNET WELCOME SCREEN IS ENABLED
```

When enabled and a Telnet session has been started, the following will appear:

```
Welcome to GEF-HDFST-MOD-16416 TELNET  
telnet->
```

#ipconfig

The #ipconfig command displays the current TCP settings.

Syntax:

```
#ipconfig
```

Parameters:

None

Example:

```
#ipconfig
IP Configuration is :

IP: 192.168.2.238
NETMASK: 255.255.255.0
GATEWAY: 192.168.2.1
MAC Address: 00-1c-91-03-00-04
```

#resetip

The #resetip command resets the IP configuration to factory-default settings. The matrix must be rebooted after executing this command.

Syntax:

```
#resetip
```

Parameters:

None

Syntax:

```
#resetip

IP CONFIGURATION WAS RESET TO FACTORY DEFAULTS
IP: 192.168.1.72
Netmask: 255.255.255.0
Gateway: 192.168.1.1
```


#set_http_port

The #set_http_port command specifies the Web server listening port. The matrix must be rebooted after executing this command. The default port setting is 80. Use the #show_http_port command to display the current HTTP listening port.

Syntax:

```
#set_http_port param1
```

Parameters:

<i>param1</i>	Port	[1 ... 1024]
---------------	------	--------------

Example:

```
#set_http_port 82
```

```
HTTP COMMUNICATION PORT 82 IS SET. PLEASE REBOOT THE UNIT.
```

#set_telnet_pass

The #set_telnet_pass command sets the Telnet password. The password is case-sensitive and cannot exceed 8 characters in length. The default password is Admin.

Syntax:

```
#set_telnet_pass param1
```

Parameters:

<i>param1</i>	Password
---------------	----------

Example:

```
#set_telnet_pass 3ver3st
```

```
TELNET INTERFACE PASSWORD IS SET
```

#set_telnet_port

The #set_telnet_port command sets the Telnet listening port. The matrix must be rebooted after executing this command. The default port setting is 23. Use the #show_telnet_port command to display the current Telnet listening port.

Syntax:

```
#set_telnet_port param1
```

Parameters:

<i>param1</i>	Port	[1 ... 1024]
---------------	------	--------------

Example:

```
#set_telnet_port 24
```

```
TELNET COMMUNICATION PORT 24 IS SET. PLEASE REBOOT THE UNIT.
```

#set_webui_ad_pass

The #set_webui_ad_pass command sets the Administrator password for the Web GUI. The password is case-sensitive and cannot exceed 7 characters in length. The default password is Admin.

Syntax:

```
#set_webui_ad_pass param1
```

Parameters:

<i>param1</i>	Password
---------------	----------

Example:

```
#set_webui_ad_pass bossman
```

```
WEB UI ADMINISTRATOR PASSWORD IS SET
```

#set_webui_op_pass

The #set_webui_ad_pass command sets the Operator password for the Web GUI. The default password is Admin.

Syntax:

```
#set_webui_op_pass param1
```

Parameters:

param1 Password

Example:

```
#set_webui_op_pass minion  
WEB UI OPERATOR PASSWORD IS SET
```

#sgateway

The #sgateway command sets the gateway address. The gateway must be typed using dot-decimal notation. The matrix must be rebooted after executing this command. The default gateway is 192.168.1.1.

Syntax:

```
#sgateway param1
```

Parameters:

param1 Gateway

Example:

```
#sgateway 192.168.1.5  
GATEWAY ADDRESS 192.168.1.5 IS SET. PLEASE REBOOT THE UNIT.
```

#show_gateway

The #show_gateway command displays the current gateway address of the matrix. Use the #sgateway command to set the gateway address.

Syntax:

```
#show_gateway
```

Parameters:

None

Example:

```
#show_gateway
```

```
GATEWAY ADDRESS IS: 192.168.1.5
```

#show_http_port

The #show_http_port command displays the current HTTP listening port of the matrix. Use the #set_http_port command to set the HTTP listening port.

Syntax:

```
#show_http_port
```

Parameters:

None

Example:

```
#show_http_port
```

```
HTTP COMMUNICATION PORT IS: 82
```

#show_ip

The #show_ip command displays the current IP address of the matrix. Use the #sipadd command to set the IP address.

Syntax:

```
#show_ip
```

Parameters:

None

Example:

```
#show_ip
```

```
IP ADDRESS IS: 192.168.1.239
```

#show_mac_addr

The #show_mac_addr command displays the MAC address of the matrix.

Syntax:

```
#show_mac_addr
```

Parameters:

None

Example:

```
#show_mac_addr
```

```
MAC ADDRESS IS: 00-1c-91-03-00-02
```

#show_netmask

The #show_netmask command displays the current net mask of the matrix. Use the #snetmask command to set the net mask.

Syntax:

```
#show_netmask
```

Parameters:

None

Example:

```
#show_netmask
```

```
NETMASK ADDRESS IS: 255.255.255.0
```

#show_telnet_port

The #show_telnet_port command displays the current Telnet port of the matrix. Use the #set_telnet_port command to set the Telnet listening port.

Syntax:

```
#set_telnet_port param1
```

Parameters:

<i>param1</i>	Port	[1 ... 65535]
---------------	------	---------------

Example:

```
#set_telnet_port 24
```

```
TELNET COMMUNICATION PORT 24 IS SET. PLEASE REBOOT THE UNIT.
```

#sipadd

The #sipadd command sets the IP address of the matrix. The IP address must be entered using dot-decimal notation. The matrix must be rebooted after executing this command. The default IP address is 192.168.1.72. Use the #show_ip or #ipconfig command to display the current IP address of the matrix.

Syntax:

```
#sipadd param1
```

Parameters:

param1 IP address

Example:

```
#sipadd 192.168.1.239
```

```
IP ADDRESS 192.168.1.239 IS SET. PLEASE REBOOT THE UNIT.
```

#snetmask

The #snetmask command sets the subnet mask. The net mask must be entered using dot-decimal notation. The matrix must be rebooted after executing this command. The default net mask is 255.255.255.0. Use the #show_netmask command to display the current net mask of the matrix.

Syntax:

```
#snetmask param1
```

Parameters:

param1 Net mask

Example:

```
#snetmask 255.255.0.0
```

```
NETMASK ADDRESS 255.255.0.0 IS SET. PLEASE REBOOT THE UNIT.
```

#use_telnet_pass

The #use_telnet_pass command forces the password credentials for each Telnet session. The default setting is 0 (disabled).

Syntax:

```
#use_telnet_pass param1
```

Parameters:

param1 Value [0 ... 1]

Value	Description
0	Disable password
1	Enable password

Example:

```
#use_telnet_pass 1
```

```
TELNET INTERACE PASSWORD IS ENABLED
```


UDP Configuration

Command	Description
<code>#set_udp_port</code>	Sets the local UDP listening port
<code>#set_udp_remote_ip</code>	Sets the remote UDP IP address
<code>#set_udp_remote_port</code>	Sets the remote UDP listening port
<code>#show_udp_port</code>	Displays the current local UDP listening port
<code>#show_udp_remote_ip</code>	Displays the current remote UDP IP address
<code>#show_udp_remote_port</code>	Displays the current remote UDP listening port
<code>#use_udp_enable</code>	Enables / disables UDP access

#set_udp_port

The `#set_udp_port` command sets the local UDP server listening port. The default port setting is 21. The matrix must be rebooted after executing this command. Use the `#show_udp_port` command to display the current local UDP listening port.

Syntax:

```
#set_udp_port param1
```

Parameters:

`param1` Port [1 ... 65535]

Example:

```
#set_udp_port 56
```

```
UDP COMMUNICATION PORT 56 IS SET
```

#set_udp_remote_ip

The `#set_udp_remote_ip` command sets the remote UDP IP address. The IP address must be specified using dot-decimal notation. The default UDP remote IP address is 192.168.1.255. The matrix must be rebooted after executing this command.

Syntax:

```
#set_udp_remote_ip param1
```

Parameters:

param1 UDP address

Example:

```
#set_udp_remote_ip 192.168.1.227
REMOTE UDP IP ADDRESS 192.168.1.227 IS SET.
```

#set_udp_remote_port

The `#set_udp_remote_port` command sets the remote UDP listening port. The default remote UDP listening port is 50008. The matrix must be rebooted after executing this command.

Syntax:

```
#set_udp_rport param1
```

Parameters:

param1 Port [1 ... 65535]

Example:

```
#set_udp_rport 50008
REMOTE UDP COMMUNICATION PORT 50008 IS SET.
```

#show_udp_port

The #show_udp_port command displays the current local UDP listening port. Use the #set_udp_port command to set the local UDP listening port.

Syntax:

```
#show_udp_port
```

Parameters:

None

Example:

```
#show_udp_port
```

```
UDP COMMUNICATION PORT IS: 56
```

#show_udp_remote_ip

The #show_udp_remote_ip command displays the remote UDP IP address. Use the #set_udp_remote_ip command to set the remote UDP IP address.

Syntax:

```
#set_udp_remote_ip param1
```

Parameters:

None

Example:

```
#set_udp_remote_ip 192.168.1.227
```

```
REMOTE UDP IP ADDRESS 192.168.1.227 IS SET.
```

#show_udp_remote_port

The #show_udp_remote_port command displays the remote UDP listening port. Use the #set_udp_remote_port to set the remote UDP listening port.

Syntax:

```
#set_udp_rport param1
```

Parameters:

None

Example:

```
#show_udp_remote_port
REMOTE UDP COMMUNICATION PORT IS: 50008
```

#use_udp_enable

The #use_udp_enable command enables or disables UDP access mode.

Syntax:

```
#use_udp_enable param1
```

Parameters:

param1 Value [0 ... 1]

Value	Description
0	Disable UDP
1	Enable UDP

Example:

```
#use_udp_enable 1
UDP ACCESS IS ENABLE
```

FST

Command	Description
<code>#fst_fast</code>	Sets the specified inputs to Fast switching mode
<code>#fst_slow</code>	Sets the specified inputs to Slow switching mode
<code>#show_fst</code>	Displays the current switching mode for the specified input

#fst_fast

The `#fst_fast` command sets the specified inputs to Fast switching mode. By default, all inputs are set to Fast switching mode. Up to 16 inputs can be specified at a time. If `param1 = 0`, then all inputs are set to Fast switching mode.

Syntax:

```
#fst_fast param1 [...param16]
```

Parameters:

param1 Input [1 ... 16]

Examples:

```
#fst_fast 1 4 5 6 10 12
```

```
INPUTS 1, 4, 5, 6, 10, 12 ARE SET TO FST FAST MODE
```

```
#fst_fast 0
```

```
ALL INPUTS ARE SET TO FST FAST MODE
```

#fst_slow

The #fst_slow command sets the specified inputs to Slow (normal) switching mode. Up to 16 inputs can be specified at a time. If *param1* = 0, then all inputs are set to Slow switching mode.

Syntax:

```
#fst_slow param1 [...param16]
```

Parameters:

<i>param1</i>	Input	[1 ... 16]
---------------	-------	------------

Examples:

```
#fst_slow 1 2 4 7 8 9 10 12
```

```
INPUTS 1, 2, 4, 7, 8, 9, 10, 12 ARE SET TO FST SLOW MODE
```

```
#fst_slow 0
```

```
ALL INPUTS ARE SET TO FST SLOW MODE
```

#show_fst

The #show_fst command displays the switching mode of the specified input. If *param1* = 0, then the switching mode of all inputs are displayed.

Syntax:

```
#show_fst param1
```

Parameters:

<i>param1</i>	Input	[1 ... 16]
---------------	-------	------------

Examples:

```
#show_fst 6
```

```
INPUT 6(Input6) IS IN FAST SWITCHING MODE
```

```
#show_fst 0
```

```
INPUT 1(Input1) IS IN SLOW SWITCHING MODE
INPUT 2(Input2) IS IN FAST SWITCHING MODE
INPUT 3(Input3) IS IN FAST SWITCHING MODE
INPUT 4(Input4) IS IN SLOW SWITCHING MODE
INPUT 5(Input5) IS IN SLOW SWITCHING MODE
INPUT 6(Input6) IS IN SLOW SWITCHING MODE
INPUT 7(Input7) IS IN FAST SWITCHING MODE
INPUT 8(Input8) IS IN FAST SWITCHING MODE
INPUT 9(Input9) IS IN FAST SWITCHING MODE
INPUT 10(Input10) IS IN SLOW SWITCHING MODE
INPUT 11(Input11) IS IN FAST SWITCHING MODE
INPUT 12(Input12) IS IN FAST SWITCHING MODE
INPUT 13(Input13) IS IN FAST SWITCHING MODE
INPUT 14(Input14) IS IN FAST SWITCHING MODE
INPUT 15(Input15) IS IN SLOW SWITCHING MODE
INPUT 16(Input16) IS IN FAST SWITCHING MODE
```

Routing and Masking

Command	Description
<code>#mask</code>	Masks the video on the specified output(s)
<code>#recall_preset</code>	Loads the specified routing / masking preset
<code>#save_preset</code>	Saves the current routing / masking state to a preset
<code>#set_bank_name</code>	Assigns an EDID bank with the specified name
<code>#set_input_name</code>	Assigns an input with the specified name
<code>#set_output_name</code>	Assigns an output with the specified name
<code>#set_preset_name</code>	Assigns a preset with the specified name
<code>#show_bank_name</code>	Displays the name for the specified EDID bank
<code>#show_input_name</code>	Displays the specified input name
<code>#show_mask</code>	Displays the current masking status of each output
<code>#show_output_name</code>	Displays the name of the specified output
<code>#show_preset_name</code>	Displays the specified preset name
<code>#unmask</code>	Unmasks the specified outputs
<code>r</code>	Routes the specified input to the specified outputs
<code>s</code>	Routes the specified input to all outputs

#mask

The `#mask` command masks the video on the specified outputs. If `param1 = 0`, then all outputs will be masked. Output 17 is **HDMI Local Out**.

Syntax:

```
#mask param1 [...param17]
```

Parameters:

param1 Output [1 ... 17]

Example:

```
#mask 1 3 5 7 11
```

OUTPUTS 1, 3, 5, 7, 11 ARE MASKED

#recall_preset

The `#recall_preset` command loads the specified preset. Use the `#save_preset` command to store a preset.

Syntax:

```
#recall_preset param1
```

Parameters:

<i>param1</i>	Preset	[1 ... 8]
---------------	--------	-----------

Example:

```
#recall_preset 7
```

```
RECALLED THE ROUTING STATE SAVED TO PRESET 7
```

#save_preset

The `#save_preset` command saves the current routing / masking state to the specified preset. Use the `#recall_preset` command to load a preset.

Syntax:

```
#save_preset param1
```

Parameters:

<i>param1</i>	Preset	[1 ... 8]
---------------	--------	-----------

Example:

```
#save_preset 3
```

```
CURRENT ROUTING STATE IS SAVED TO PRESET 3
```

#set_bank_name

The #set_bank_name command names the specified bank.

Syntax:

```
#set_bank_name param1 param2
```

Parameters:

<i>param1</i>	Bank	[1 ... 8]
<i>param2</i>	Name	

Example:

```
#set_bank_name 5 Dell_30
```

```
Dell_30 NAME IS ASSIGNED TO BANK 5
```

#set_input_name

The #set_input_name command assigns a name to the specified input on the matrix.

Syntax:

```
#set_input_name param1 param2
```

Parameters:

<i>param1</i>	Input	[1 ... 16]
<i>param2</i>	Name	

Example:

```
#set_input_name 5 Blu-ray
```

```
Blu-ray NAME IS ASSIGNED TO INPUT 5
```

#set_output_name

The #set_output_name command assigns a name to the specified output on the matrix. Output 17 is **HDMI Local Out**.

Syntax:

```
#set_output_name param1 param2
```

Parameters:

<i>param1</i>	Output	[1 ... 17]
<i>param2</i>	Name	

Example:

```
#set_output_name 3 Sony_XBR
Sony_XBR NAME IS ASSIGNED TO OUTPUT 3
```

#set_preset_name

The #set_preset_name command names the specified preset. The name of the preset cannot exceed 20 characters in length. Spaces are not permitted when naming presets. If a space is required, then use the underscore (“_”) character.

Syntax:

```
#set_preset_name param1 param2
```

Parameters:

<i>param1</i>	Preset	[1 ... 8]
<i>param2</i>	Name	

Example:

```
#set_preset_name 8 Studio51
Studio51 NAME IS ASSIGNED TO PRESET 8
```

#show_bank_name

The #show_bank_name command displays the name for the specified EDID bank.

Syntax:

```
#show_bank_name param1
```

Parameters:

<i>param1</i>	Bank	[1 ... 8]
---------------	------	-----------

Example:

```
#show_bank_name 5  
THE NAME FOR BANK 2 IS: Dell_30
```

#show_input_name

The #show_input_name command displays the name of the specified input.

Syntax:

```
#show_input_name param1
```

Parameters:

<i>param1</i>	Input	[1 ... 16]
---------------	-------	------------

Example:

```
#show_input_name 5  
THE NAME FOR INPUT 5 IS: Blu-ray
```

#show_mask

The #show_mask command displays the mask status of the specified output. Output 17 is **HDMI Local Out**.

Syntax:

```
#show_mask param1
```

Parameters:

<i>param1</i>	Output	[1 ... 17]
---------------	--------	------------

Example:

```
#show_mask 15  
OUTPUT 15 IS UNMASKED
```

#show_output_name

The #show_output_name command displays the name of the specified output. Output 17 is **HDMI Local Out**.

Syntax:

```
#show_output_name param1
```

Parameters:

<i>param1</i>	Output	[1 ... 17]
---------------	--------	------------

Example:

```
#show_output_name 3  
THE NAME FOR OUTPUT 3 IS: Sony_XBR
```

#show_preset_name

The #show_preset_name command displays the name of the specified preset.

Syntax:

```
#show_preset_name param1
```

Parameters:

<i>param1</i>	Preset	[1 ... 8]
---------------	--------	-----------

Example:

```
#show_preset_name 8
```

```
THE NAME FOR PRESET 8 IS: Studio51
```

#unmask

The #unmask command unmasks the specified output(s). Up to 16 outputs can be specified at a time. If *param1* = 0, then all outputs will be unmasked. Output 17 is **HDMI Local Out**.

Syntax:

```
#unmask param1 [... param17]
```

Parameters:

<i>param1</i>	Output	[1 ... 17]
---------------	--------	------------

Examples:

```
#unmask 3
```

```
OUTPUT 3 IS UNMASKED
```

```
#unmask 1 3 5 6 7
```

```
OUTPUTS 1, 3, 5, 6, 7 ARE UNMASKED
```

```
#unmask 0
```

```
ALL OUTPUTS ARE UNMASKED
```

r

The `r` command routes the specified input to the specified outputs. Up to eight outputs can be specified at a time. Do not precede this command with the “#” symbol. If `param2 = 0`, then the specified input will be routed to all outputs. Output 17 is **HDMI Local Out**. Also see the `s` command.

Syntax:

```
r param1 param2 [... param17]
```

Parameters:

<code>param1</code>	Input	[1 ... 16]
<code>param2</code>	Output	[1 ... 17]

Example:

```
r 1 2 3 7 8 9
```

```
INPUT 1 IS SET TO OUTPUTS 2, 3, 7, 8, 9
```

```
r 5 0
```

```
INPUT 5 IS SET TO ALL OUTPUTS.
```


S

The `s` command routes the specified inputs to all outputs. Do not precede this command with the “#” symbol. If `param1 = 0`, then the matrix will be placed in a 1-to-1 routing state. In other words, Input 1 is routed to Output 1, Input 2 is routed to Output 2, and so on.

Syntax:

```
s param1
```

Parameters:

<code>param1</code>	Input	[1 ... 16]
---------------------	-------	------------

Example:

```
s 2
```

```
ALL OUTPUTS ARE ROUTED TO INPUT 2
```

```
s 0
```

```
Routing 1-1,2-2,...
```

System

Command	Description
#echo	Enables / disables RS-232 feedback
#fadefault	Resets the routing and masking to factory-default settings
#hdcp	Enables / disables HDCP detection
#help	Displays a list of available RS-232 / Telnet commands
#hdp_pulse	Cycles with HPD line on the specified output
#lock_edid	Locks the local EDID when the matrix is power-cycled
#lock_matrix	Locks / unlocks the matrix
#power	Toggles the power on the matrix
#reboot	Reboots the matrix
#set_edid	Sets the specified EDID to an input or bank
#set_ir	Sets the IR channel for the matrix
#show_fw	Displays the current version of matrix firmware
#show_hdcp	Displays the HDCP status of the specified input
#show_hpd	Displays the HPD status of the specified input
#show_ir	Displays the current IR channel of the matrix
#show_out_colorcpt	Displays the maximum color depth supported by the display (sink) device based on the EDID
#show_out_res	Displays the maximum video resolution supported by the display (sink) device, based on the EDID
#show_r	Displays the current routing status of the specified output
#show_rsense	Displays the RSENSE status of the specified output
#show_ver_data	Displays the current firmware and hardware version
m	Displays the current matrix routing status
n	Displays the routing status of the specified output

#echo

The #echo command enables / disables (toggles) the RS-232 feedback.

Syntax:

```
#echo param1
```

Parameters:

param1

Value

[0 ... 1]

Value	Description
0	Disable feedback
1	Enable feedback

Example:

```
#echo 1
```

```
LOCAL ECHO IS ON
```

#fadefault

The #fadefault command resets the matrix to factory-default settings. Routing is restored to a "one-to-one" state, outputs are unmasked, and all IP and UDP settings are reset to default settings.

Syntax:

```
#fadefault
```

Parameters:

None

Example:

```
#fadefault

MATRIX WAS RESET TO FACTORY DEFAULTS
MATRIX IS ON
MATRIX IS UNLOCKED
LOCAL ECHO IS ON
ALL OUTPUTS ARE UNMASKED
SET HPD HIGH TO ALL INPUT
IP ADDRESS IS: 192.168.1.72
GATEWAY ADDRESS IS: 192.168.1.1
NET MASK ADDRESS IS: 255.255.255.0
...
...
...
INPUT NAME INIT....
OUTPUT NAME INIT....
PRESET NAME INIT....
BANK NAME INIT....
BANK EDID INIT....
BASE EDID INIT....
CURRENT ROUTING STATE IS SAVED TO PRESET 1
CURRENT ROUTING STATE IS SAVED TO PRESET 2
CURRENT ROUTING STATE IS SAVED TO PRESET 3
CURRENT ROUTING STATE IS SAVED TO PRESET 4
CURRENT ROUTING STATE IS SAVED TO PRESET 5
CURRENT ROUTING STATE IS SAVED TO PRESET 6
CURRENT ROUTING STATE IS SAVED TO PRESET 7
CURRENT ROUTING STATE IS SAVED TO PRESET 8
IR CHANNEL IS SET TO CHANNEL 0 (DIP1=OFF, DIP2=OFF)
ALL INPUTS HDCP ARE ENABLED
ALL INPUTS ARE SET TO FST FAST MODE
MATRIX EDID IS UNLOCKED
MATRIX WILL REBOOT SHORTLY *REBOOT UNIT IN 2 SECONDS
```

#hdcp

The #hdcp command enables / disables HDCP detection on the selected input.



NOTE: Some computers will enable HDCP if an HDCP-compliant display is detected. Set *param2* = 1 to force the computer to ignore detection of an HDCP-compliant display. Setting *param2* = 0 does **not** decrypt HDCP content.

Syntax:

```
#hdcp param1 param2
```

Parameters:

<i>param1</i>	Input	[1 ... 16]
<i>param2</i>	Value	[0 ... 1]

Value	Description
0	Disable
1	Enable

Example:

```
#hdcp 2 0
INPUT 2 HDCP IS DISABLED
```

```
#hdcp 2 1
INPUT 2 HDCP IS ENABLED
```

#help

The #help command displays the list of available RS-232 / Telnet commands. Help on a specific command can be displayed when using `param1`.

Syntax:

```
#help param1
```

Parameters:

param1 Command name (optional)

Examples:

```
#help
```

```
=====
```

```
#IPCONFIG  
#RESETIP  
#SIPADD  
#SNETMASK  
#SGATEWAY  
#SHOW_IP  
#SHOW_NETMASK  
#SHOW_GATEWAY  
#SHOW_MAC_ADDR  
#SET_HTTP_PORT  
#SHOW_HTTP_PORT  
...  
...  
...  
#FST_FAST  
#SHOW_FST  
#STRTO_IN
```

```
=====
```

```
#help #sipadd
```

```
#SIPADD PARAM 1  
SET THE IP ADDRESS  
PARAM 1 = XXX.XXX.XXX.XXX  
WHERE XXX: 0 - 255
```

#hdp_pulse

The #hdp_pulse command cycles the HPD line on the specified input. Issuing this command is identical to physically disconnecting and reconnecting the cable between the source and the matrix. If param1 = 0, then all inputs will receive the HPD pulse.

Syntax:

```
#hdp_pulse param1
```

Parameters:

<i>param1</i>	Input	[1 ... 16]
---------------	-------	------------

Examples:

```
#hdp_pulse  
HPD PULSE HAS BEEN SENT TO INPUT 1
```

```
#hdp_pulse 0  
HPD PULSE HAS BEEN SENT TO ALL INPUTS
```

#lock_edid

The #lock_edid command secures the Local EDID by disabling the automatic loading of the downstream EDID when the matrix is powered.

Syntax:

```
#lock_edid param1
```

Parameters:

param1 Value [0 ... 1]

Value	Description
0	Disable
1	Enable

Examples:

```
#lock_edid 0  
MATRIX EDID IS UNLOCKED
```

```
#lock_edid 1  
MATRIX EDID IS LOCKED
```


#lock_matrix

The #lock_matrix command locks / unlocks the Matrix. When the matrix is locked, all functions are disabled including the front panel, RS-232, and Telnet

Syntax:

```
#lock_matrix param1
```

Parameters:

param1 Value [0 ... 1]

Value	Description
0	Unlock
1	Lock

Examples:

```
#lock_matrix 0  
MATRIX IS UNLOCKED
```

```
#lock_matrix 1  
MATRIX IS LOCKED
```

#power

The #power command toggles power on the matrix.

Syntax:

```
#power param1
```

Parameters:

param1 Value [0 ... 1]

Value	Description
0	Off
1	On

Examples:

```
#power 0  
(matrix will power-off)
```

```
#power 1  
(matrix will power-on)
```

#reboot

The `#reboot` command reboots the matrix. Executing this command is the equivalent of disconnecting and reconnecting the AC power cord, on the back of the matrix. The matrix must be rebooted after changing the IP settings of the matrix.

Syntax:

```
#reboot
```

Parameters:

None

Example:

```
#reboot
```

```
MATRIX WILL REBOOT SHORTLY *REBOOT UNIT IN 2 SECONDS
```

```
GEF-HDFST-MOD-16416 v1.0X
```

```
MATRIX IS ON  
INPUT 3 IS SET TO ALL OUTPUTS.
```

```
IP: 192.168.2.239  
Netmask: 255.255.255.0  
Gateway: 192.168.1.1
```

#set_edid

The #set_edid command sets the specified EDID type to an input or bank. Output 17, used by *param2*, is **HDMI Local Out**.

Syntax:

```
#set_edid param1 param2 param3 param4
```

Parameters:

param1 Source [STRING]

Source	Description
default	Uses default EDID
dynamic	Uses dynamic EDID
bank	Uses EDID bank
output	Uses EDID on Output (sink)

param2 Source [0 ... 17]

Source	Description
0	Default EDID
1 ... 8	EDID bank
1 ... 17	Output

param3 Target [STRING]

Target	Description
input	Specifies an input
bank	Specifies an EDID bank

param4 Target [1 ... 8]

Value	Description
1 ... 8	Input
1 ... 8	EDID bank

(continued on next page)

Notes:

If *param1* = default or *param1* = dynamic, set *param2* = 0.

Using Dynamic EDID

When *param1* = dynamic, the specified input will be set to *Dynamic EDID*. This can be observed by accessing the Manage EDID tab, in the Web interface. When an input is set to *Dynamic EDID*, the input will use the EDID of the last selected output during the routing process. The order in which outputs are routed are important when using *Dynamic EDID*. See the example below.

Examples:

Using Dynamic EDID:

```
#set_edid dynamic 0 input 4
COPY DYNAMIC EDID TO INPUT4.
```

In the example above, Input 4 is set to *Dynamic EDID*. If the following routing command is issued, then the EDID from Output 3 (not Output 2) will be used by Input 1.

```
r 4 2 3
INPUT 4 IS SET TO OUTPUTS 2, 3
```

However, if we wanted to use the EDID from Output 2, we would write the command as:

```
r 4 3 2
INPUT 4 IS SET TO OUTPUTS 3, 2
```

Since Output 2 was the last output that was specified, this will be the EDID that Input 4 will use.

This second example does not use Dynamic EDID but uses the EDID from the specified downstream sink (display, etc):

```
#set_edid output 1 input 3
COPY OUTPUT1 EDID TO INPUT3.
```

#set_ir

The #set_ir command sets the IR channel for the matrix.

Syntax:

```
#set_ir param1
```

Parameters:

param1 Channel [0 ... 3]

Channel	Description
0	Set IR channel 0
1	Set IR channel 1
2	Set IR channel 2
3	Set IR channel 3

Example:

```
#set_ir 0
```

```
IR CHANNEL IS SET TO CHANNEL 0 (DIP1=OFF, DIP2=OFF)
```

#show_fw

The #show_fw command displays the current version of matrix firmware.

Syntax:

```
#show_fw
```

Parameters:

None

Example:

```
#show_fw
```

```
FIRMWARE VERSION = GEF-HDFST-MOD-16416 v1.0X
```

#show_hdcp

The #show_hdcp command displays the HDCP status on the specified input.

Syntax:

```
#show_hdcp param1
```

Parameters:

<i>param1</i>	Input	[1 ... 16]
---------------	-------	------------

Example:

```
#show_hdcp 1
```

```
INPUT 1 HDCP IS ENABLED
```

#show_hpd

The #show_hpd command displays the HPD status of the specified output. Output 17 is **HDMI Local Out**.

Syntax:

```
#show_hpd param1
```

Parameters:

<i>param1</i>	Output	[1 ... 17]
---------------	--------	------------

Example:

```
#show_hpd 4
```

```
HPD OF OUTPUT 4 (Output4) IS LOW
```

#show_ir

The #show_ir command displays the IR channel of the matrix.

Syntax:

```
#show_ir
```

Parameters:

None

Example:

```
#show_ir
```

```
CURRENT IR CHANNEL IS: 0
```


#show_out_colordpt

The #show_out_colordpt command displays the highest color depth supported by the specified display based on the EDID. If no display is attached to the specified output, then the command will return NO SIGNAL. Output 17 is **HDMI Local Out**.

Syntax:

```
#show_out_colordpt param1
```

Parameters:

<i>param1</i>	Output	[1 ... 17]
---------------	--------	------------

Example:

```
#show_out_colordpt 15  
12 BITS HDMI
```

#show_out_res

The #show_out_res command displays the highest resolution supported by the specified display based on the EDID. If no display is attached to the specified output, then the command will return NO SIGNAL. Output 17 is **HDMI Local Out**.

Syntax:

```
#show_out_res param1
```

Parameters:

<i>param1</i>	Output	[1 ... 17]
---------------	--------	------------

Example:

```
#show_out_res 15  
1080P 60HZ HDMI
```

#show_r

The #show_out_colorcpt command displays the current routing status of the specified output. Output 17 is **HDMI Local Out**.

Syntax:

```
#show_r param1
```

Parameters:

<i>param1</i>	Output	[1 ... 17]
---------------	--------	------------

Example:

```
#show_r 9
```

```
OUTPUT 9(Output5) IS ROUTED TO INPUT 5(Input5)
```

#show_rsense

The #show_rsense command displays the RSENSE status of the specified output. Output 17 is **HDMI Local Out**.

Syntax:

```
#show_rsense param1
```

Parameters:

<i>param1</i>	Output	[1 ... 16]
---------------	--------	------------

Example:

```
#show_rsense 6
```

```
RSENSE OF OUTPUT 6 (Output6) IS HIGH
```

#show_ver_data

The #show_ver_data command displays the current software and hardware version.

Syntax:

```
#show_ver_data
```

Parameters:

None

Example:

```
#show_ver_data
```

```
SOFTWARE AND HARDWARE VERSION: v1.0X PCB-2026*A
```

m

The `m` command displays the current matrix routing status. Do not precede the `m` command with the '#' symbol.

Syntax:

```
m
```

Parameters:

None

Example:

```
m
```

```
OUT: 01 02 03 04 05 06 07 08  
IN:  03 03 03 03 03 03 03 03
```

```
OUT: 09 10 11 12 13 14 15 16  
IN:  03 03 03 03 03 03 03 03
```

```
OUT: 17  
IN:  03
```

```
ALL OUTPUTS ARE UNMASKED  
MATRIX IS UNLOCKED
```

n

The `n` command displays the routing status of the specified output. Do not precede the `n` command with the “#” symbol. If `param1 = 0`, then the routing status for all outputs will be returned.

Syntax:

```
n param1
```

Parameters:

None

Examples:

To see how this command works, we have already routed Input 2 to Outputs 4, 5, and 9. Now, we'll use the `n` command to query Output 4:

```
n 4
004I03
```

The feedback is abbreviated as: “004I03” and is read as: “Output 04 Input 03”


We can also query all outputs by setting `param1 = 0`:

```
n 0
OUT: 01 02 03 04 05 06 07 08
    IN: 08 06 08 08 08 08 08 08
OUT: 09 10 11 12 13 14 15 16
    IN: 08 08 08 08 08 08 08 08
OUT: 17
    IN: 08
```

Web Interface

Using the built-in Web Server

Access the built-in Web interface by entering the IP address of the matrix that was specified in step 3 under [IP / UDP Configuration](#). Once connected to the matrix, the login screen will be displayed.

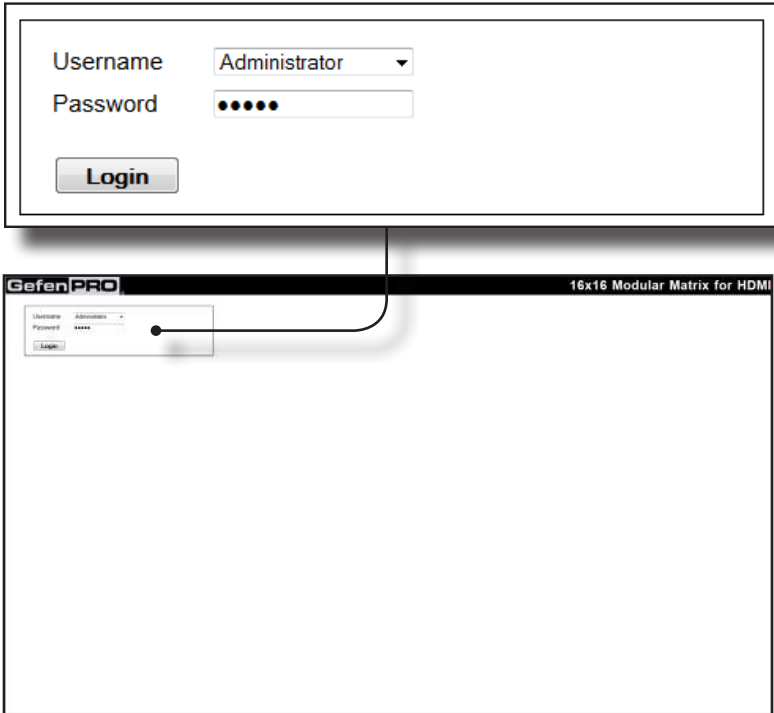

Username

Select the username from the drop-down list.

Options:

Operator, Administrator

Administrator login provides unrestricted access to all features and settings. Operator login limits access to matrix routing, display information, and routing preset features.

Password

Enter the password for the associated username. The password can also be set using RS-232 or Telnet. See the [#set_webui_op_pass](#) and the [#set_webui_ad_pass](#) commands.

The Web GUI is divided into four main pages: **Main**, **I/O Setup**, **Manage EDID**, and **Configuration**. Each main page is represented by a tab at the top-most portion of the screen. The **Main**, **I/O Setup**, and **Manage EDID** pages have their own set of sub-tabs. Click on the desired tab / sub-tab to open the desired page.

NOTE: In order to view all four tabs at the top of the screen, the user must be logged in as “Administrator”. If logged-in as “Operator”, only the **Main** tab will be visible.

Main ► Routing

Log Out

Click **Log Out** to terminate the current Web session and return to the login page.

Power (On / Standby)

Click to toggle between power-on and standby mode.



The screenshot shows the GefenPRO web interface. The main window displays a routing matrix table with columns for Output, Type, Name, Output, Input #, Name, and Type. Below this is a "Save & Default Routing Presets" section. To the right of the main window is a "Status" table with columns for Output and Input #. A callout line connects the "Log Out" button from the Power Standby Log Out bar to the "Log Out" button in the top right corner of the web interface.

Status	
Output	Input #
1	1
2	1
3	1
4	3
5	1
6	1
7	1
8	3
9	3
10	3
11	1
12	3
13	3
14	3
15	3
16	1
17-Local	3

Status (Output / Input #)

Displays the current routing status of the matrix.

17-Local

This output is used for local A/V monitoring and cannot be routed.

The screenshot shows the Gefen PRO 16x16 Modular Matrix for HDMI web interface. The main window displays a routing configuration page with a table of outputs and inputs. A callout window titled "Inputs" is overlaid on the right, showing a list of inputs with radio buttons for selection. The "Inputs" table has columns for "Input #", "Name", and "Type". Inputs 1 through 6 are highlighted in yellow, and input 3 is selected with a radio button. Below the "Inputs" table is a "Mask / Unmask" section with a radio button and a "Route" button.

Outputs			Inputs		
Output	Input #	Type	Input #	Name	Type
1	1	HDMI	1	Input1	HDMI
2	2	HDMI	2	Input2	HDMI
3	3	HDMI	3	Input3	HDMI
4	4	HDMI	4	Input4	HDMI
5	5	HDMI	5	Input5	HDMI
6	6	HDMI	6	Input6	HDMI
7	7	HDMI	7	Input7	HDMI
8	8	HDMI	8	Input8	HDMI
9	9	HDMI	9	Input9	HDMI
10	10	HDMI	10	Input10	HDMI
11	11	HDMI	11	Input11	HDMI
12	12	HDMI	12	Input12	HDMI
13	13	HDMI	13	Input13	HDMI
14	14	HDMI	14	Input14	HDMI
15	15	HDMI	15	Input15	HDMI
16	16	HDMI	16	Input16	HDMI
17 Local	2				

Inputs		
Input #	Name	Type
<input type="radio"/>	1	Input1
<input type="radio"/>	2	Input2
<input checked="" type="radio"/>	3	Input3
<input type="radio"/>	4	Input4
<input type="radio"/>	5	Input5
<input type="radio"/>	6	Input6
<input type="radio"/>	14	Input14
<input type="radio"/>	15	Input15
<input type="radio"/>	16	Input16
<input type="radio"/>	Mask / Unmask	
Route		

Input #

Click the radio button next to the desired input to be routed. Only one input can be selected at a time.

Name

Displays the current name of the input.

Type

Indicates the type of card that is installed for the listed inputs.

Mask / Unmask

Click this radio button to enable / disable the selected input.

Route

Click the **Route** button to route the selected input to the select output(s).

The screenshot displays the Gefen PRO 16x16 Modular Matrix for HDMI web interface. The main window shows a routing table and a status table. A detailed view of the 'Outputs' section is shown in the foreground, which is a table with the following data:

Type	Name	Output	<input type="checkbox"/>
HDMI	Output1	1	<input type="checkbox"/>
	Output2	2	<input type="checkbox"/>
	Output3	3	<input type="checkbox"/>
	Output4	4	<input checked="" type="checkbox"/>
	Output5	5	<input type="checkbox"/>
	Output6	6	<input type="checkbox"/>
	Output14	14	<input checked="" type="checkbox"/>
	Output15	15	<input checked="" type="checkbox"/>
	Output16	16	<input type="checkbox"/>
	Output17	17-Local	<input checked="" type="checkbox"/>

Below the table are two buttons: 'Check All' and 'Clear All'.

Output

Click to place a check mark in the box and select the desired output. Multiple outputs can be selected. This includes the local A/V output (17-Local).

Name

Displays the current name of the output.

Type

Indicates the type of card that is installed for the listed outputs.

Check All



Click this button to select all outputs.

Clear All

Click this button to clear (deselect) all selected outputs

Lock Matrix

Locks / unlocks the matrix. Once the matrix is locked, settings on the matrix cannot be changed using the front-panel buttons or through the Web GUI. When the matrix is locked, the button text will read “Unlock Matrix” and a red bar will appear across the top portion of the screen with the text “Matrix is LOCKED”. Click the “Unlock Matrix” button to unlock the matrix.

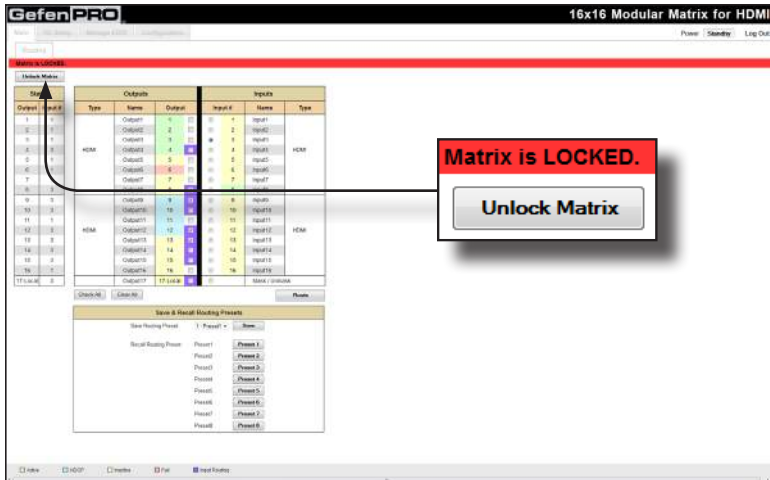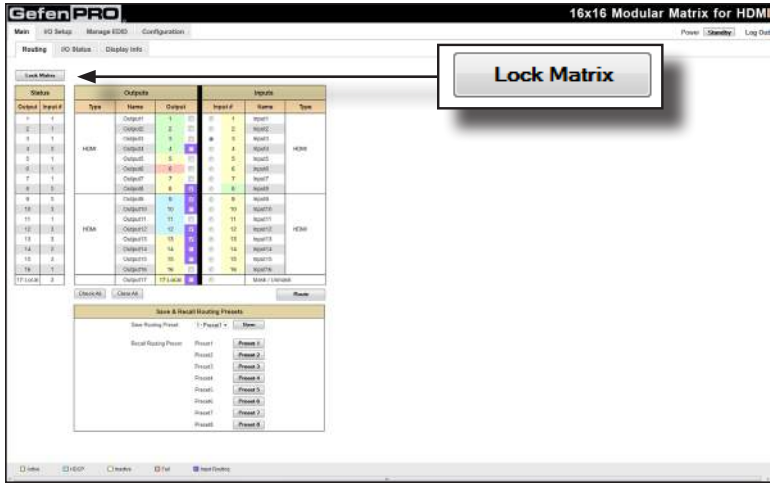

The screenshot displays the GefenPRO web interface for a 16x16 Modular Matrix for HDMI. The main window shows a routing configuration table with columns for Status, Outputs, and Inputs. A dialog box titled "Save & Recall Routing Presets" is open, showing options to save the current routing state to memory (labeled "1 - Preset1") and buttons to recall specific presets from 1 to 8.

Output	Input #	Type	Name	Output	Input #	Name	Type
1	1	Output	1	1	1	Input1	
2	1	Output	2	1	2	Input2	
3	1	Output	3	1	3	Input3	
4	1	Output	4	1	4	Input4	HDMI
5	1	Output	5	1	5	Input5	
6	1	Output	6	1	6	Input6	
7	1	Output	7	1	7	Input7	
8	1	Output	8	1	8	Input8	
9	1	Output	9	1	9	Input9	
10	1	Output	10	1	10	Input10	
11	1	Output	11	1	11	Input11	HDMI
12	1	Output	12	1	12	Input12	
13	1	Output	13	1	13	Input13	
14	1	Output	14	1	14	Input14	
15	1	Output	15	1	15	Input15	
16	1	Output	16	1	16	Input16	
17 Local	2	Output	17 Local	2	17	Input17	Matrix Controller

Save Routing Preset

Saves the current routing state to memory. Click the drop-down list to select the desired routing preset. Click the **Save** button to save the preset to memory.

Recall Routing Preset

Loads the selected routing state into memory. Click the desired button to load the desired routing preset into memory.

GefenPRO 16x16 Modular Matrix for HDMI

Menu: [RGB Setup](#) [Manage EDID](#) [Configuration](#) Power [Display Info](#) [Log Out](#)

Routing [IO Status](#) [Display Info](#)

[Lock Matrix](#)

Status		Outputs			Inputs		
Output	Input #	Type	Name	Output	Input #	Name	Type
1	1		Output1	1	1	Input1	
2	1		Output2	2	2	Input2	
3	1		Output3	3	3	Input3	
4	1	HDMI	Output4	4	4	Input4	HDMI
5	1		Output5	5	5	Input5	
6	1		Output6	6	6	Input6	
7	1		Output7	7	7	Input7	
8	1		Output8	8	8	Input8	
9	1		Output9	9	9	Input9	
10	1		Output10	10	10	Input10	
11	1		Output11	11	11	Input11	
12	1	HDMI	Output12	12	12	Input12	HDMI
13	1		Output13	13	13	Input13	
14	1		Output14	14	14	Input14	
15	1		Output15	15	15	Input15	
16	1		Output16	16	16	Input16	
17 Local	2		Output17	17 Local	17	Input17	Matrix Processor

[Check](#) [Default](#) [Power](#)

Save & Default Routing Presets

Save Routing Preset: [Save](#)

Local Routing Preset: [Preset 1](#) [Preset 2](#) [Preset 3](#) [Preset 4](#) [Preset 5](#) [Preset 6](#) [Preset 7](#) [Preset 8](#)


Home EDID Matrix Routing Help/About

Legend


Provides color-coded information on the status of each Input and Output.




Indicates that the Input / Output is active (connected to a source or a sink).




Indicates that an HDCP source is being used on the input.



No input source or output (sink) is connected.



This error indicates that the source is unable to communicate with the display (sink) device.



Displays the current routing status of an input when a radio button, under the Input # column, is selected.

Main ► I/O Status

Output																	
	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17-Local
Name	Output1	Output2	Output3	Output4	Output5	Output6	Output7	Output8	Output9	Output10	Output11	Output12	Output13	Output14	Output15	Output16	Output17
RSENSE	Off	Off	Off	Off	Off	Off	Off	Off	Off	Off	Off	Off	Off	Off	Off	Off	Off
Mask	Off	Off	Off	Off	Off	Off	Off	Off	Off	Off	Off	Off	Off	Off	Off	Off	Off
HPD	Low	Low	Low	Low	Low	Low	Low	Low	Low	Low	Low	Low	Low	Low	Low	Low	Low
HDCP	Inactive	Inactive	Inactive	Inactive	Inactive	Inactive	Inactive	Inactive	Inactive	Inactive	Inactive	Inactive	Inactive	Inactive	Inactive	Inactive	Inactive
Video Mode	HDMI	HDMI	HDMI	HDMI	HDMI	HDMI	HDMI	HDMI	HDMI	HDMI	HDMI	HDMI	HDMI	HDMI	HDMI	HDMI	HDMI

	1	15	16	17-Local
Name	Output1	Output15	Output16	N/A
RSENSE	Off	Off	Off	N/A
Mask	Off	Off	Off	N/A
HPD	Low	Low	Low	N/A
HDCP	Inactive	Inactive	Inactive	N/A
Video Mode	HDMI	HDMI	HDMI	N/A

Output

Displays the state of each output for each of the following: Name, RSENSE, Mask, HPD (Hot-Plug Detect), and HDCP.

Name

Displays the name of the output. The name of the output can be changed using the Web GUI (I/O Setup ► I/O Names) or using the `#set_output_name` command.

RSENSE

Displays the current Rsense state.

Mask

Displays the masking state of each output.

HPD

Displays the Hot-Plug Detect (HPD) state of each output.

HDCP

Indicates if HDCP-detection is enabled or disabled on each output.

Video Mode

Displays the current output video mode.

GefenPRO 16x16 Modular Matrix for HDMI

Menu: [40 Setup](#) [Manage I/O](#) [Configuration](#) Power: [On/Off](#) [Log Out](#)

Routing: [I/O Status](#) [Display Info](#)

Output																	
	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	IT Local
Name	Output1	Output2	Output3	Output4	Output5	Output6	Output7	Output8	Output9	Output10	Output11	Output12	Output13	Output14	Output15	Output16	IT Local
Color Depth	10b	10b	10b	10b	10b	10b	10b	10b	10b	10b	10b	10b	10b	10b	10b	10b	10b
Color Space	RGB	RGB	RGB	RGB	RGB	RGB	RGB	RGB	RGB	RGB	RGB	RGB	RGB	RGB	RGB	RGB	RGB
HDCP	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes
3D	No	No	No	No	No	No	No	No	No	No	No	No	No	No	No	No	No
Active Signal	No	No	No	No	No	No	No	No	No	No	No	No	No	No	No	No	No
Vertical Resolution	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-
Horizontal Resolution	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-
Progressive / Interlaced	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-
Refresh Rate	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-
Video Mode	HDMI	HDMI	HDMI	HDMI	HDMI	HDMI	HDMI	HDMI	HDMI	HDMI	HDMI	HDMI	HDMI	HDMI	HDMI	HDMI	HDMI

Input																	
	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	IT Local
Name	Input1	Input2	Input3	Input4	Input5	Input6	Input7	Input8	Input9	Input10	Input11	Input12	Input13	Input14	Input15	Input16	IT Local
Color Depth	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-
Color Space	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-
HDCP	No	No	No	No	No	No	No	No	No	No	No	No	No	No	No	No	No
3D	No	No	No	No	No	No	No	No	No	No	No	No	No	No	No	No	No
Active Signal	No	No	No	No	No	No	No	No	No	No	No	No	No	No	No	No	No
Vertical Resolution	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-
Horizontal Resolution	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-
Progressive / Interlaced	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-
Refresh Rate	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-
Video Mode	HDMI	HDMI	HDMI	HDMI	HDMI	HDMI	HDMI	HDMI	HDMI	HDMI	HDMI	HDMI	HDMI	HDMI	HDMI	HDMI	HDMI

		Input			
	1	7	8	9	10
Name	Input1	Input7	Input8	Input9	Input10
Color Depth	-	-	-	-	-
Color Space	-	-	-	-	-
HDCP	No	No	No	No	No
3D	No	No	No	No	No
Active Signal	No	No	No	No	No
Vertical Resolution	-	-	-	-	-
Horizontal Resolution	-	-	-	-	-
Progressive / Interlaced	-	-	-	-	-
Refresh Rate	-	-	-	-	-
Video Mode	HDMI	HDMI	HDMI	HDMI	HDMI

Input

Displays the state of each input for each of the following: Input name, Color Depth, Color Space, HDCP, 3D, Active Signal, Vertical Resolution, Horizontal Resolution, Progressive / Interlaced, and Refresh Rate.

Main ► Display Info

Choose EDID Default EDID ▼

Gefen PRO 16x16 Modular Matrix for HDMI

Menu I/O Setup Manage EDID Configuration Power (Standby) Log Out

Routing I/O Status **Display Info**

Choose EDID (Default) ▼

Feature	
24Hz Frame Rate	TRUE
Max Resolution	1080P@60Hz
Max Color Depth	12 bit
3D Capable	FALSE
Mode (DVI/HDMI)	HDMI
Max Audio Channels	2 Ch
Monitor Name	HDMI-DA
Audio Formats	
LPCM	TRUE
DTS-HD	FALSE
DTS Digital Surround	FALSE
Dolby Digital (AC3)	FALSE
Dolby TrueHD	FALSE

Choose EDID

Select the EDID from the drop-down list. The selected EDID will be copied from the selected EDID Bank or Output to the desired input(s) and used by the source.

Options:

Default EDID, Bank 1 ... Bank 8, Output 1 ... Output 16, 17-Local

Feature / Audio Formats

Displays the capabilities of the display (or sink device), based on the EDID.

I/O Setup ► Preset Names

The screenshot shows the 'Edit Preset Names' dialog box in the Gefen PRO web interface. The dialog box contains a table with 8 rows, each representing a preset. The columns are 'Preset #' and 'Name'. The names are 'Preset1' through 'Preset8'. Below the table are 'Save Changes' and 'Cancel' buttons. The background shows the main interface with a 'Preset Names' tab selected.

Preset #	Name
1	Preset1
2	Preset2
3	Preset3
4	Preset4
5	Preset5
6	Preset6
7	Preset7
8	Preset8

Name

Type the desired name of the Preset in this field.

Click the **Save Changes** button to save the Name.

Click the **Cancel** button to cancel any changes and restore the previous name.

Save Changes

Saves the current changes.

Cancel

Restores the previous names for each Preset, if a change was made.

I/O Setup ► I/O Names

16x16 Modular Matrix for HDMI

Home > I/O Setup > Manage EDO > Configuration

Present Names | **I/O Names** | HPO Control | FST | HDCP

Edit Output & Input Names

Output	Name	Input #	Name
1	Output1	1	Input1
2	Output2	2	Input2
3	Output3	3	Input3
4	Output4	4	Input4
5	Output5	5	Input5
6	Output6	6	Input6
7	Output7	7	Input7
8	Output8	8	Input8
9	Output9	9	Input9
10	Output10	10	Input10
11	Output11	11	Input11
12	Output12	12	Input12
13	Output13	13	Input13
14	Output14	14	Input14
15	Output15	15	Input15
16	Output16	16	Input16
17-Local	Output17		

Save Changes **Cancel**

Name

Type the desired name of each Output or Input in these fields.

Save Changes

Click this button to save the Input / Output name.

Cancel

Click this button to cancel the name change(s).

I/O Setup ► HPD Control

The screenshot displays the 'HPD Control' configuration page in the Gefen PRO web interface. The page is titled '16x16 Modular Matrix for HDMI'. The main content area is a table with the following structure:

HPD Control		
Input #	Name	
1	Input1	Pulse
2	Input2	Pulse
3	Input3	Pulse
4	Input4	Pulse
11	Input11	Pulse
12	Input12	Pulse
13	Input13	Pulse
14	Input14	Pulse
15	Input15	Pulse
16	Input16	Pulse

Pulse

Click the Pulse button to cycle the HPD line on the desired input. This is the equivalent of physically disconnecting and reconnecting the HDMI cable between the source device and the matrix.

I/O Setup ► FST

The screenshot shows the 'Fast Switching Technology' configuration window in the Gefen PRO web interface. The window is titled 'Fast Switching Technology' and contains a table with columns 'FST', 'Input #', and 'Name'. The 'FST' column has radio buttons for 'Fast' (selected) and 'Slow'. The 'Input #' column lists inputs 1 through 16. The 'Name' column lists Input1 through Input16. Below the table are 'Set' and 'Cancel' buttons.

Fast Switching Technology		
FST	Input #	Name
<input checked="" type="radio"/> Fast <input type="radio"/> Slow	1	Input1
<input checked="" type="radio"/> Fast <input type="radio"/> Slow	2	Input2
<input checked="" type="radio"/> Fast <input type="radio"/> Slow	3	Input3
<input checked="" type="radio"/> Fast <input type="radio"/> Slow	4	Input4
<input checked="" type="radio"/> Fast <input type="radio"/> Slow	5	Input5
<input checked="" type="radio"/> Fast <input type="radio"/> Slow	6	Input6
<input checked="" type="radio"/> Fast <input type="radio"/> Slow	13	Input13
<input checked="" type="radio"/> Fast <input type="radio"/> Slow	14	Input14
<input checked="" type="radio"/> Fast <input type="radio"/> Slow	15	Input15
<input checked="" type="radio"/> Fast <input type="radio"/> Slow	16	Input16

Set Cancel

FST

Click to select / deselect the desired input(s). Inputs with a check mark will enable the FST feature. FST is enabled by default. Use the **Set** button to save changes.

Check All

Places a check mark in each box under the FST column.

Clear All

Clears all check marks from the FST column.

Set

Click this button to save changes for all input(s). The Web GUI will display a prompt to verify the selected operation.

Cancel

Cancel the current operation and ignores changes for each input, if a change was made.

I/O Setup ► HDCP



NOTE: Some computers will enable HDCP if an HDCP-compliant display is detected. Use the Disable feature to force the computer to ignore detection of an HDCP-compliant display. The Disable feature does not decrypt HDCP content.

HDCP Pass Through		
Disable	Input #	Name
<input type="checkbox"/>	1	Input1
<input type="checkbox"/>	2	Input2
<input type="checkbox"/>	3	Input3
<input type="checkbox"/>	15	Input15
<input type="checkbox"/>	16	Input16

Buttons: Check All, Set, Cancel, Clear All

Disable

Click to select / deselect the desired input(s). Inputs with a check mark will *disable* the HDCP feature. Use the **Set** button to save changes.

Check All

Places a check mark in each box under the Disable column.

Clear All

Clears all check marks from the Disable column.

Set

Click this button to save changes for all input(s). The Web GUI will display a prompt to verify the selected operation.

Cancel

Cancels the current operation and ignores changes for each input, if a change was made.

Manage EDID ▶ Assign

Lock EDID

Secures the Local EDID and disables automatic EDID loading during power-up.

If the **Lock EDID** button is clicked (enabled), the “EDID locked on power cycle” message will be displayed in red. The local EDID information will now be locked once the matrix is rebooted. Click the **Unlock EDID** button to disable the Lock EDID feature.

The screenshot shows the 'Manage EDID' section of the GefenPRO web interface. At the top, there are two buttons: 'Lock EDID' and 'Unlock EDID'. A red banner below these buttons displays the message 'EDID locked on power cycle.' Below the banner, the 'Copy EDID From' dropdown menu is highlighted, showing 'Default EDID' selected. The main content area displays two tables: 'Inputs' and 'Outputs'.

Copy To	EDID Name	Input #	Bank	EDID Source	EDID Name
01	Custom	1	Input1	Output1	Parameter.P01
02	Custom	2	Input2	Output1	Parameter.P01
03	Custom	3	Input3	Output1	Parameter.P01
04	Custom	4	Input4	Output1	Parameter.P01
05	Custom	5	Input5	Output1	Parameter.P01
06	Custom	6	Input6	Output1	Parameter.P01
07	Custom	7	Input7	Output1	Parameter.P01
08	Custom	8	Input8	Output1	Parameter.P01
09	Custom	9	Input9	Output1	Parameter.P01
10	Custom	10	Input10	Output1	Parameter.P01
11	Custom	11	Input11	Output1	Parameter.P01
12	Custom	12	Input12	Output1	Parameter.P01
13	Custom	13	Input13	Output1	Parameter.P01
14	Custom	14	Input14	Output1	Parameter.P01
15	Custom	15	Input15	Output1	Parameter.P01
16	Custom	16	Input16	Output1	Parameter.P01

Copy To	Input #	Bank	EDID Name
01	1	Bank1	NA
02	2	Bank2	NA
03	3	Bank3	NA
04	4	Bank4	NA
05	5	Bank5	NA
06	6	Bank6	NA
07	7	Bank7	NA
08	8	Bank8	NA

At the bottom of the interface, the 'Copy EDID From' dropdown menu is highlighted, showing 'Default EDID' selected.

Copy EDID From

Select the EDID from the drop-down list. The EDID will be copied from the selected destination to the desired input or EDID bank.

Options:

Default EDID, Bank 1 ... Bank 8, Output 1 ... Output 16, Output 17 (Local)

Inputs					
Copy To	EDID Modes	Input #	Name	EDID Source	EDID Name
<input type="checkbox"/>	Custom ▾	1	Input1	Output1	
<input type="checkbox"/>	Custom ▾	2	Input2	Output1	
<input type="checkbox"/>	Custom ▾	3	Input3	Output1	
<input type="checkbox"/>	Custom ▾	4	Input4	Output1	
<input type="checkbox"/>	Custom ▾	5	Input5	Output1	
<input type="checkbox"/>	Custom ▾	6	Input6	Output1	
<input type="checkbox"/>	Custom ▾	7	Input7	Output1	

Copy EDID From: [Select All] [Clear All]

Copy EDID To: Please select from the input/outputs below.

Copy To	EDID Modes	Input #	Name	EDID Source	EDID Name
<input type="checkbox"/>	Custom ▾	1	Input1	Output1	Personal F01
<input type="checkbox"/>	Dynamic ▾	2	Input2	Output1	Personal F01
<input type="checkbox"/>	Custom ▾	3	Input3	Output1	Personal F01
<input type="checkbox"/>	Dynamic ▾	4	Input4	Output1	Personal F01
<input type="checkbox"/>	Custom ▾	5	Input5	Output1	Personal F01
<input type="checkbox"/>	Dynamic ▾	6	Input6	Output1	Personal F01
<input type="checkbox"/>	Custom ▾	7	Input7	Output1	Personal F01
<input type="checkbox"/>	Dynamic ▾	8	Input8	Output1	Personal F01
<input type="checkbox"/>	Custom ▾	9	Input9	Output1	Personal F01
<input type="checkbox"/>	Dynamic ▾	10	Input10	Output1	Personal F01
<input type="checkbox"/>	Custom ▾	11	Input11	Output1	Personal F01
<input type="checkbox"/>	Dynamic ▾	12	Input12	Output1	Personal F01
<input type="checkbox"/>	Custom ▾	13	Input13	Output1	Personal F01
<input type="checkbox"/>	Dynamic ▾	14	Input14	Output1	Personal F01
<input type="checkbox"/>	Custom ▾	15	Input15	Output1	Personal F01
<input type="checkbox"/>	Dynamic ▾	16	Input16	Output1	Personal F01
<input type="checkbox"/>	Custom ▾	17	Input17	Output1	Personal F01

[Check All] [Clear All]

Copy To	Input #	Name	EDID Name
<input type="checkbox"/>	1	Input1	Personal F01
<input type="checkbox"/>	2	Input2	Personal F01
<input type="checkbox"/>	3	Input3	Personal F01
<input type="checkbox"/>	4	Input4	Personal F01
<input type="checkbox"/>	5	Input5	Personal F01
<input type="checkbox"/>	6	Input6	Personal F01
<input type="checkbox"/>	7	Input7	Personal F01
<input type="checkbox"/>	8	Input8	Personal F01
<input type="checkbox"/>	9	Input9	Personal F01
<input type="checkbox"/>	10	Input10	Personal F01
<input type="checkbox"/>	11	Input11	Personal F01
<input type="checkbox"/>	12	Input12	Personal F01
<input type="checkbox"/>	13	Input13	Personal F01
<input type="checkbox"/>	14	Input14	Personal F01
<input type="checkbox"/>	15	Input15	Personal F01
<input type="checkbox"/>	16	Input16	Personal F01
<input type="checkbox"/>	17	Input17	Personal F01

[Check All] [Clear All] [Empty] [Export]

Copy To

Click to select or deselect the desired input(s).

EDID Modes

If the EDID Mode is set to *Last Output*, then the EDID source will be set to Dynamic EDID. See the `#set_edid` command for details on using Dynamic EDID.

If the EDID Mode is set to *Custom*, then the EDID of the display that is connected to Output 1 will be used.

Options:


Custom, Last Output

Check All

Places a check mark in each box under the **Copy To** column.

Clear All

Clears all check marks from the **Copy To** column.

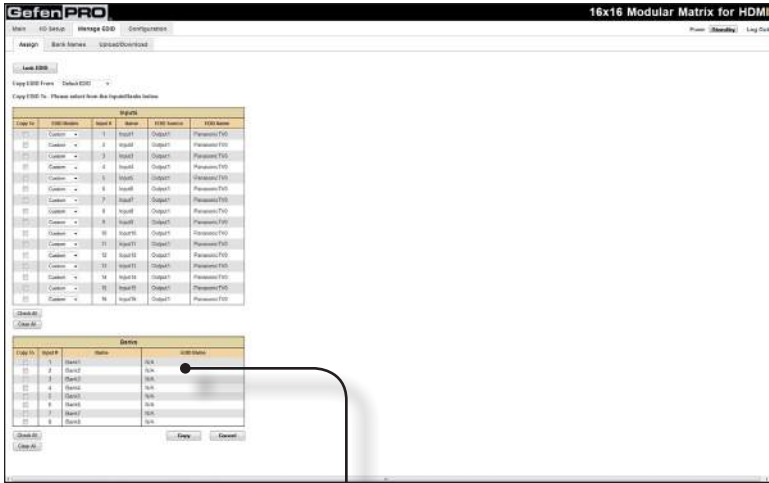

<input type="checkbox"/>	1	Bank1	N/A
<input type="checkbox"/>	2	Bank2	N/A
<input type="checkbox"/>	3	Bank3	N/A
<input type="checkbox"/>	4	Bank4	N/A
<input type="checkbox"/>	5	Bank5	N/A
<input type="checkbox"/>	6	Bank6	N/A
<input type="checkbox"/>	7	Bank7	N/A
<input type="checkbox"/>	8	Bank8	N/A

Check All

Places a check mark in each box under the **Copy To** column.

Clear All

Clears all check marks from the **Copy To** column.

Copy

Click this button to copy the specified EDID to the selected inputs / banks.

Cancel

Restores the previous EDID state for each input, if a change was made.

Manage EDID ► Bank Names

The screenshot displays the 'Gefen PRO' web interface for a '16x16 Modular Matrix for HDMI'. The 'Manage EDID' section is active, showing a list of EDID banks. A modal dialog box titled 'Edit Banks Names' is open, containing a table with two columns: 'Bank #' and 'Name'. The table lists banks 1 through 8, each with a corresponding text input field. Below the table are two buttons: 'Save Changes' and 'Cancel'.

Bank #	Name
1	Bank1
2	Bank2
3	Bank3
4	Bank4
5	Bank5
6	Bank6
7	Bank7
8	Bank8

Bank

Indicates the EDID bank number.

Name

Type the desired name of the EDID bank in this field.
Click the **Save Changes** button to save the bank name.
Click the **Cancel** button to restore the previous name.

Save Changes

Saves the current name change to the EDID bank(s).

Cancel

Restores the previous names for each EDID bank, if a change was made.

Manage EDID ► Upload/Download

Browse...

Click this button to select the EDID file to be uploaded.

Select Bank Location


Click this drop-down list to select the bank to where the EDID will be uploaded.

Upload

Click this button to upload the EDID to the specified bank.

Options:

Bank 1 ... Bank 8

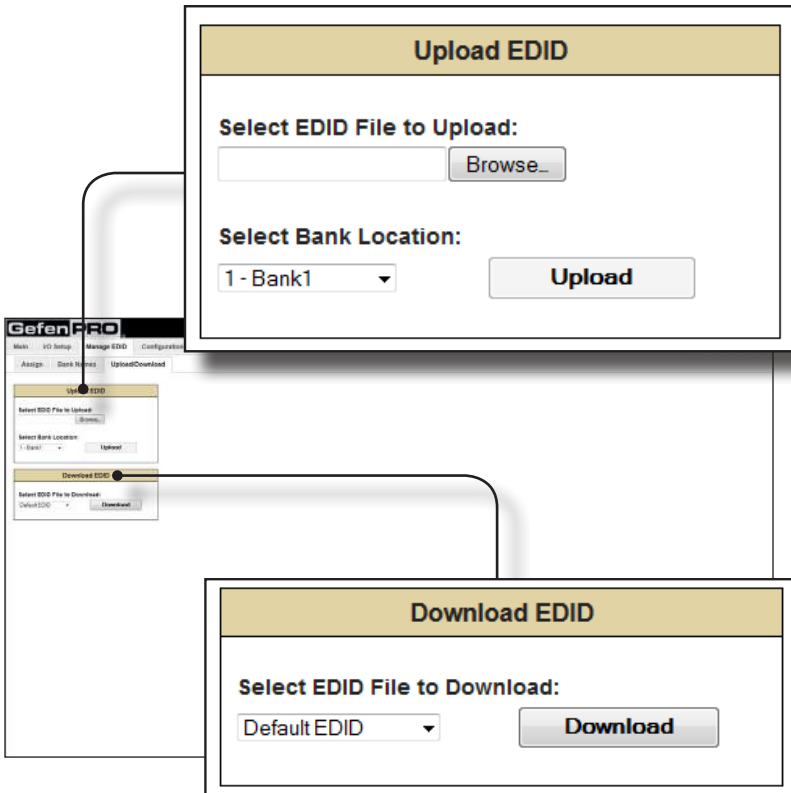

Select EDID File to Download

Click this box to select the EDID that is to be saved to a file. The EDID file will be saved in binary (.bin) format.

Download

Click this button to download the selected EDID to a file.

Options:

Bank 1 ... Bank 8, Output 1 ... Output 16, Output 17 (Local),
Input 1 ... Input 16

Configuration ► Change IP Settings

The screenshot shows the 'Change IP Settings' dialog box with the following fields and values:

Field	Value
MAC Address:	00:1c:91:03:70:1c
IP Address:	192.168.2.239
Subnet:	255.255.255.0
Gateway:	192.168.1.1
Port:	80
TCP/Telnet Terminal Port:	23
UDP Port:	50007

Buttons: Save Settings, Set Defaults

Change IP Settings

Assigns the IP address, subnet, gateway, HTTP listening port, Telnet port, and UDP port. The MAC address cannot be changed.

Save Settings

Saves the current settings for the Change IP Settings. After clicking this button, the Web interface will display a dialog indicating that the matrix must be rebooted for changes to take effect.

Set Defaults

Click this button to restore the factory-default IP settings. After clicking this button, the Web interface will display a dialog indicating that the matrix must be rebooted for changes to take effect.

Configuration ► Telnet Login Settings

The screenshot shows the 'Gefen PRO' web interface for a '16x16 Modular Matrix for HDMI'. The 'Configuration' tab is active, and the 'Telnet Login Settings' section is highlighted. The settings are as follows:

Change IP Settings	
MAC Address	08-10-91-83-F5-14
IP Address	192.168.2.208
Subnet	255.255.255.0
Gateway	192.168.1.1
Port	80
HTTP/HTTPS Terminal Port	80
UDP Port	8000

Telnet Login Settings	
Old Password	<input type="password"/>
New Password	<input type="password"/>
Confirm New Password	<input type="password"/>
Force Password on Connect	<input checked="" type="checkbox"/>
Show Login Message on Connect	<input checked="" type="checkbox"/>

UDP Connection Settings	
Source UDP IP Address	192.168.2.208
Source UDP Port	8000
Enable UDP Access	<input type="checkbox"/>

Telnet Login Settings

Old Password:

New Password:

Confirm New Password:

Force Password on Connect:

Show Login Message on Connect:

Old Password

Type the current (old) password in this field.

New Password

Type the new password in this field.

Force Password on Connect

Click this check box to have the matrix prompt for a password each time a Telnet session is started. This box *must* be checked in order to change the Telnet Login credentials.

Show Login Message on Connect

Click this check box to have the matrix display the Telnet welcome message each time a Telnet session is started. The welcome message appears as: "Welcome to GEF-HDFST-MOD-16416 TELNET".

Save Settings

Saves the current changes to the Telnet Login Settings.

Configuration ► UDP Connection Settings

The screenshot shows the 'UDP Connection Settings' configuration page in the GefenPRO web interface. The page is titled '16x16 Modular Matrix for HDMI' and includes navigation tabs for 'Main', 'IQ Setup', 'Manage EDD', and 'Configuration'. The 'UDP Connection Settings' section is highlighted with a callout box. The callout box contains the following fields:

- Remote UDP IP Address:** 192.168.1.255
- Remote UDP Port:** 50008
- Enable UDP Access:**

A **Save Settings** button is located at the bottom right of the callout box.

Remote UDP IP Address

Type the remote UDP IP address in this text box.

Remote UDP Port

Enter the remote UDP port in this text box.

Enable UDP Access

Check this box to enable UDP access. If this box is unchecked, the UDP access will be unavailable.

Configuration ► Web Login Settings

Web Login Settings

Username: Operator ▾

Old Password: ●●●●●

New Password:

Confirm New Password:

Web Login Settings

Old Password:

New Password:

Confirm New Password:

Force Password on Connect:

Show Login Message on Connect:

UDP Connection Settings

Reverse UDP IP Address: 192.168.1.246

Reverse UDP Port: 5000

Enable UDP Access:

Web Login Settings

Username: Operator ▾

Old Password: ●●●●●

New Password:

Confirm New Password:

System Configuration

Download Current Configuration:

Restore Configuration:

Minimize All Current Settings will be lost:

Firmware Update (3.0 ver: v1.0X):

Factory Reset:

Reboot:

Username

Click this drop-down list to select the username to be changed.

Old Password

Type the current (old) password in this field.

New Password

Type the new password in this field.

Confirm Password

Re-type the new password in this field.

Save Settings

Saves the current changes to the Web Login Settings.

Configuration ► System Configuration

System Configuration

Download Current Configuration

Restore Configuration

Warning: All current settings will be lost

Firmware Update (UI ver: v1.0X)

Factory Reset

Reboot

Server Login Settings

Old Password:

New Password:

Confirm New Password:

Force Password on Connect:

Make Login Message on Connect:

UDP Connection Settings

Remote UDP IP Address: 192.168.1.255

Remote UDP Port: 5050

Enable UDP Access:

Web Login Settings

Username: Operator

Old Password:

New Password:

Confirm New Password:

System Configuration

Download Current Configuration:

Restore Configuration:

Warning: All current settings will be lost:

Firmware Update (UI ver: v1.0X):

Factory Reset:

Reboot:

Download

Click this button to download the current matrix configuration to a file.

(continued on next page)

System Configuration

Download Current Configuration	<input type="button" value="Download"/>
Restore Configuration	
<input type="text"/> <input type="button" value="Browse_"/>	
<i>Warning: All current settings will be lost</i>	<input type="button" value="Restore"/>
Firmware Update (UI ver: v1.0X)	
<input type="text"/> <input type="button" value="Browse_"/>	<input type="button" value="Update"/>
Factory Reset	<input type="button" value="Reset"/>
Reboot	<input type="button" value="Reboot"/>

Browse

Click this button to select the firmware file to be uploaded. See [Upgrading using the Web interface](#) for details on updating the firmware.

Browse

Click this button to select the saved configuration file to be loaded into memory.

Restore

Uploads the selected configuration file to the matrix.

Update

Updates the matrix with the selected firmware file.

Reset

Click this button to set the matrix to factory-default settings. The IP settings are preserved.

Reboot

Click this button to reboot the matrix.

16_x16
sources displays

**Modular Matrix for
HDMI with HDCP**

04 Appendix

Card Removal and Installation

Although each 16x16 Modular Matrix for HDMI w/ HDCP is sold pre-configured, both input and output cards can be removed or added to fit the needs of the application. Each module can easily be removed and installed without using any special tools.



WARNING: Modules are sensitive to Electrostatic Discharge (ESD) which can damage the module. Avoid touching the module contacts or the components on the module. Always hold modules by the edges or by the knobs on the front of the module. Never slide a module over any surface. When installing/replacing modules, do not install an input module in to an output slot or an output module to an input slot. This will damage the matrix and void the warranty.

1. Power-off the matrix.
2. Turn the matrix around so that you are facing the back of the unit.



STOP: Before installing modules and prevent the risk of possible electrical shock, unplug the AC power cord from back of the matrix.


3. Loosen the fastening screws on both sides of the card (or cover plate) to be removed. Each card / cover plate has two fastening screws.



- Grab the fastening screws on both sides of the card, between the thumb and index finger, and gently pull to remove the card from the matrix. If a cover plate is being removed, then loosen the fastening screws on both sides of the cover plate and gently remove the cover plate.



- Locate the grooved track on either side of the expansion bay.

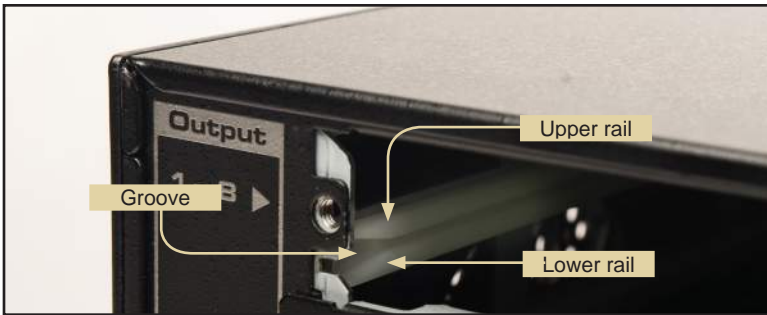

- Carefully position the card between the upper and lower rail on each track.



7. Use both hands to push the card until it snaps in place.



8. Secure the card by hand-tightening the fastening screws. Do not overtighten the screws. To prevent damage to the screws, do not use pliers or other high-torque devices.




Power Supply Failure and Replacement

Power Supply Failure

The 16x16 Modular Matrix for HDMI w/ HDCP comes with two internal (hot-swappable) power supplies. If one of these power supplies should fail, a high-pitched alarm will sound from the matrix. `POWER SUPPLY FAILURE!` will appear in the front panel display. The matrix can function with a single power supply. However, the `POWER SUPPLY FAILURE!` message will be displayed instead of the *home screen*, until the power supply is replaced.

If the Web interface is being used, then the following message will appear on the page:

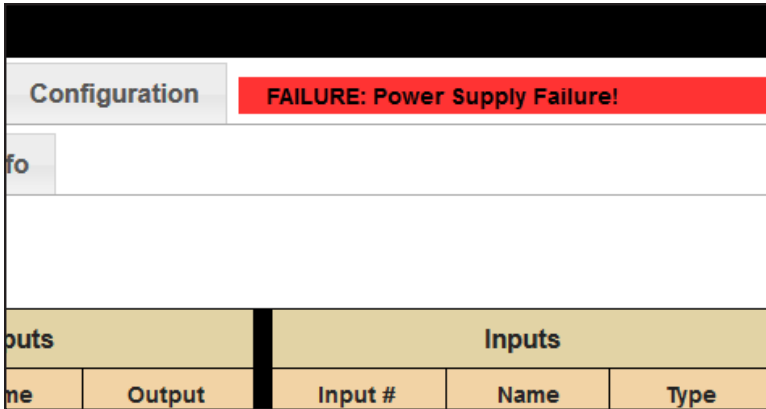

If the matrix is being controlled using RS-232 or Telnet, the `POWER SUPPLY FAILURE!` message will appear within the terminal application.


Power

Press the Power button to cancel the alarm.




Power Supply Replacement

1. Press the **Power** button to cancel the alarm. It is not necessary to power-off the matrix when replacing a power supply.
2. Locate the release mechanism on the power supply to be removed (the Gefen 32x32 Matrix for HDMI w/ HDCP is shown).

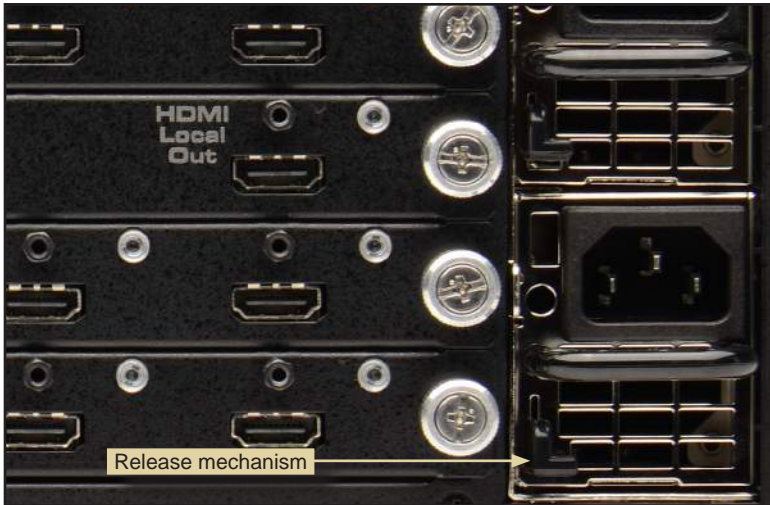


3. Grab the power supply handle and release mechanism between the thumb and index finger and squeeze. The release mechanism will move in an upward direction.

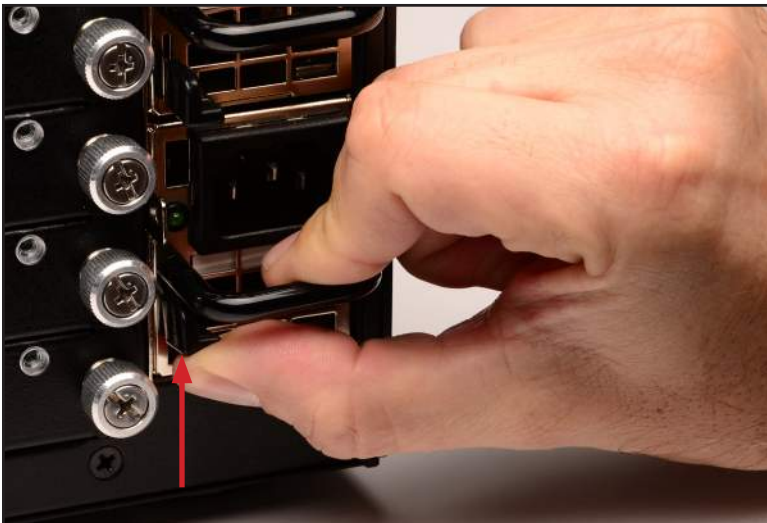

4. Gently pull the power supply as you continue to hold the release mechanism. Once the power supply is released, pull the handle to remove the power supply.



5. Gently push the new power supply into place. The power supply will snap into place once it is fully installed.
6. Check that power supply is secured by pulling on the handle. The power supply should not move without using the release mechanism.

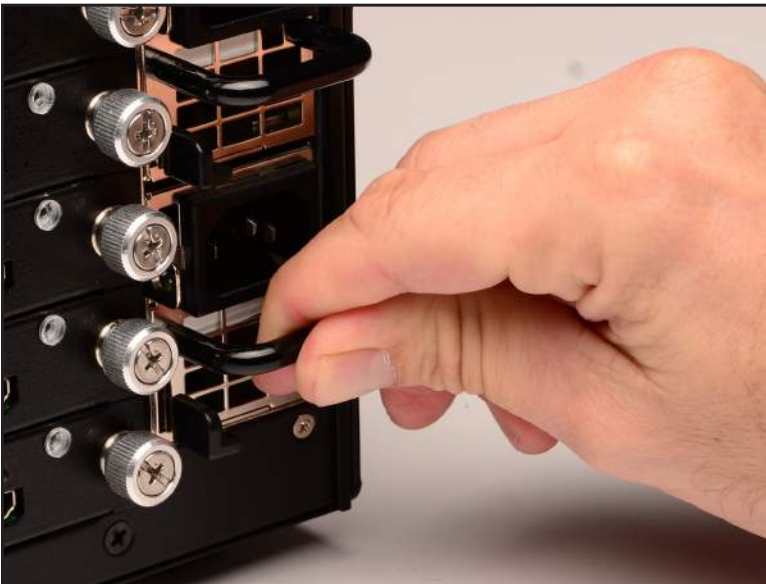

Firmware Upgrade Procedure

Upgrading using the Web interface



IMPORTANT: *DO NOT* power-off or disconnect the AC power cord from the matrix, at any time, during the firmware upgrade process.

1. Download the firmware update from the Support section of the Gefen Web site.
2. Extract the firmware file from the .ZIP file.
3. Power-ON the 16x16 Modular Matrix for HDMI w/ HDCP.
4. Connect an Ethernet cable between the matrix and the computer running the Web interface.

It is unnecessary to disconnect any cables or extenders from the 16x16 Modular Matrix for HDMI w/ HDCP during the update process.

5. Click the **Configuration** tab in the Web interface and click the **Browse...** button under the **System Configuration** section.
6. Select the firmware file and click the **Update** button.
7. The matrix will display a prompt to verify that the current firmware will be overwritten. Click the **OK** button on the dialog box to begin uploading the firmware file.
8. Once the firmware file has been uploaded, the matrix will verify the firmware content. The front-panel display will display the following if the firmware passes:

```
CONTENT CHECK:  
PASS
```

9. After the firmware file integrity has been verified, the matrix will begin the upgrade procedure. The upgrade progress will be displayed in the front-panel display.

```
-F/W UPDATE-  
35%
```

10. After the matrix has been updated, the unit will automatically initiate a countdown to reboot. The Power button can be pressed to bypass the countdown without harming the upgrade process. The display will display the following message:

```
FINISHED  
REBOOT IN 52 SEC
```

11. After the matrix reboots, the firmware upgrade process will be complete.

Upgrading using USB



IMPORTANT: *DO NOT* power-off or disconnect the AC power cord from the matrix, at any time, during the firmware upgrade process.

1. Download the firmware update from the Support section of the Gefen Web site.
2. Power-ON the 16x16 Modular Matrix for HDMI w/ HDCP.
3. Connect a USB cable between the computer and the 16x16 Modular Matrix for HDMI w/ HDCP.

It is unnecessary to disconnect any cables or extenders from the 16x16 Modular Matrix for HDMI w/ HDCP during the update process.

4. Once the computer is able to connect to the 16x16 Modular Matrix for HDMI w/ HDCP, a Removable disk icon will be displayed under My Computer.
5. Extract the firmware file from the .ZIP file and drag the .bin file to the Removable Disk.
6. Disconnect the USB cable from the computer.
7. The matrix will verify the firmware content. The front-panel display will show the following if the firmware passes.

```
CONTENT CHECK:  
PASS
```

8. After the firmware file integrity has been verified, the matrix will begin the upgrade procedure. The upgrade progress will be displayed in the front-panel display.

```
-F/W UPDATE-  
35%
```

9. After the matrix has been updated, the unit will automatically initiate a countdown to reboot. The **Power** button can be pressed to bypass the countdown without harming the upgrade process.

```
FINISHED  
REBOOT IN 52 SEC
```

10. After the matrix reboots, the firmware upgrade process will be complete.

Specifications

Supported Formats	
Resolutions (max.)	<ul style="list-style-type: none"> 1080p Full HD
Electrical	
Maximum Pixel Clock	<ul style="list-style-type: none"> 225 MHz
Connectors	
Inputs (16 x max.) (Organized into 2 banks of 8 each)	<ul style="list-style-type: none"> HDMI Type-A, 19-pin, female
Outputs (16 x max.) (Organized into 2 banks of 8 each, depending upon the type of input card used)	<ul style="list-style-type: none"> HDMI Type-A, 19-pin, female ELR-POL, RJ-45
RS-232	<ul style="list-style-type: none"> 1 x DB-9, female
Ethernet	<ul style="list-style-type: none"> RJ-45 (100BaseT)
USB (for firmware update only)	<ul style="list-style-type: none"> 1 x Mini-B, female
IR Sensor	<ul style="list-style-type: none"> 1 x Optical, front panel
IR Extender (Matrix)	<ul style="list-style-type: none"> 1 x 3.5mm mini-stereo
IR Extender (Receiver)	<ul style="list-style-type: none"> 1 x 3.5mm mini-stereo
IR In (Matrix)	<ul style="list-style-type: none"> 1 x 3.5mm mini-mono ELR card: 8 x 3.5mm mini-mono (per output)
IR Out (Matrix)	<ul style="list-style-type: none"> 1 x 3.5mm mini-mono ELR card: 8 x 3.5mm mini-mono (per output)
IR Out (Receiver)	<ul style="list-style-type: none"> 1 x 3.5mm mini-mono

Operational	
Power Input	<ul style="list-style-type: none">• 2 x 100 - 240V AC (hot-swappable)
Power Consumption	<ul style="list-style-type: none">• 500W (each power supply)

Physical	
Dimensions (W x H x D) (Matrix w/o feet)	<ul style="list-style-type: none">• 17.4" x 5.1" x 16.8" (440mm x 130mm x 427mm) (w/o feet)
Dimensions (W x H x D) (Receiver)	<ul style="list-style-type: none">• 4.3" x 1" x 3.3" (108mm x 26mm x 83mm)
Unit Weight	<ul style="list-style-type: none">• 30.6 lbs (13.9 kg)



Stretch it, Switch it, Split it, Control it.
Gefen's got it. ®

20600 Nordhoff St., Chatsworth CA 91311
1-800-545-6900 818-772-9100 fax: 818-772-9120
www.gefenpro.com support@gefenpro.com



This product uses UL or CE listed power supplies.